



Kit Contents

Description	Part No	Pcs
Cable ties 3,5x190		10
Cable ties with edge clip		6
Adhesive clip bracket		3
Cancellation component		4

Note!

Please note that there can be small differences between your product and the images in these instructions.

Cancellation Kit, Audi R8

35020-17

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

It is advisable to have an Öhlins dealer install the EDC Cancellation Kit.

⚠ Warning!


If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

Front axle:

Left vehicle side

1


Run the original shock absorber cable along the marked point and fix it on the chassis with the supplied adhesive clips (1) and edge clips (2). Insert the standard connector into the Cancellation component connector until it locks. Pay attention the a correct cable running.

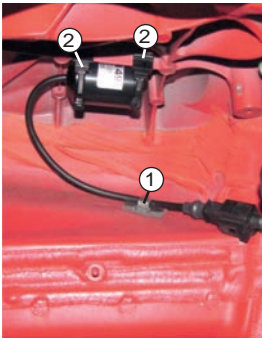

Right vehicle side

2

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties (3). Insert the standard connector into the Cancellation component connector until it locks. Pay attention the a correct cable running.

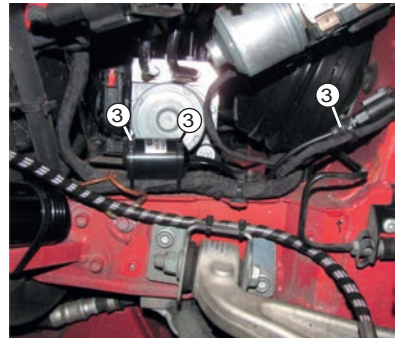

MOUNTING INSTRUCTIONS

Rear axle:

Right vehicle side

3

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties (1). Fix the Cancellation component with edge clips (2) on the chassis. Insert the standard connector into the Cancellation component connector until it locks. Pay attention the a correct cable running.



Left vehicle side

4

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties (1). Fix the Cancellation component with edge clips (2) on the chassis. Insert the standard connector into the Cancellation component connector until it locks. Pay attention the a correct cable running.

