

👁 Note!

Please note that there can be small differences between your product and the images in these instructions.

👁 Note!

Please note that during storage and transport, especially at high ambient temperature, some of the oil and grease used for assembly may leak and stain the packaging. This will not cause damage to the product, wipe off the excessive oil or grease with a cloth.

👁 Note!

Before you install this product, check the kit contents. If anything is missing, please contact an Öhlins dealer.

⚠ Warning!

Before you install this product, read the Öhlins Owner's manual. This product is an important part of the vehicle and the vehicle stability.

Cancellation kit Audi PQ35

35020-22

Mounting Instructions

MOUNTING INSTRUCTIONS

⚠ Warning!

We strongly recommend to let an Öhlins dealer install this product.

⚠ Warning!

If you work with a lifted vehicle, make sure that it is safely supported to prevent it from tipping over.

Front axle


Right vehicle side

1

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties.

Mount the front axle electronic kit with the supplied edge clips and cable ties on the chassis edge.

Assembly area front axle electronic kit.

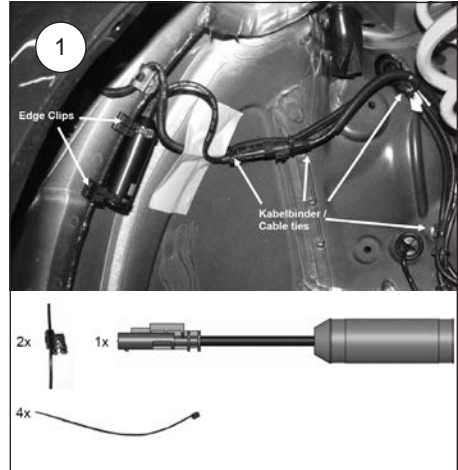

MOUNTING INSTRUCTIONS

Front axle


Left vehicle side

2

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties.

Mount the front axle electronic kit with the supplied edge clips and cable ties on the chassis edge.

Assembly area front axle electronic kit.

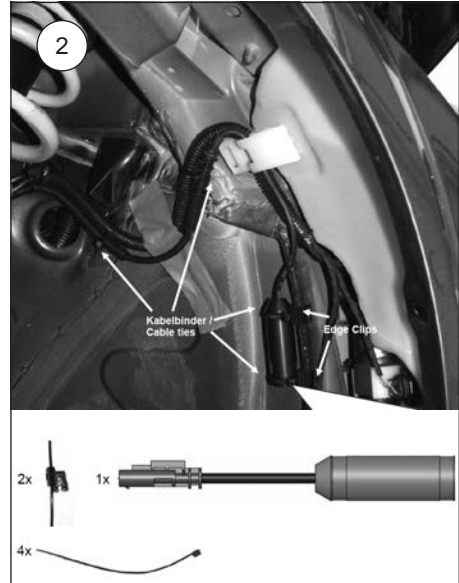

MOUNTING INSTRUCTIONS

Rear axle


Left vehicle side

1

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties.

Mount the rear axle electronic kit with the supplied edge clips and cable ties on the chassis.

Assembly area rear axle electronic kit.

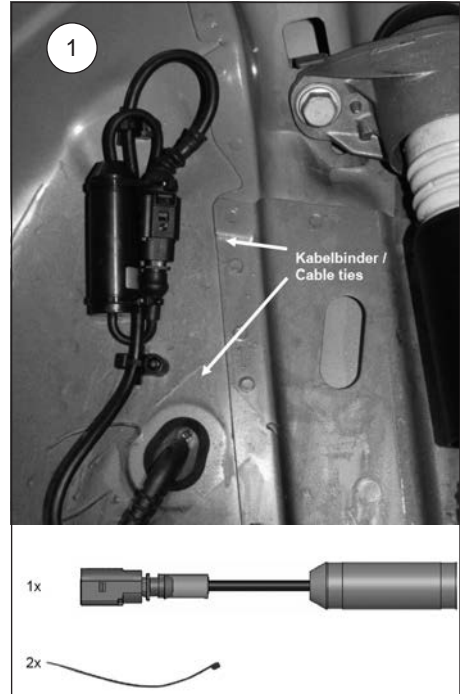

Rear axle

Right vehicle side

2

Run the original shock absorber cable along the marked point and fix it on the original wire harness with the supplied cable ties.

Mount the rear axle electronic kit with the supplied edge clips and cable ties on the chassis.

Assembly area rear axle electronic kit.

