



## AMERICAN RUNNER RUNNING BOARD

### Part #: 128091 VEHICLE BRACKET CONFIGURATION (03/2009)


#### USE BRACKET# 1,2,3 FOR:

#### Chevy/GMC

03-09 Avalanche (w/o body cladding)

08-09 Silverado/Sierra Crew Cab

00-09 Suburban/Yukon XL/XL Denali 1500/2500

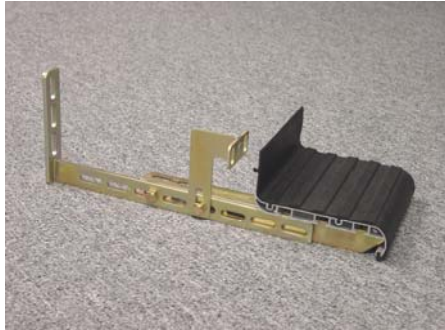

#### *\*Optional configuration using bracket#4.*


Using bracket#4, cut in half and mount on top to the existing hole of chassis. Attach bracket#5 vertically to bracket#4. Then attach bracket#2 to bracket#5 and extend to the main frame. Adjust to the desired position, mark and drill to main frame. Please check for clearance before drilling. See pictures below.

Repeat the procedure for the remaining brackets.

Pictures shown below are for driver side.



Pictures shown below are for passenger side with A/C lines.

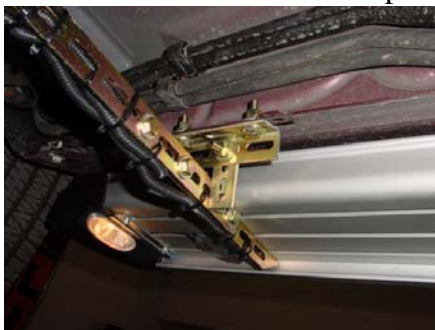

Tap blue and blk/red wires from the relay to the White and Orange wires on the courtesy light located on the driver side kick panel.

**Dodge**

98-03 Full Size Van (long wheel base w/ hinged door) *\*May require bracket#4 for extension.*



Driver side above w/ bracket#1,2,3,4.



Passenger side above w/ bracket#1,2,4,5.

---

**USE BRACKET# 1,2,5 FOR:**

**Cadillac**

02-08 Escalade ESV/EXT

**Nissan**

2007 Frontier Crew Cab (wheel-to-wheel)