



## AMERICAN RUNNER RUNNING BOARD

### Part #: 128100 VEHICLE BRACKET CONFIGURATION (03/2009)

#### USE BRACKET# 1,2,3,5 FOR:

##### Chevy/GMC

96-09 Express/Savana Full Size Van (Regular Wheel Base)



Use bracket #1,2,3 on driver and passenger front and mounted at an angle. See above.



Use bracket #1,2,3 for the remaining installation on driver side only. See above.



Use bracket #1,2,5(2) for the remaining installation on the passenger side only. See above.

---

#### USE BRACKET #1,2,5

##### Dodge

06-08 Ram Mega Cab

07-08 Ram Quad Cab SLT (wheel-to-wheel)


2009 Ram 1500 Quad Cab New Body Style (wheel-to-wheel)

2009 Ram 1500 Crew Cab New Body Style Short Bed (wheel-to-wheel)

03-08 Sprinter Wagon 140"/144" wheel base

##### Ford

92-09 Full Size Van

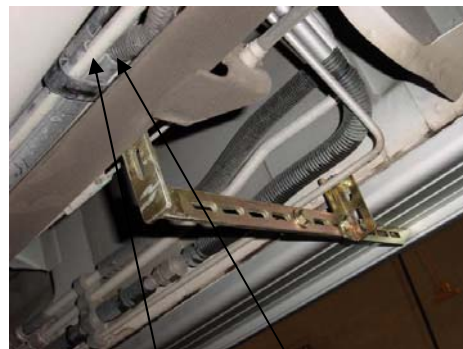

When installing bracket #2 to main frame, check for clearance of AC lines, brake lines etc. behind the main frame before drilling.