


**BOX BOARD INSTALLATION GUIDE PHOTOS**  
**NERF BOARD PART#S 328021 / 328037 / 328037D**  
**VOLCANO PART#S VOL021 / VOL035**

Inasmuch as there are so many possible ways of installing the Onki box boards on the various pick-up trucks in the market, Onki has selected a number of photos to serve as installation guide. As a general rule, an installer should try to locate and use existing holes both on the frame and body of the truck. In instances where there are no existing holes, we have included some photos showing you possible areas to drill appropriate holes in.

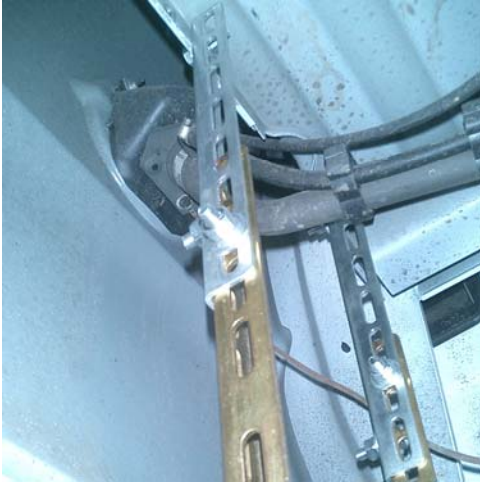





Please note that all Onki Box Board Sets come with a set of universal brackets with more than enough pieces to allow an installer to be as creative as necessary when doing the install.