

INSTALLATION INSTRUCTIONS


ONKI MODULAR AEGIS CENTER GUARD – PART # 462433A
00-02 GMC Sierra 2500/3500 HD
00-06 GMC Yukon XL ¾ Ton

Parts List *(Please check that you have all the parts listed below before you start installing)*

Quantity	Brush guard installation hardware
2	Mounting brackets
2	1 ½" x 2 ½" threaded washer plates
10	M12X40 (19mm hex head bolts)
6	M12 Nylon lock nuts (19mm socket nuts)
20	½" SAE washers

Installation of Mounting Frame Brackets & Aegis Guard

1. Identify the left and right brackets to be used (D for driver side / P for passenger side).
2. Remove outside tow hook bolt.

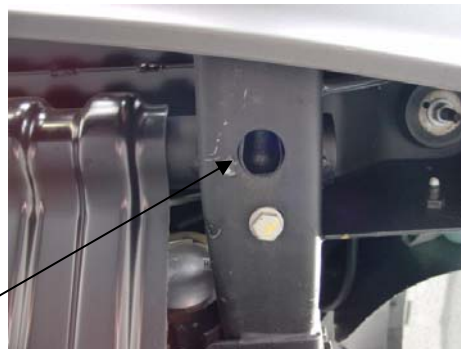

3. Insert the 1 ½" x 2 ½" mounting plate with the wire attached, enter from the front of the main frame (above tow hook) to the existing 1 ¼" hole on the bottom of the main frame.
4. Attach and align the bracket on the bottom of the main frame at the tow hook location, loosely reinstall removed tow hook and the supplied M12X40 hex bolt and washer thru the bracket on the side and the bottom of the tow hook.
5. Repeat step 2 thru 4 on the opposite side. Aegis Guard onto the installed brackets and securely tighten with the supplied M12X40 hex bolts, washers, and nuts.
6. Finally, make sure all nuts, bolts and brackets are tightened.