



**AR-S AMERICAN RUNNER STAINLESS RUNNING BOARD**  
**Part #: 128085S VEHICLE BRACKET CONFIGURATION (03/2009)**


**USE BRACKET#1,2,3 FOR:**

**Ford**

00-08 F-150 Super Crew 4Dr

**Lincoln**

02-08 Blackwood/Mark LT

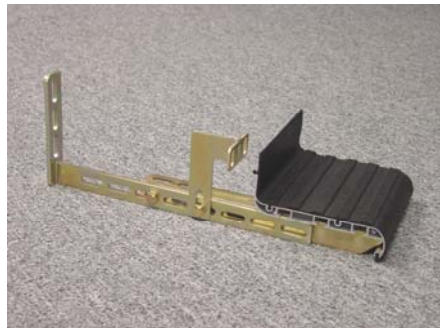

---

**USE BRACKETS#1,2,5 FOR:**

**Chevy/GMC**

04-06 Colorado/Canyon Crew Cab (w/o flares, wheel-to-wheel)

**Chrysler/Dodge/Plymouth**

2007 Caravan (low clearance)

94-07 Grand Caravan/Grand Voyager Long Wheel Base (low clearance)

2009 Ram 1500 Crew Cab (new body style)

98-07 Town and Country Long Wheel Base (low clearance)



Passenger side shown above. Note: Dome light wire colors are yellow(+) and black/blue(-) located at front dome light.

94-03 Voyager LWB (low clearance)

**Ford**

98-07 Windstar/Freestar SE/SES (low clearance)

**Honda**

98-09 Odyssey (low clearance) *\*Use bracket#4 for extension, may require trimming brackets.*



Wire location is behind radio bezel



Driver side shown above & next 2 photos.



Passenger side shown above & next 4 photos.



**Hyundai**

07-08 Entourage (low clearance)

**Kia**

2008 Sedona (low clearance)

**Mercury**

04-06 Monterey

**Nissan**

04-06 Armada (w/o mud flap)

**Oldsmobile**

98-05 Silhouette

**Toyota**

04-09 Sienna (low clearance)

00-06 Tacoma Double Cab (wheel-to-wheel)

95-06 Tacoma Ext Cab (w/o flares, wheel-to-wheel)

**Volkswagen**

99-04 Eurovan

