



AR-S AMERICAN RUNNER STAINLESS RUNNING BOARD
Part #: 128088S VEHICLE BRACKET CONFIGURATION (03/2009)

USE BRACKET# 1,2,3 FOR:

Buick

05-07 Terraza (low clearance)


Chevy/GMC

00-08 Silverado/Sierra 1500/2500/3500 Crew Cab 4 Dr

02-06 Trail Blazer EXT/Envoy XL/XUV (long wheel base)

Isuzu

05-06 Ascender 7-passenger

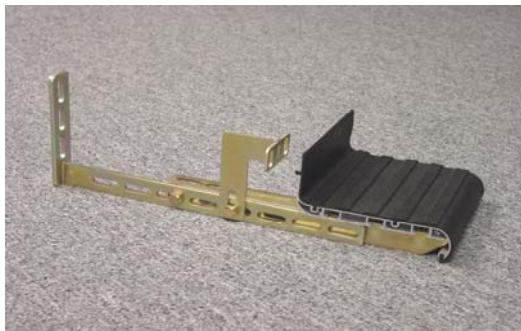



Driver side shown above.

USE BRACKET #1,2,4

Ford


99-08 F250/350 Super Duty Crew Cab/Dually

Pictures shown below are for F250 regular cab

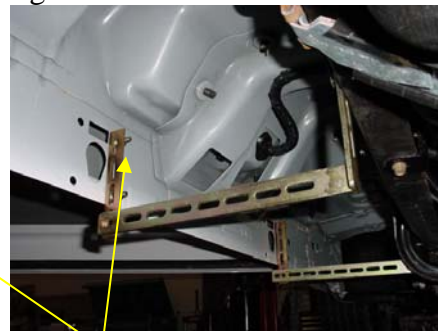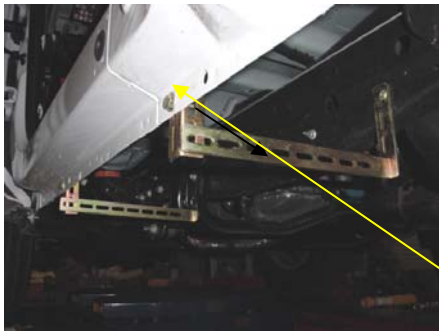

Bracket #4 is mounted to the existing factory holes shown here.

00-09 Ford Explorer Sport Trac 4Dr

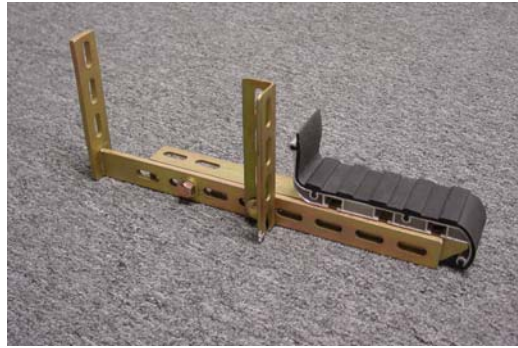

USE BRACKETS# 1,2,5 FOR:

Chevy/GM

00-05 Venture Long Wheel Base (low clearance)
73-95 Full Size Van (long wheel base)
05-08 Uplander (low clearance)

Chrysler/Dodge

08-09 Grand Caravan (low clearance)
08-09 Town & Country LWB (low clearance)

Ford

84-00 Aerostar
04-07 Freestar SES (low clearance/w/o mud flap)

Mercedes Benz

06-09 R Class (low clearance/may require extensive modification of brackets)

Nissan

03-09 Quest (low clearance)

Pontiac

05-06 Montana SV6 (low clearance)

Saturn

05-07 Relay (low clearance)



Configuration to mount on outside pinch weld.