



ORACLE LIGHTING

HIGH POWERED HEADLIGHTS

PART #5769

INSTALLATION GUIDE





Install new LED Headlight into factory housing on chassis.




Re-install OEM Trim Ring and the (4) T-15 Torx screws.

11 Repeat steps 3 to 10 on the Driver's side of the vehicle.

12 Connect T-Taps to Positive & Negative wires on the Parking Light Wiring Harness. (See Diagram Below)

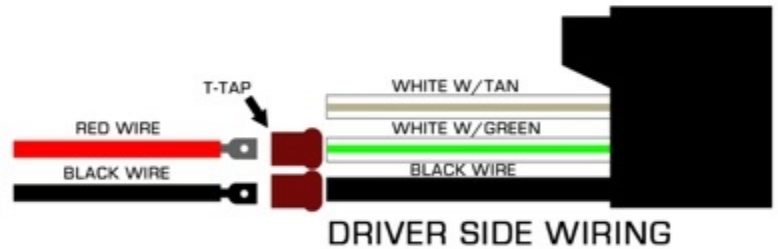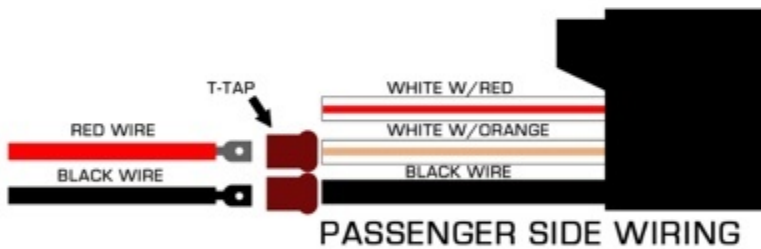

Re-install Parking Light Bulbs into grill, and re-install grill.

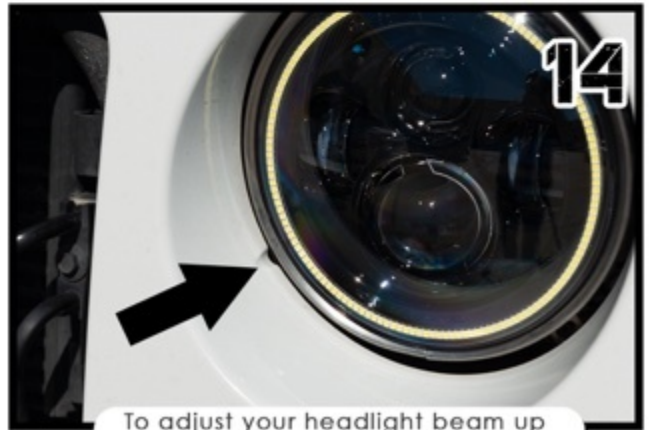

To adjust your headlight beam up or down, use T-15 Torx shown here.