
# **ORACLEMENTING**


## 2010-2014 FORD MUSTANG INSTALLATION INSTRUCTIONS



#### FRONT: Tools needed (1) 7mm Socket (1) Socket Wrench

- · First, make room by turning the wheel in the opposite direction.
- Locate the 7mm screws holding the fender coverings in place.
- Remove the two 7mm hex head screws.
- Now you can gently pull the bumper away from the fender.
- This should expose access to the front sidemarker.

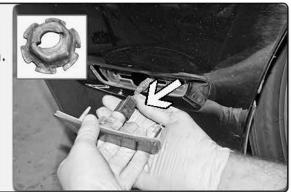

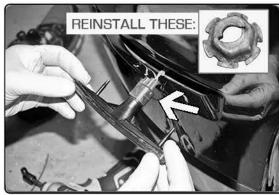

#### SIDEMARKER: Tools needed (1) 10mm Socket (1) Socket Wrench

- Loosen the two 10mm metal clips. This will release the marker.
- With the marker released, you can now unplug the harness.
- Now plug in the new ORACLE Concept LED Sidemarker.
- The sidemarker should snap right into place and fit flush.
- Reinstall the two 10mm metal clips.





### REAR: Tools needed (1) Phillips Screwdriver

- · Move to the rear of the vehicle.
- Locate the two bumper retainer screws in the rear well.
- Now you can gently pull the bumper away from the fender.
- This should expose access to the rear sidemarker.
- Repeat the same process used on the front sidemarker.
- Test by turning the headlight switch to parking light position.

