




## Lower Ball Joint Adapter Set

Application: 1996 and newer GM 4WD 1/2- and 3/4-ton Pickups, Suburbans, and Yukons / Tahoes

No. 222306  
Receiving Tube

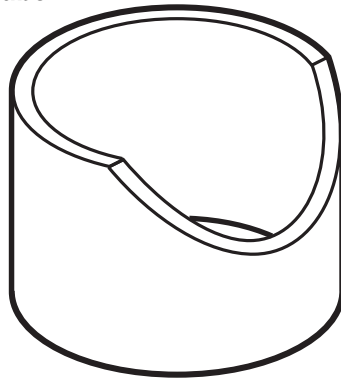

No. 222307  
Receiving Tube

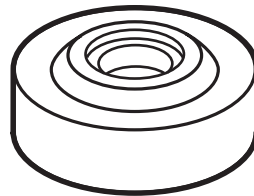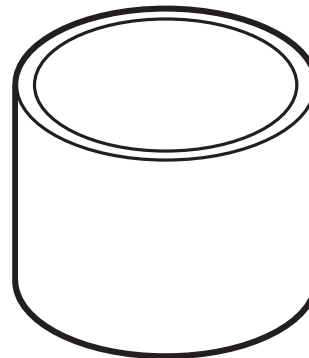

No. 204508A  
Receiving Cup

### Safety Precautions



Caution: To prevent personal injury when using these tools,



- Wear eye protection that meets the requirements of ANSI Z87.1 and OSHA.
- Before repairing a vehicle, block the wheels to prevent the vehicle from moving.




- Check the final alignment of tooling and components before using a C-frame press to exert pressure.




Shaded areas reflect  
the last revisions  
made to this form.

## Operating Instructions

1. Position the tools as shown to remove or install the upper or lower ball joint. **Note for Installation:** Clean the control arm or knuckle, and coat the I.D. with a suitable lubricant.
2. Tighten the forcing screw until it meets the cup, and check the alignment of all tooling and components. Continue tightening the forcing screw until the ball joint is removed or installed.

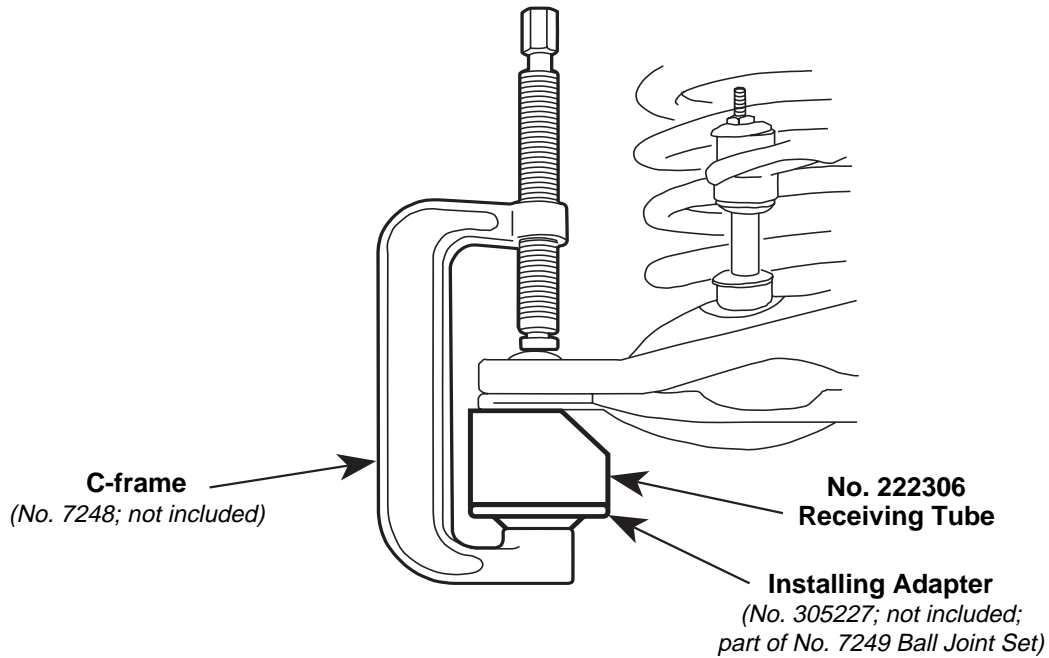

## Removing the Lower Ball Joint

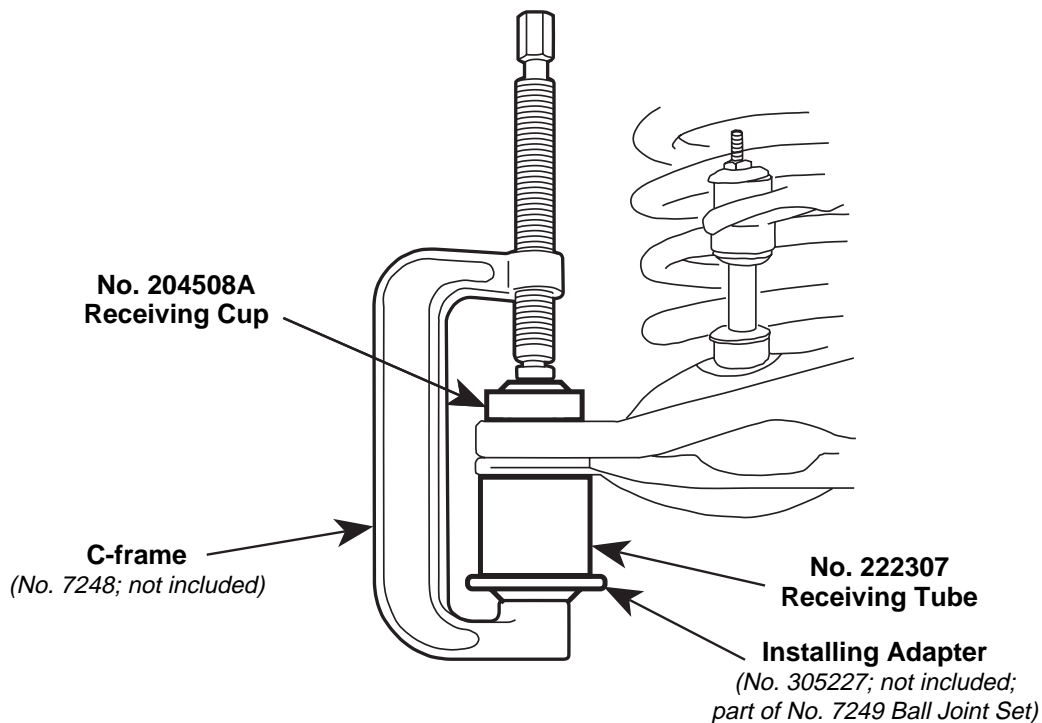

## Installing the Lower Ball Joint