



# Sprinter Cut-Away No-Drill

**Bracket Kit 10-1273**

**IN 562**

2 Short 34" Boards

### Tools Required

- 1/2" Socket
- 1/2" Wrench
- 3/8" Nut driver on Drill
- 1/8" Allen wrench
- Vice Grip Pliers

### Hardware Included

- BRACKETS SHOW ON RIGHT
- 1- BOLT PACK

### Torque Specification:

- 1/4" Bolts - 6 Ft Lbs.
- 5/16" Bolts - 19 Ft Lbs.

### Locate Driver and Passenger Bracket Locations


Measuring from the front wheel well back, mark the following locations on the pinch weld. There will be factory holes in line with these marks that will be used to mount the running board brackets.

#### DRIVER

- LOCATION 1: 9"
- LOCATION 2: 21 5/8"

#### PASSENGER

- LOCATION 1: 10 1/4"
- LOCATION 2: 23"

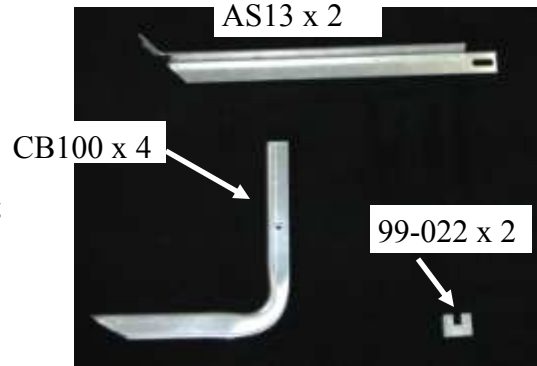

RE-ENFORCEMENT NUT x 6


SPACER x 2



### Install in 1st location Driver side


At the location 1 on Driver side and at the location 1 on the passenger side mount a 99-022 pinch weld clamp, by tightening the set screws with 1/8" Allen wrench holding with pair of vise grips for leverage.

**Make sure set screws are as tight as possible.**


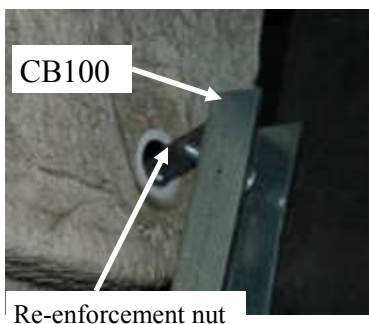


Slide a washer on a 5/16" x 1-1/2" bolt. Then slide the bolt through the top tab of a CB100 and thread a re-enforcement nut only engaging a couple threads and slide nut into hole on rear rocker.

Tighten up the bolt into the nut but leave loose for now for adjustment later.

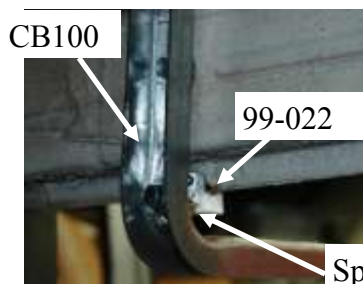

Slide a washer on a 5/16" x 1-1/2" bolt. Then slide the bolt through slot in rear of CB100 and spacer tube between the CB100 and 99-022 then thread into the rear of the pinch weld clamp and tighten up the bolt into the clamp but leave loose for now for adjustment later.

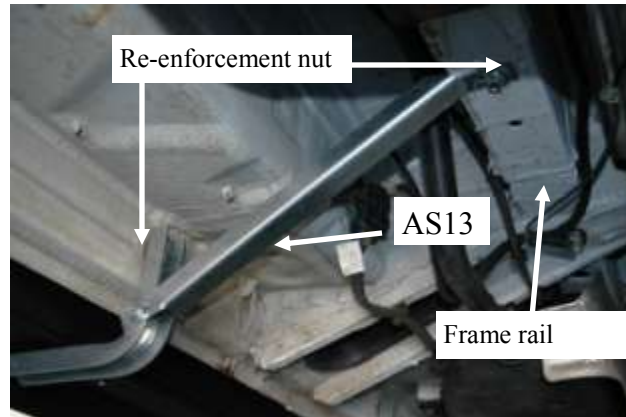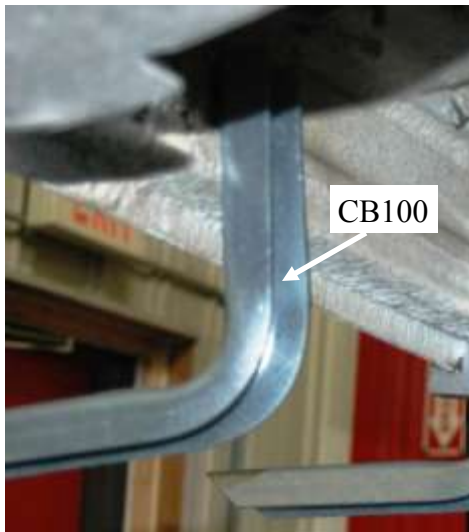

**Install in 2nd location Driver side**


Slide a washer on a 5/16" x 1-1/2" bolt. Then slide the bolt through the top tab of a CB100 and thread a re-enforcement nut only engaging a couple threads and slide nut into hole on rear rocker.

Tighten up the bolt into the nut but leave loose for now for adjustment later.

Slide a washer on a 5/16" x 1-1/2" bolt. Then slide the bolt through the top tab of a AS13 and thread a re-enforcement nut only engaging a couple threads and slide nut into hole on frame rail. Then place a 5/16" x 3/4" bolt through the slot on AS13 then through hole in side of the CB 100 and place flange nut onto the threads.

Tighten up the bolt into the nut but leave loose for now for adjustment later.

**Install in 1st location Passenger side**

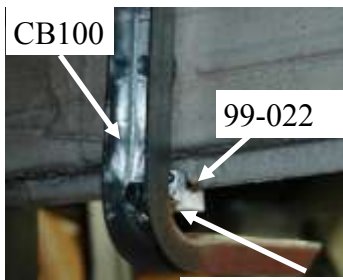


Spacer tube

Slide a washer on a 5/16" x 1-1/2" bolt. Then slide the bolt through the top tab of a CB100 and thread a re-enforcement nut only engaging a couple threads and slide nut into hole on rear rocker.

Tighten up the bolt into the nut but leave loose for now for adjustment later.

Slide a washer on a 5/16" x 1-1/2" bolt. Then slide the bolt through slot in rear of CB100 and spacer tube between the CB100 and 99-022 then thread into the rear of the pinch weld clamp and tighten up the bolt into the clamp but leave loose for now for adjustment later.

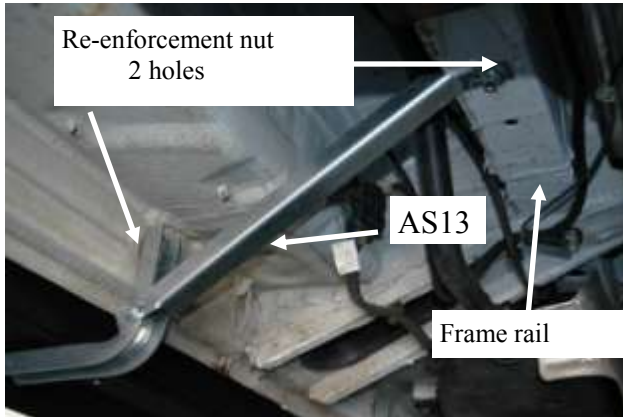


**Install in 2nd location Passenger side**

Slide a washer on a 5/16" x 1-1/2" bolt. Then slide the bolt through the top tab of a AS13 and thread a re-enforcement nut only engaging a couple threads and slide nut into hole on frame rail.

Then place a 5/16" x 3/4" bolt through the slot on AS13 then through hole in side of the CB 100 and place flange nut onto the threads.

Tighten up the bolt into the nut but leave loose for now for adjustment later.

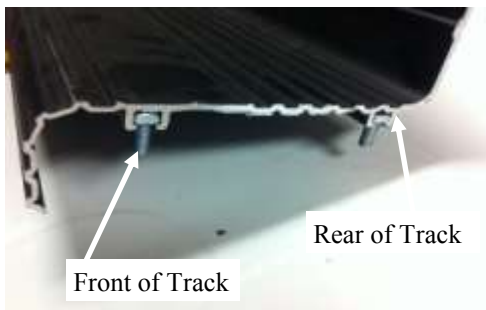

**Insert Mounting Bolts and Install End Caps**

First slide (1) 1/4-20 square head bolt into the front track and (1) into the rear track of the running board for each bracket location. These bolts will attach the board to the brackets. After sliding all the bolts in. Attach the end caps using two self tapping 3/8" bolts into the tracks the square head bolts were inserted in. The self tapping bolts will be serrated at the bottom.

**Mount the Running Boards**

Slide the 1/4-20 bolts through the slots in the top of all the CB brackets. Secure the board to the brackets with a 1/4" nut in all locations. Position the board so it sits flush with the front and rear wheel wells. The very top of the board should rest up against the plastic molding that sticks out slightly along the bottom of the vehicle. Once the board is in the correct position, tighten all nuts and bolts on the mounting brackets. Repeat the same process on the passenger side.

