DOG BOX
Instruction Sheet

OWENS Products, Inc.
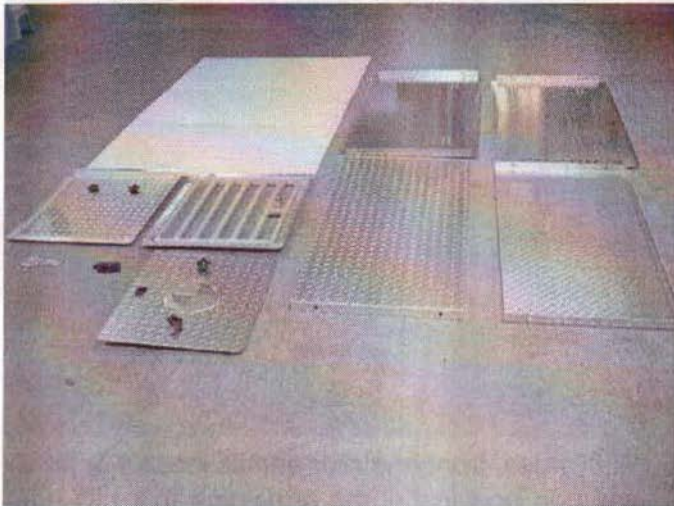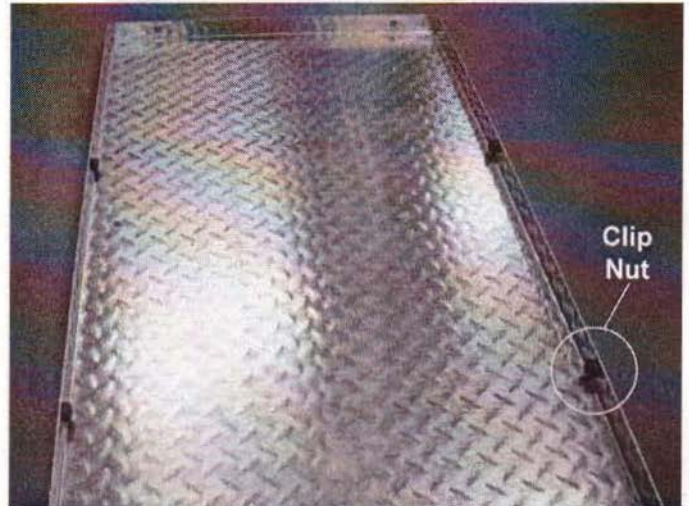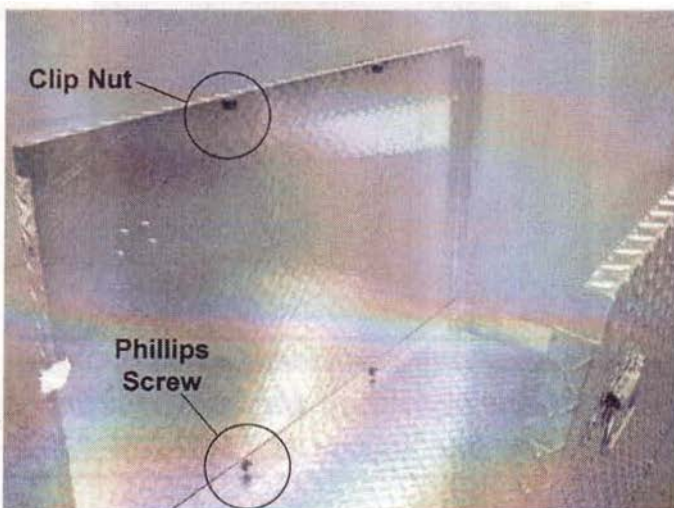
1. Identify and layout all dog box panels and parts. You should have the following items:
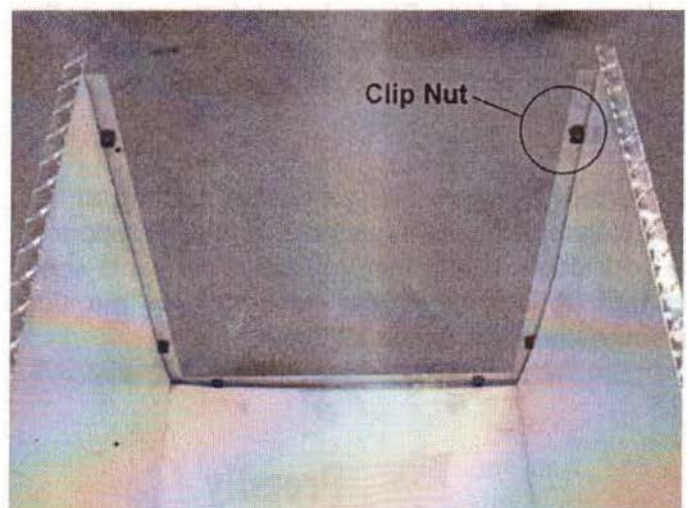
   1. . . . Bottom Floor Pan
   2. . . . Side Walls with Carrying Handles
   1. . . . Rear Panel with Sliding Air Vent
   1. . . . Locking Front Door Panel
   1. . . . Foul Weather Door Cover
   1. . . . Top
   1. . . . Plastic Interior Liner
   24. . . . Phillips Head Screws
   24. . . . Clip Nuts

2. Snap clip nuts into the square holes located in the sides of floor pan. Note the clip nuts should be located on the inside of the floor pan as shown above. **(Important: Do only the four side holes at this time.)**

3. Place clip nuts in square holes located at the top of side panels. **(Important: Do only the top two square holes located in each side panel at this time.)** Loosely attach side panels to floor panel using Phillips screws.
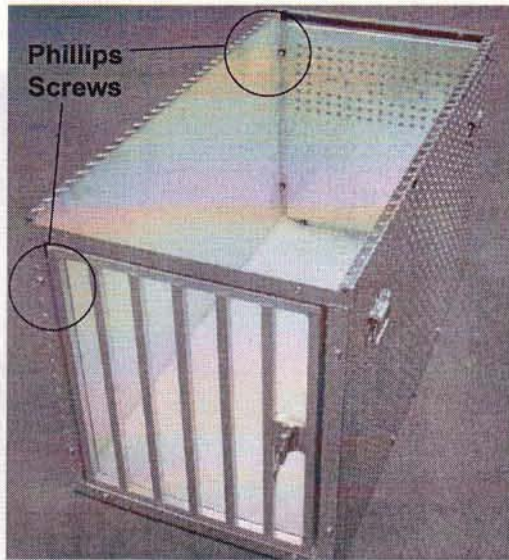
4. Place interior liner in floor and side panels as shown above. Push liner firmly in place and snap clip nuts into square holes located in both ends of side panels. Note: Liner should be behind clip nuts as shown.
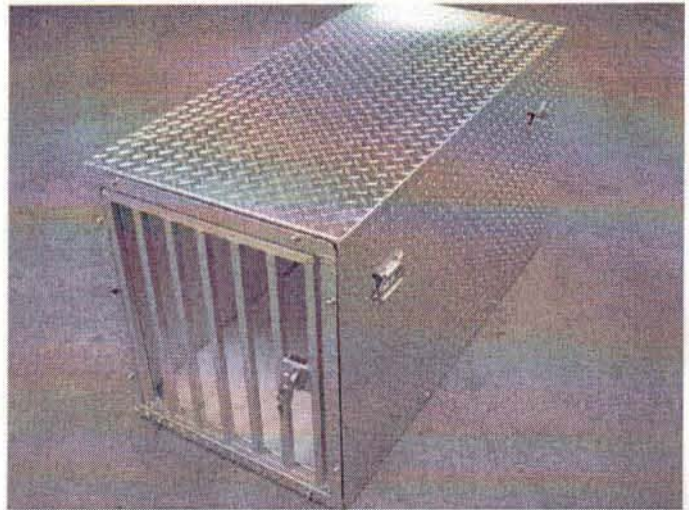
Phillips Screws

5. Now loosely attach the front door panel and rear air vent panel to floor pan and side walls using Phillips Screws as shown above. Note: Do not tighten at this time.

7. Now that all panels have been loosely attached and the box is fully together, you can securely tighten all screws.

8. To attach your foul weather door cover, position the tabs located at bottom of cover on top of the lower rail of door. Place J-hook fastener over the center bar of door and through the winter cover as shown at right. Tighten hand wheels to hold cover in place.

Important Notice: The ventilation system on this dog transport box is adjustable. It is very important to your dog's safety that you keep the vents open enough to assure proper ventilation in the dog storage compartment at all times.

6. With sides, front and rear panels loosely in place you can now install the remaining four clip nuts in the square holes located in the top panel. Loosely attach the top panel to the sides and ends using Phillips screws. Note that top panel tucks behind front and rear panels as shown above in illustration #6.

J-Hook

⑧