



# Explorer Divider

Product No.  
**55309**

**IN 665**

### Tools Required

- Tape measure
- Drill with Phillips Bit


### Hardware Include

- 1- BOLT PACK






Once the K9 insert is mounted in vehicle. Slide the divider into the K9 insert so the door is on the driver side.

Place in to 37-1/2" from floor where it bends down, this will place divider in just to passenger side edge of door on the front K9 insert.

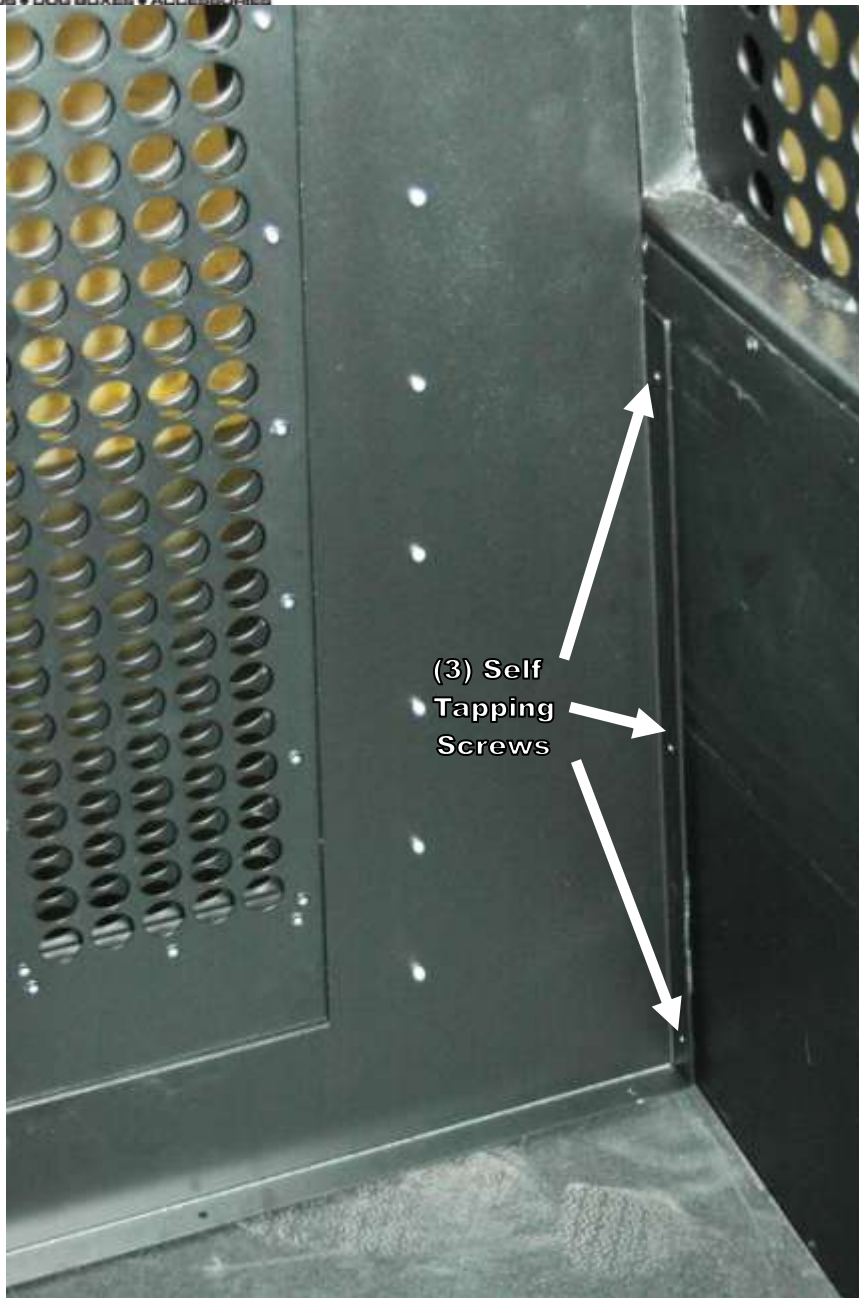

Place 3 self tapping screws in the flange on the divider located on the passenger side, start with the front into the front K9 insert.

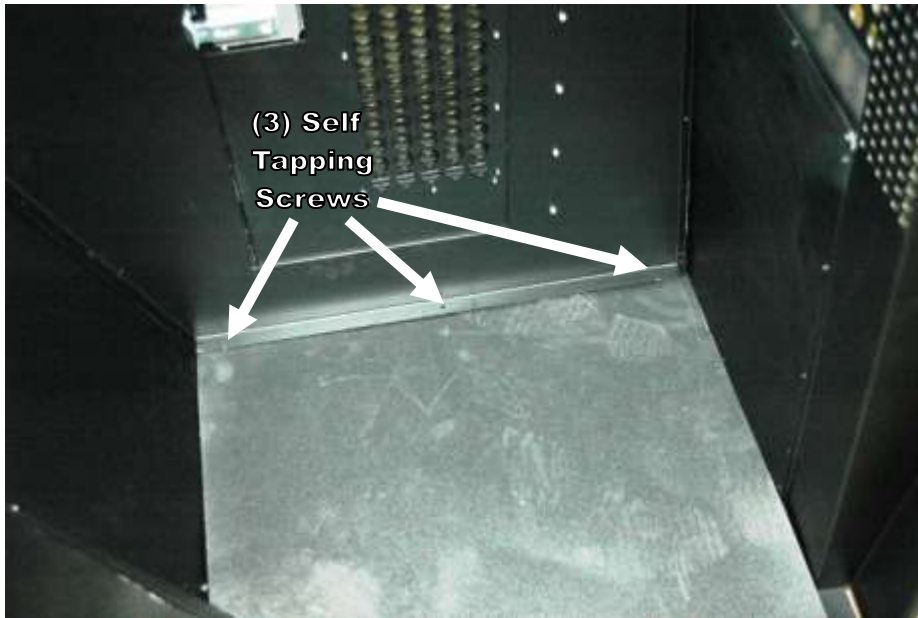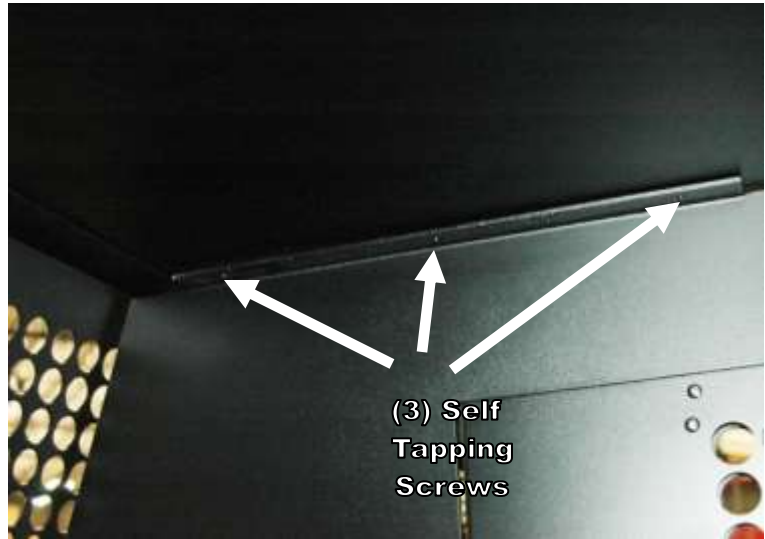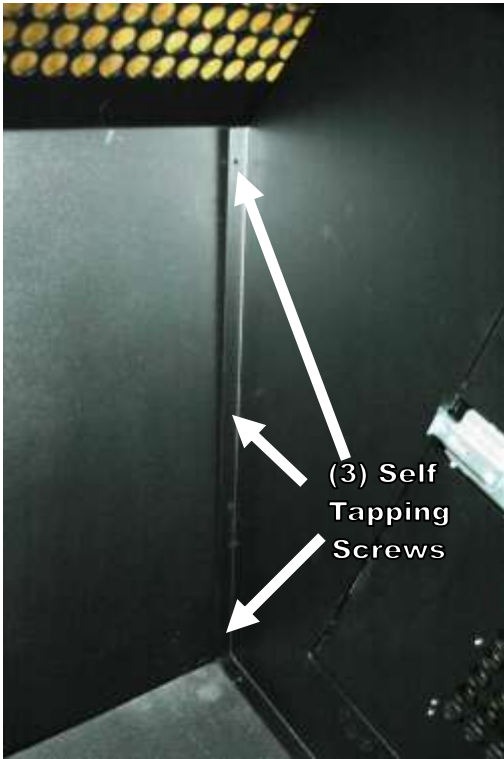

Once the front 3 screws are into secure, square the divider up in K9 insert and place 3 self tapping screws through the holes in flange into rear panel. Then 3 self tapping screws though the top into lid of K9 insert, and finally 3 self tapping screws into the floor through the rubber mat.

This will complete the installation.