

88-C CHEVY DUALY MUD FLAP INSTALLATION INSTRUCTION


NOTE: READ ENTIRE INSTRUCTION SHEET BEFORE INSTALLING MUD FLAPS TO ENSURE A PROPER INSTALLATION.

STEP 1.) USING THE 5/16" BOLTS, NUTS, FLAT WASHERS, AND SPLIT WASHERS, FASTEN THE RUBBER FLAP TO THE SUPPORT BRACKET AS SHOWN.

STEP 2.) FASTEN THE SUPPORT BRACKET TO THE UPPER FENDER BRACE MOUNT; USE THE EXISTING BOLT TO FASTEN. (SEE ILLUSTRATION BELOW)

STEP 3.) FASTEN ONE END OF THE 12 1/4" STRAP TO THE SUPPORT BRACKET USING 5/16" BOLT, NUT, AND SPLIT WASHER. (SEE ILLUSTRATION BELOW)

STEP 4.) FASTEN THE OTHER END OF THE 12 1/4" STRAP TO THE INNER WHEEL WELL LINER, USE THE EXISTING BOLT TO FASTEN. A SLIGHT BEND WILL BE REQUIRED TO ACCOMPLISH THIS. (SEE ILLUSTRATION BELOW)

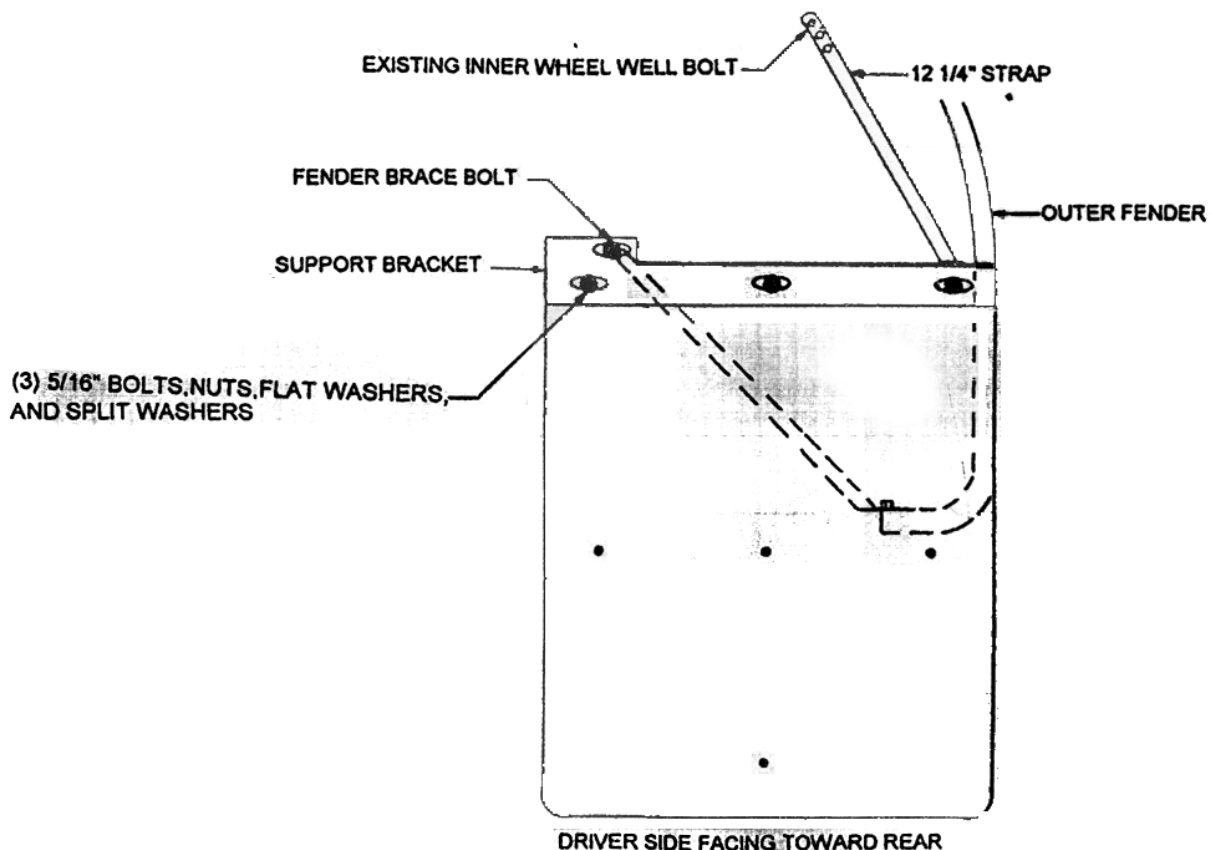

Owens provides the best in mud flaps and splash guards.