

OWENS 98-CURRENT CHEVY /GMC BOX BOARD


DRILLING INTO BODY AND FRAME IS REQUIRED.

INSTALLATION PARTS LIST:

QTY.	DESCRIPTION	QTY.	DESCRIPTION
1	RUNNING BOARD 1 DRIVER & 1 PASSENGER	2	5/16" CLIP NUT
1	STONE GUARD 1 LEFT & 1 RIGHT	10	5/16"x 3/4" BOLT
8	3/8"x1 SELF TAPPING SCREW	8	5/16-18 HEX WASHER HEAD NUT
8	#14x3/4" SHEET METAL SCREW	2	FLAT BRACKET, FL74
4	1/4"x5/8" SQUARE HEAD SCREW	2	FLAT BRACKET, FL73 D&P
4	1/4-20 HEX NUT	2	HORIZONTAL BRACKET, SUPPORT, 3124F
1	END CAP 1 LEFT & 1 RIGHT	2	#14 X 3/4 TEX SCREW


TOOLS REQUIRED: 5/16" DRILL • 1/2" HEX SOCKET • 1/2" WRENCH • 5/16" NUT DRIVER • 3/8" NUT DRIVER

BOX BRACKET LOCATION
(DRIVERS SIDE SHOWN)

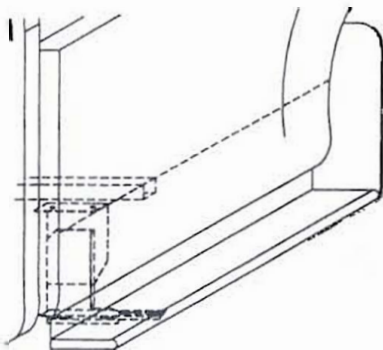


① LOCATE THE FIRST BED CROSS BRACE BEHIND THE CAB

② BRACKET ASSEMBLY ASSEMBLE WITH 5/16" BOLTS

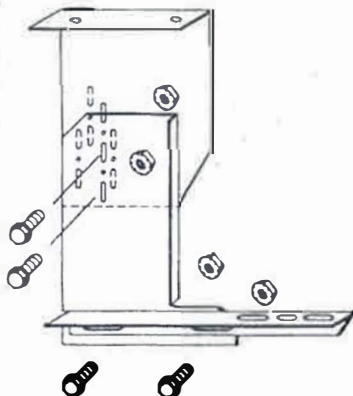

③

PREDRILL A 5/16" HOLE NEAR THE END OF THE CROSS BRACE. SLIDE NUT CLIP INTO END OF CROSS BRACE AT BRACKET LOCATION.
BRACKET ASSEMBLY MOUNT TO BED ASSEMBLY WITH 5/16" BOLTS AND NUT CLIP AND #14 SELF DRILLING SCREW

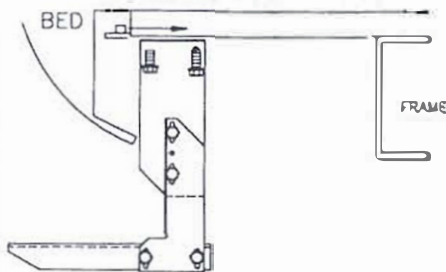

MOUNT AT LOCATION SHOWN AT ①

④

BEND STONE GUARD BY HAND AND KNEE TO FIT THE WHEEL WELL BEFORE INSTALLING TO RUNNING BOARD



⑤

FASTEN REAR STONE GUARD TO BOARDS WITH 3/8" SELF TAPPING BOLT. BEND STONE GUARD BY HAND AND KNEE TO FIT THE WHEEL WELL

⑦

INSTALL END CAP TO BOARD WITH 3/8" SELF TAPPING BOLT

⑥

SLIDE ONE 1/4"x5/8" SQUARE HEAD SCREW INTO EACH TRACK.

⑧

HOLD BOARD IN PLACE, WITH THE FRONT RESTING ON THE BOX BRACKET.
NOTE:
BE SURE THAT 1/4" BOLTS ARE PLACED INTO THE BRACKET-STEP SUPPORT

⑨


SCREW THROUGH STONE GUARD INTO FENDERWELL LIP USING #14 BY 3/4 SHEET METAL SCREWS. MAKE SURE YOU DRILL INTO METAL.
3 PLACES AT EACH STONE GUARD

⑪

NEVER

WITH BOARD LEVEL TIGHTEN ALL LOOSE BOLTS

⑩

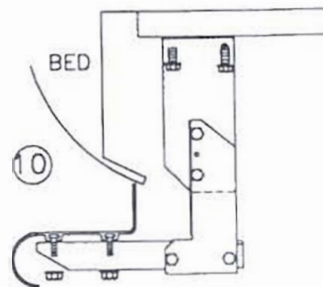

SECURE BOARD TO BRACKET WITH (2) 1/4" NUTS

⑫

REPEAT FOR OTHER SIDE

Choose reliable running boards offered on our website.