


Tools Required

- Ratchet
- 13mm Socket

Torque Specification:

8mm Bolt - 13 Ft Lbs.

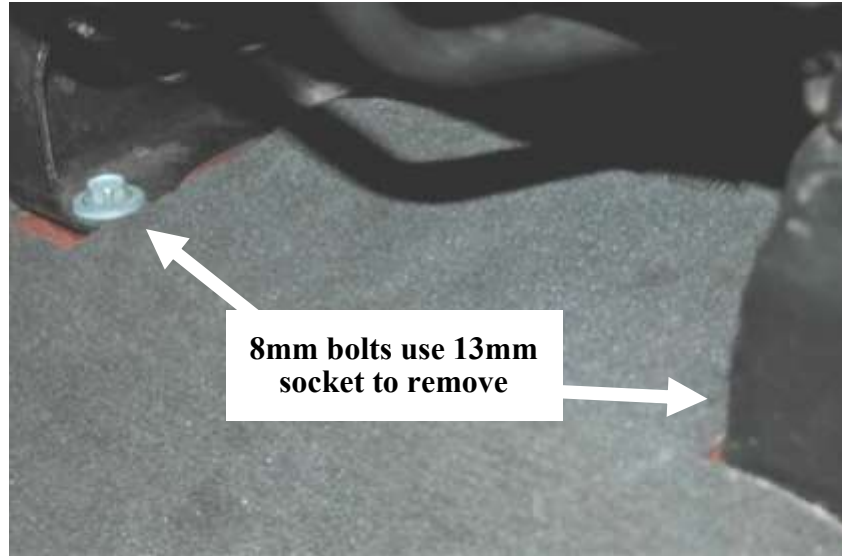

Slide drivers seat back to access the front seat bolts.
Remove the front bolts with a 13mm socket on ratchet.



With both front bolts removed slide the drawer unit under seat base so that the tabs with slots of the drawer are under the driver seat front, then replace the two 8mm bolts removed earlier. Tighten the bolts making sure the bolts are down through the driver seat base and through the slots of the drawer unit.



**Under Seat Storage Drawer
IN 688**

Product No. **TJ15010**



Learn more about car organizers we have.