Speaker connection harness for select 2007-2017 Chrysler Dodge Jeep and Ram vehicles with factory amplified sound systems

Introduction and Features

The APH-CH01 simplifies speaker wire connections when adding aftermarket amplifiers. Aftermarket amplifiers can be easily added with no need to cut or modify a vehicle's original wiring. Each pair of wires has been labeled with the corresponding speaker name.

Installation Notes

- 1. It is always best to use a tone generator (PAC Part# TL-PTG2) to verify that the tables in this manual, and the labels on the wires, match the wiring in your specific vehicle.
- 2. Connection of the male Black 16-pin connector is only necessary if you are leaving factory speakers connected to the factory amplifier.
- 3. The White 22-pin connector from the APH-CH01 must be connected to the factory amplifier when using a PAC AmpPRO Interface.
- 4. Not all applicable vehicles will come equipped with a corresponding speaker for all of the wires populated in our harness. It is important to understand which speakers the vehicle is equipped with.
- 5. If you are leaving any of the factory speakers connected to the factory amplifier, simply connect the speaker wires (color for color) between the male and female connectors. For example: If you want the rear speakers to be powered by the factory amplifier, simply connect the Green, Green / Black, Purple and Purple / Black wires from the male connector to the Green, Green / Black, Purple and Purple / Black wires from the female connector.

Installation Steps

- 1. Locate the vehicles factory amplifier and disconnect the White 22-pin and Black 16-pin connectors.
- 2. Connect the APH-CH01 harness to the connectors that were disconnected in the previous step.
- 3. Connect the male connectors from the APH-CH01 to the amplifier.

11


22

Black / Red

Black / Green

4. Connect the longer loose wires from the APH-CH01 to your aftermarket amplifier or passive crossovers according to the tables in this manual.

Wiring Overview

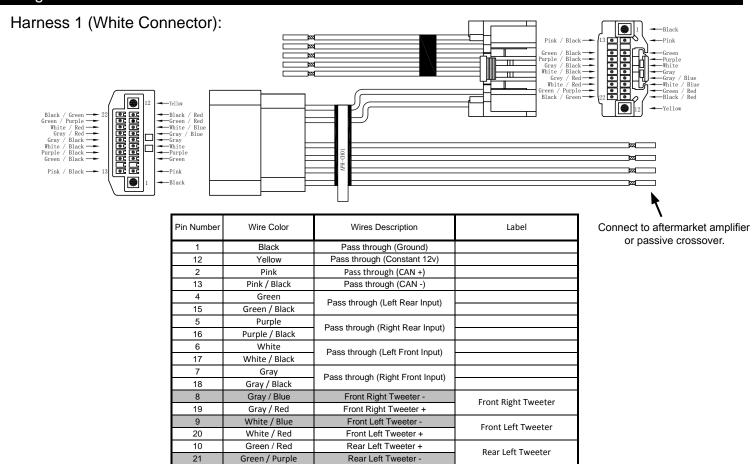

Sub 2 +

Sub 2 -


Subwoofer 2



Speaker connection harness for select 2007-2017 Chrysler Dodge Jeep and Ram vehicles with factory amplified sound systems

Wiring Overview (cont.)

Harness 2 (Black Connector):

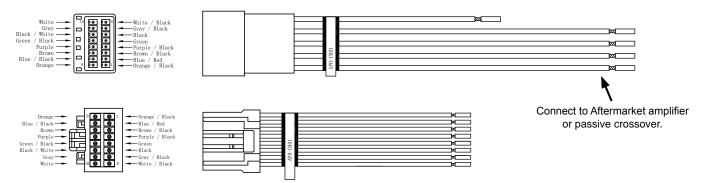

Pin Number	Wire Color	Wires Description	Label
1	Orange	For Future Use	
9	Orange / Black	For Future Use	
2	Blue / Black	Rear Right Tweeter -	
10	Blue / Red	Rear Right Tweeter +	Rear Right Tweeter
3	Brown	Center Channel +	
11	Brown / Black	Center Channel -	Center Channel
4	Purple	Rear Right Midrange +	
12	Purple / Black	Rear Right Midrange -	Rear Right Midrange
5	Green / Black	Rear Left Midrange -	
13	Green	Rear Left Midrange +	Rear Left Midrange
6	Black / White	Sub 1 -	
14	Black	Sub 1 +	Subwoofer 1
7	Gray	Front Right Midrange +	
15	Gray / Black	Front Right Midrange -	Front Right Midrange
8	White	Front Left Midrange +	
16	White / Black	Front Left Midrange -	Front Left Midrange