



70923


PowerBraid Kit for 2nd Gen Camaro Harnesses 20112, 20113 & 20114

Contents


2 ft 1 inch PowerBraid
2 ft 3/4 inch PowerBraid
33 ft 1/2 inch PowerBraid
70 ft 1/4 inch PowerBraid
41 ft 1/8 inch PowerBraid
40 7 inch tie wraps
100 4inch tie wraps
1 roll Black electrical tape
1 roll Silicone tape
1 ft 1/2 inch heat shrink
2 ft 3/8 inch heat shrink
2.5 ft 1/4 inch heat shrink

- Before applying the PowerBraid on the harness, be sure to have all breakouts separated to their specific destination.
- After laying out the harness take the time to replace all existing tie wraps with the black electrical tape that is supplied with the PowerBraid kit. This step will make the installation much easier.
- Using the correct diameter loom for each wire section, install the PowerBraid. When finished with each section, cut any extra length of PowerBraid with a sharp pair of scissors and then secure it using the supplied silicone tape to wrap the ends. This will keep the PowerBraid from fraying. The ends that do not have connectors attached from Painless Performance the heat shrink, provided with the kit, can be used to seal ends instead of the tape.

Using PowerBraid installation tools , Painless part #70941, will simplify the installation process of the PowerBraid. The series of photos below show installation using the tool.

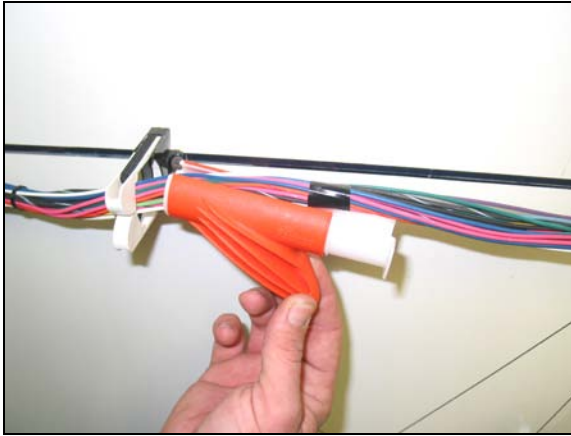

The wire is inserted into the tool.

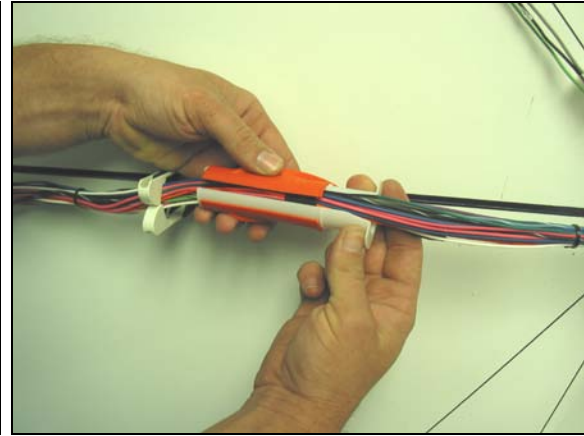

The tool is then closed around the wire



The “spreader” of the tool is then inserted into the PowerBraid. With the tool inserted, pull the tool down the length of the PowerBraid. This will insert the harness into the braid as it is pulled.