


Big Block Chevy: Power Steering Pump Bracket BBC Long Pump

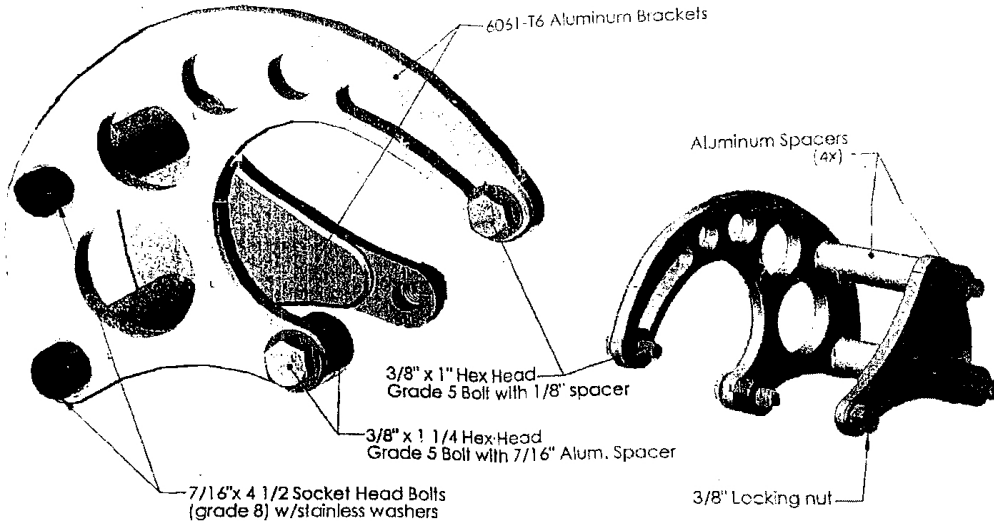

Installation:

- Attach both brackets to Power Steering Pump first. Hand tighten (2) bolts and (1) nut to pump.
- Install the (2) 7/16" socket head bolts with washers and spacers through both brackets and spacers, thread into block. (If these holes in your block have not been used. you may need to run a tap through them to clean out grease/dirt buildup)
- Install V-belt and tighten all pump mounting hardware.

[View other performance steering parts made by PCE on our website.](#)