



NISSAN FRONTIER GAP GUARDS INSTALLATION INSTRUCTIONS 2005-2015 KIT# PA6423

1. **Only install this kit on the vehicle for which it is specified.** If anytime during the installation you encounter something different from what is outlined in the instructions, call technical support.
2. Special tools needed:
 - a. Drill with 7/32" & 1/4" drill bit
3. Park vehicle on a clean, dry, flat, level surface and block tires so vehicle cannot roll in either direction.

Install Kit

1. Driver side front
 - a. At driver side front wheel well, position **kit gap guard** (front driver) to cover side of engine compartment.
 - b. Mark a top hole and drill if necessary with a 7/32" drill bit.
 - c. Install **kit clip** (push) through **kit gap guard** and into the wheel well.
 - d. Check alignment and mark next hole while keeping **kit gap guard** snug.
 - e. Proceed with three previous steps until **kit gap guard** is installed.
 - f. Repeat above steps for front passenger side **kit gap guard** (front passenger).

⚠ WARNING

Before you install this kit, read and understand all instructions, warnings, cautions, and notes in this instruction sheet and in the vehicle owner's manual.

⚠ NOTE

No two vehicles have holes spaced identically. If you are stretching a hole on the gap guard too much, punch another hole with a 1/4" paper hole punch. Most stock guards mount from the inside, but our gap guards mount from the outside.

Before Starting Installation

⚠ NOTE

Kit parts are prefaced by the word *kit* and appear in **bold** print.

1. Carefully read all warnings and instructions completely before beginning.
2. Verify all parts have been received in this kit by checking the parts list at the end of this document.


⚠ NOTE

If parts are missing from kit, please be prepared to provide the following information:

1. **Name** of purchase location
2. **Bar Code** on side of box
3. **Date** above bar code
4. **Date** inside box cover
5. **Inspector #** from inside box cover


2. Driver side rear

- a. Using *kit bracket* (L-shaped) and *kit subframe* as a template, mark driver side bed rail as shown.

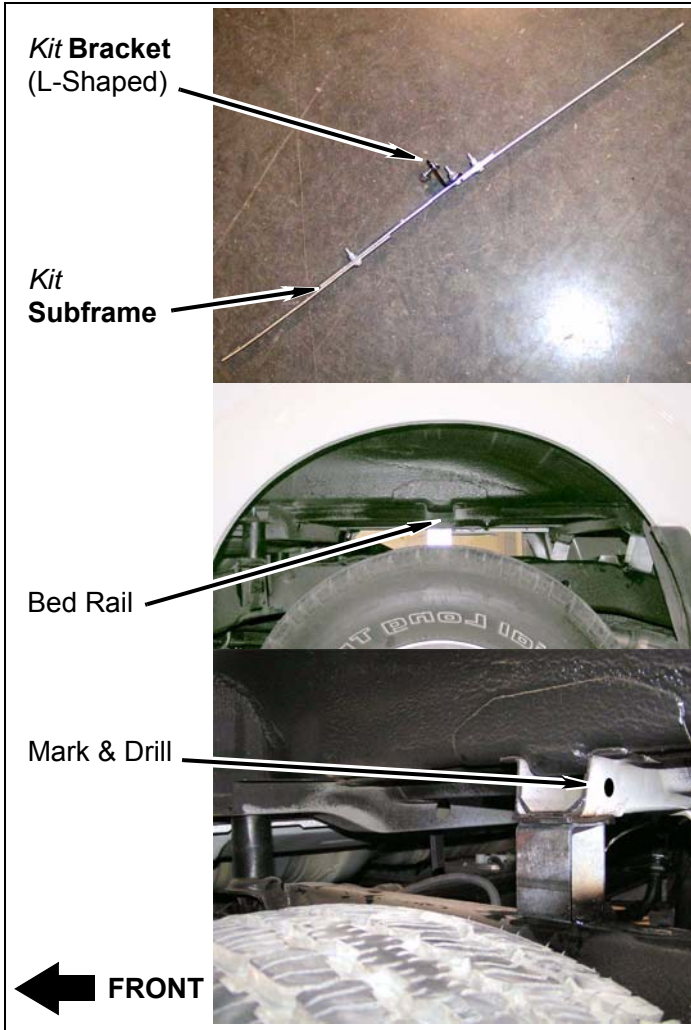


- b. Drill 1/4" hole at marked location.


- c. Install *kit subframe* and *kit bracket* (L-shaped) onto bed at drilled location with *kit bolt* (1/4" x 1"), two *kit washers* (1/4" SAE), and *kit nut* (1/4" Nylock).

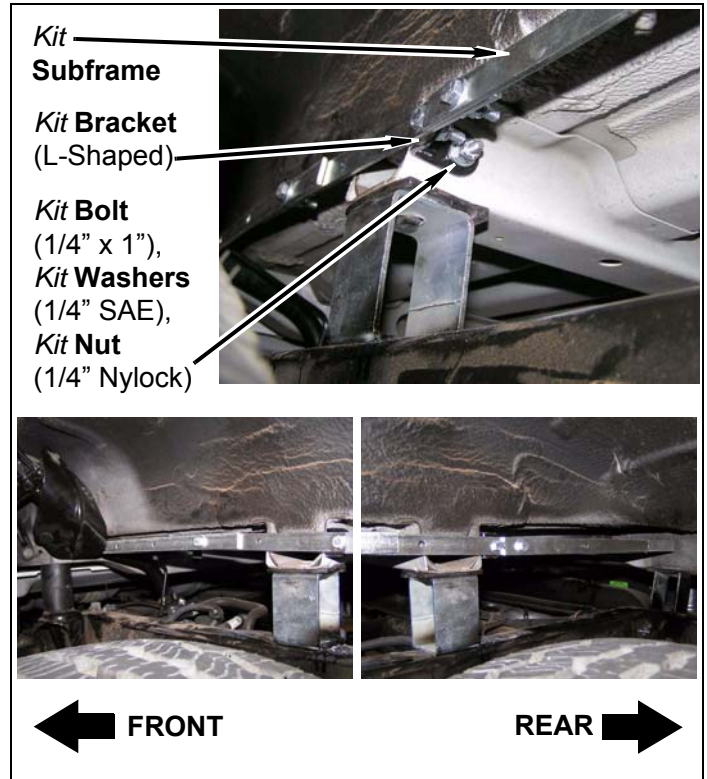


- d. Remove bolt from mud flap and bed.

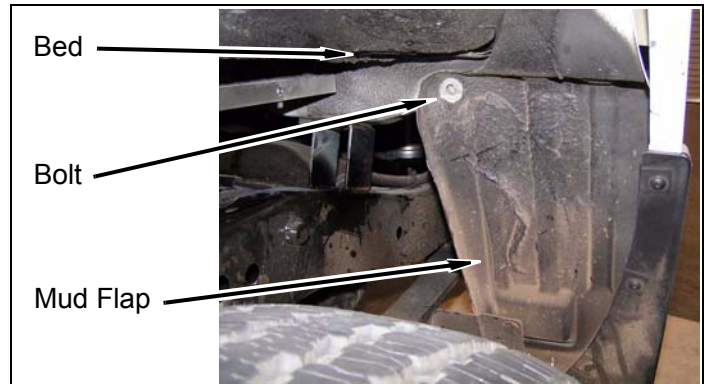


- e. At rear of wheel well, install *kit gap guard* (rear driver) onto bed and mudflap with bolt.

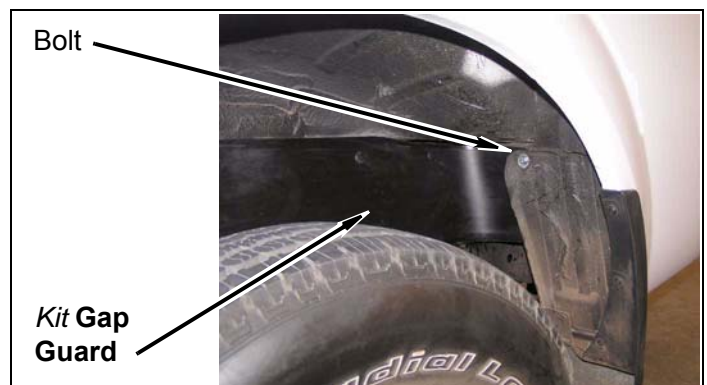

- f. Moving from back to front, install *kit gap guard* onto *kit subframe* with *kit clips* (push) using all corresponding holes.

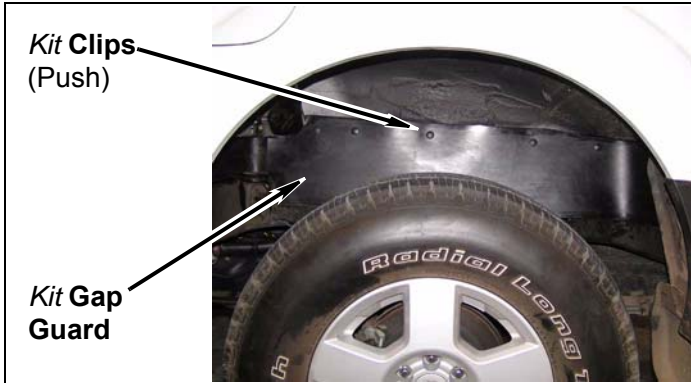

- g. Drill holes into front of wheel well with 7/32" drill bit, and install *kit clips* (push) through *kit gap guard* into remaining holes.

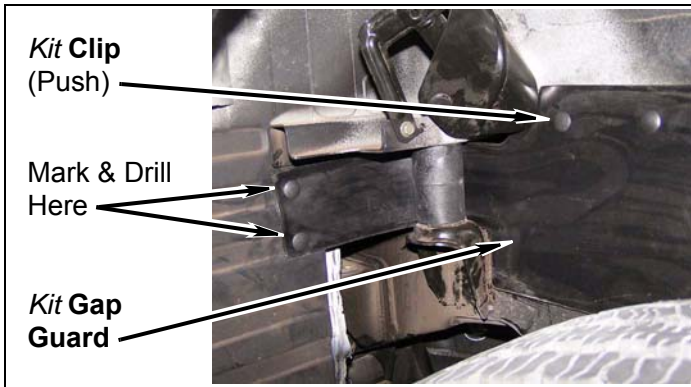

- h. Repeat above steps for *kit gap guard* (rear passenger).

Kit Parts List

Qty. Description

8	Bolt (1/4" x 1")
2	Bracket (L-shaped)
50	Clip (push)
1	Gap guard (front driver)
1	Gap guard (front passenger)
1	Gap guard (rear driver)
1	Gap guard (rear passenger)
8	Nut (1/4" Nylock)
2	Subframe
25	Washer (1/4" SAE)