


SERPENTINE BELT TOOL SET

- Use to remove and install belts on serpentine systems using spring loaded idler pulleys
- Fits pulleys requiring 13, 14, 15, 16 and 18 mm hex and both 3/8" and 1/2" square drives sizes
- Two extensions can be bolted on for hard to reach areas
- 9" bar with 1/2" square drive fits Chrysler 2.5, 3.0 liter and Ford 4.6 liter engines
- 23" bar with 3/8" square drive fits Ford 1.9, 2.3 liter and GM 3.1 liter engines
- 15mm 3/8" Dr. Socket fits Chrysler 3.0, 3.3, 3.8 liter Ford 3.0, 3.8 liter and GM 2.2, 2.8, 3.8 and 5.7 liter engines
- 16mm 3/8" Dr. Sockets fit For 3.8 & 4.0 liter engines
- 18mm 3/8" Dr. Sockets fit GM 3800 engines
- 13mm 3/8" Dr. Crowfoot fits GM Quad 4 engines
- 14mm 3/8" Dr. Crowfoot fits Saturn engines
- 15mm 3/8" Dr. Crowfoot fits Ford Windstar 3.8L engines
- Set also includes a G.M. Fan Clutch Wrench attachment
- Designed to loosen and tighten the fan clutch on 1996 and later G.M trucks and vans
- Unique design works with both 10 mm and 13 mm pulley bolts
- This tool is used on the following applications:
4.3L Astro & Safari Vans, Blazer & Jimmy sport Utility Vehicles,
2.2l 4 CYL & 4.3L V-6 S-10 and Sonoma pickup trucks: 4.3L V-6, 5.0L V-8 and 5.7L V-8,
C1500, C2500, C3500, K1500, C1500 Sierra, C2500 Sierra, C3500 Sierra and K1500 Sierra pickups,
G1500 or G2500 Chevy Express, G1500 or G2500 Savana Vans, 5.7L V-8 Suburban, Tahoe, and Yukon

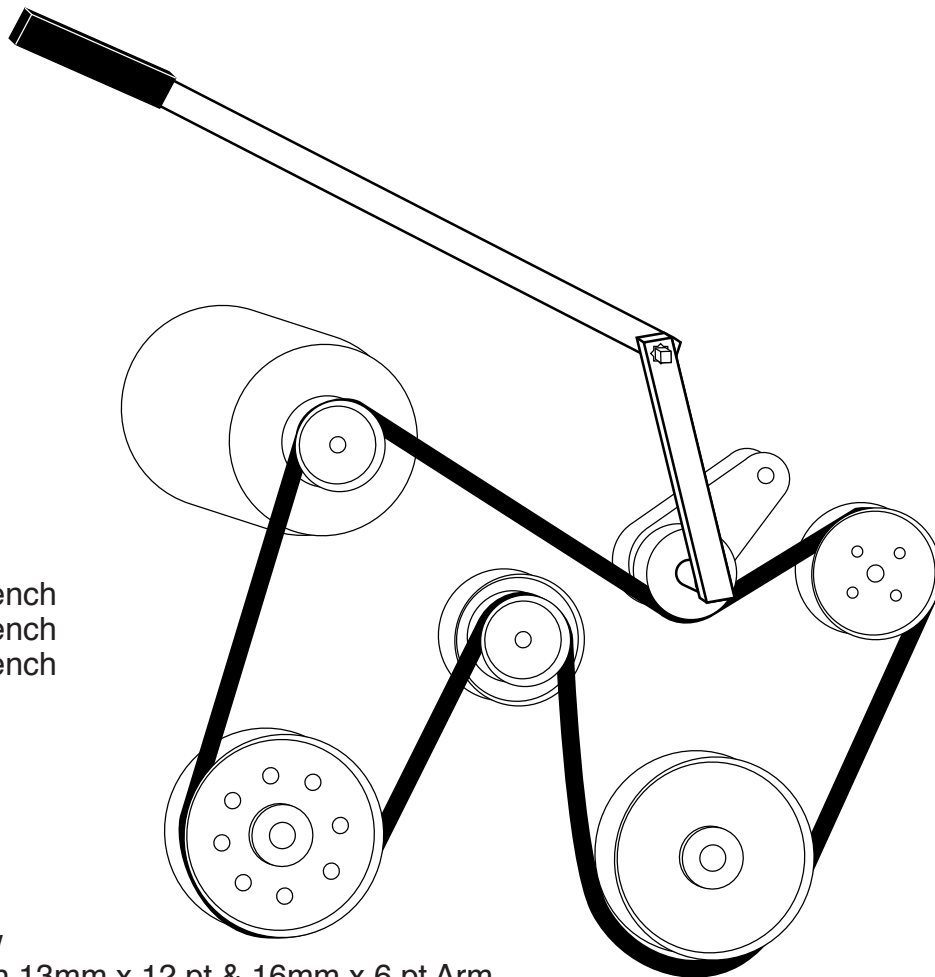

Replacement parts:

- W89716-1 13mm Crowfoot Wrench
- W89716-2 14mm Crowfoot Wrench
- W89716-3 15mm Crowfoot Wrench
- W89716-4 13mm Hex Socket
- W89716-5 14mm Hex Socket
- W89716-6 15mm Hex Socket
- W89716-7 16mm Hex Socket
- W89716-8 18mm Hex Socket
- W89716-9 3/8" Adaptor
- W89716-10 1/2" Adaptor
- W89716-11 3/8" 16 UNC Screw
- W89716-12 584mm Length with 13mm x 12 pt & 16mm x 6 pt Arm
- W89716-13 254mm Length with 15mm x 12 pt & 16mm x 6 pt Arm
- W89716-14 152mm Length with 15mm x 12 pt & 16mm x 6 pt Arm
- W89716-15 152mm Length with 5/8" Diameter Special Arm/GM Tool

