






## **MontBlanc ODIN**

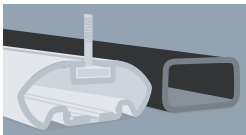


Fitting instructions

# WARNING !


- Read these instructions carefully before using the product for the first time.
- Assemble and fit the product using these instructions only.
- Keep instructions in car.
- Be sure to follow the national rules and legislations in force regarding method of application of load [carrier](#) and accessories.
- Do not assemble or use this product unless you have understood the fitting instruction.

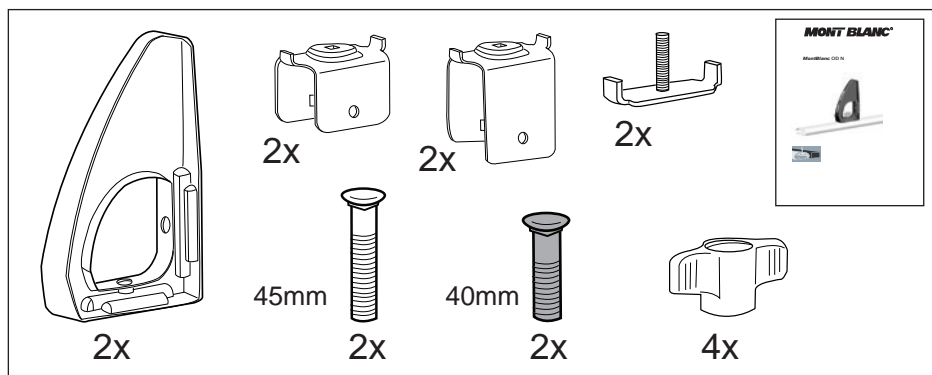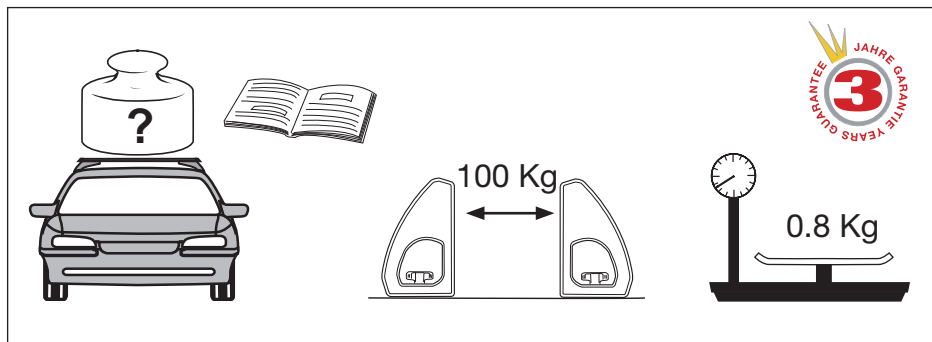

# A

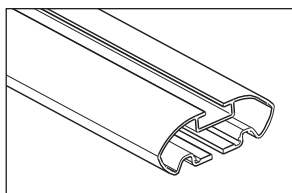


# B



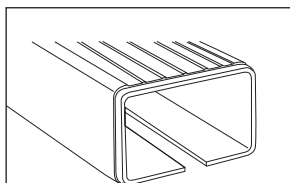


**20 x 30 mm**


# C

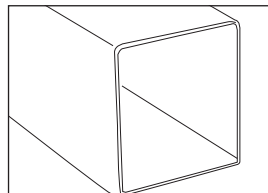


**40 x 30 mm**

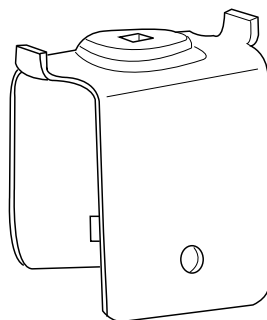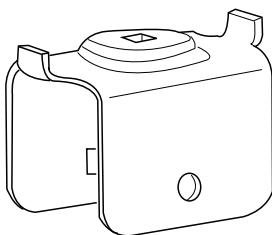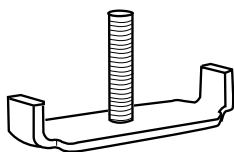


**Alt. 1**

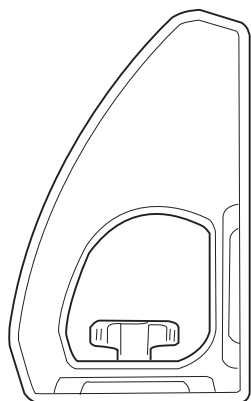


**Alt. 2**

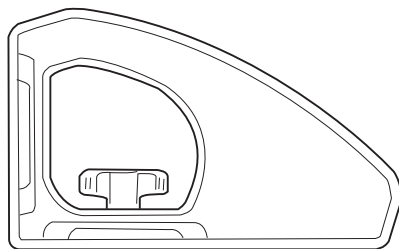


# A

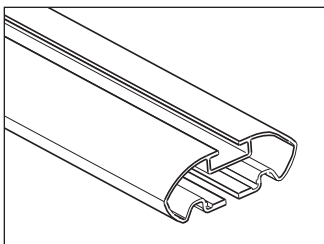


# A1

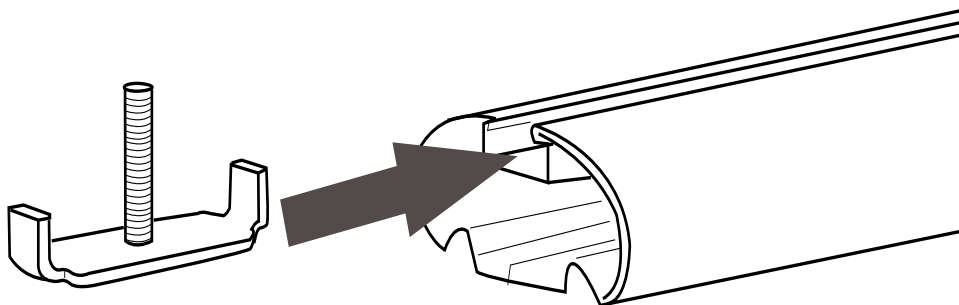


# A2

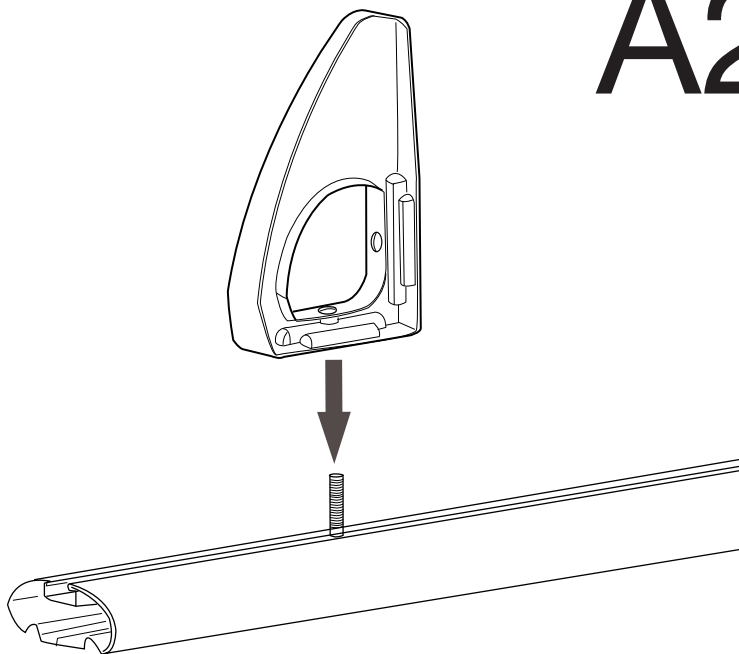

# A3

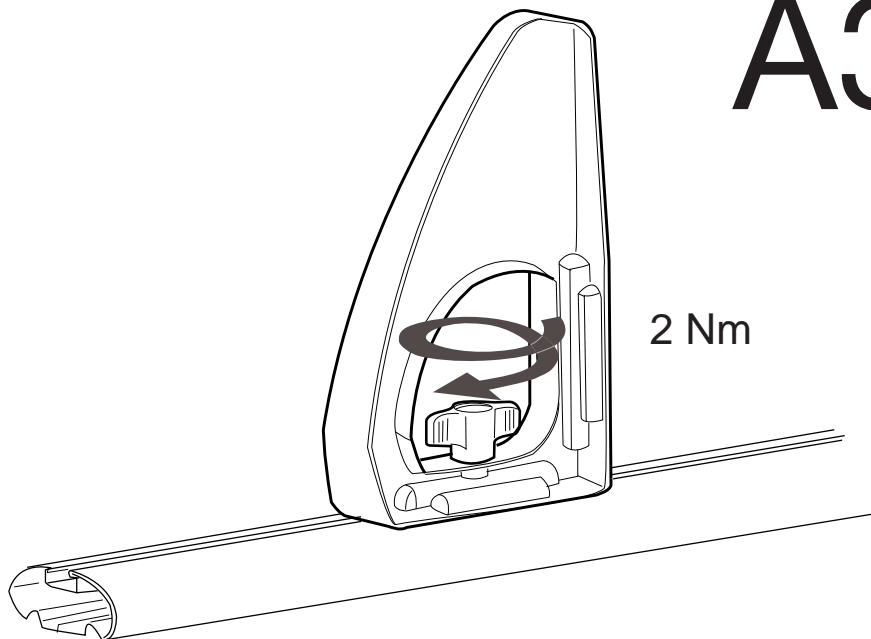


# B

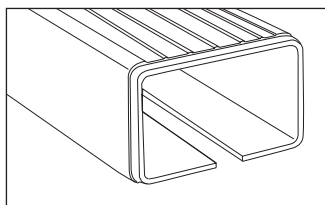


**20 x 30 mm**


# B1

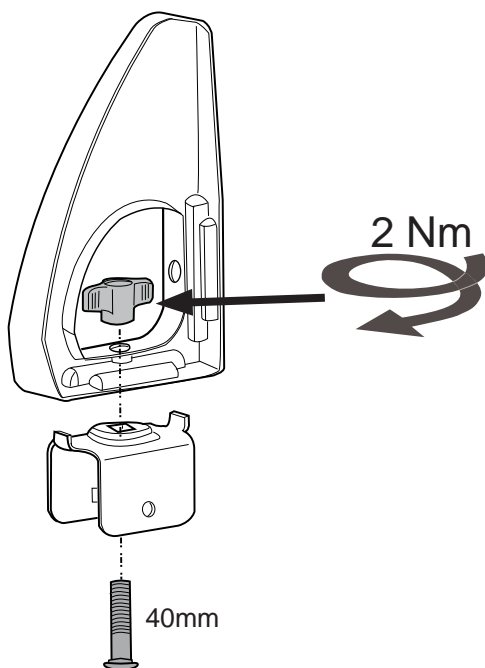


# B2

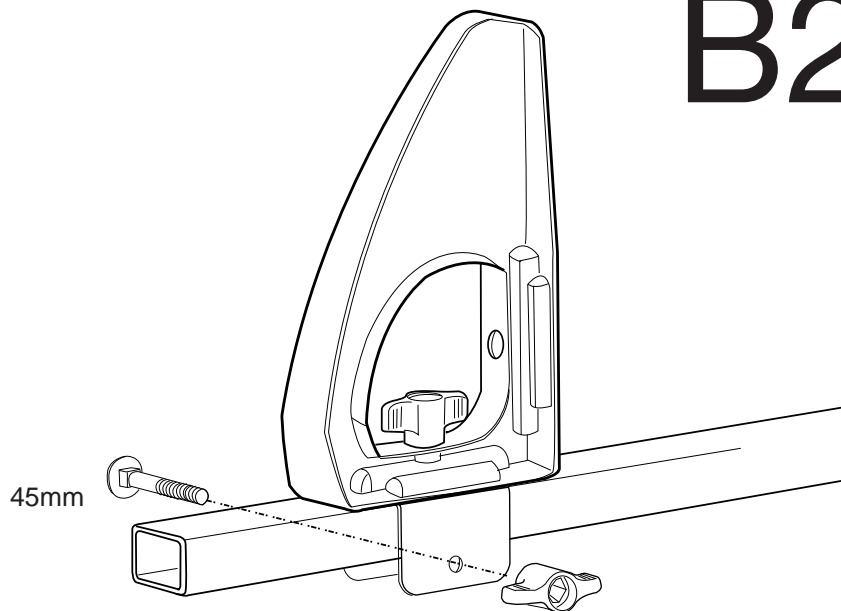

# B3

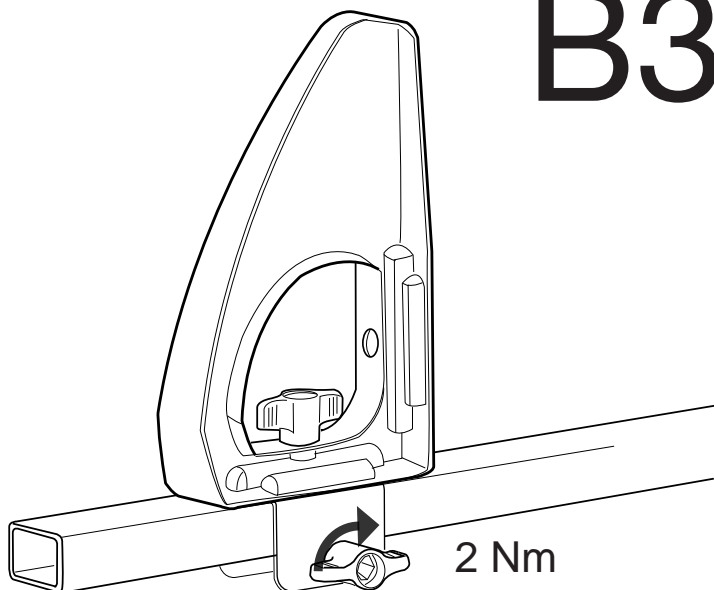


# C

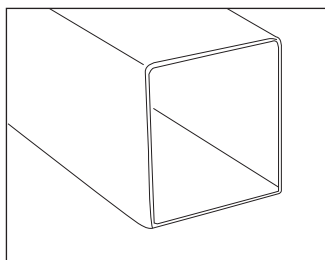


**40 x 30 mm**


# C1

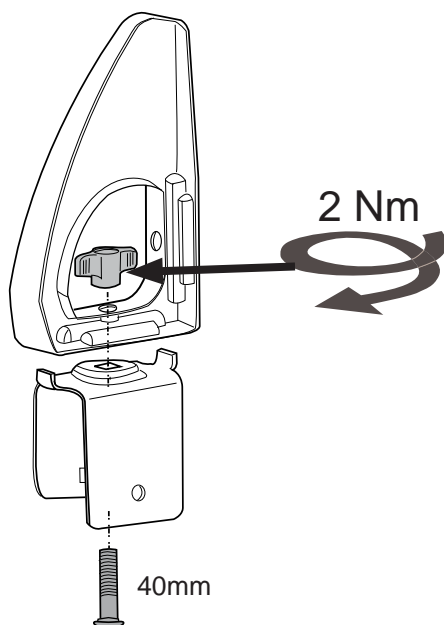


# C2



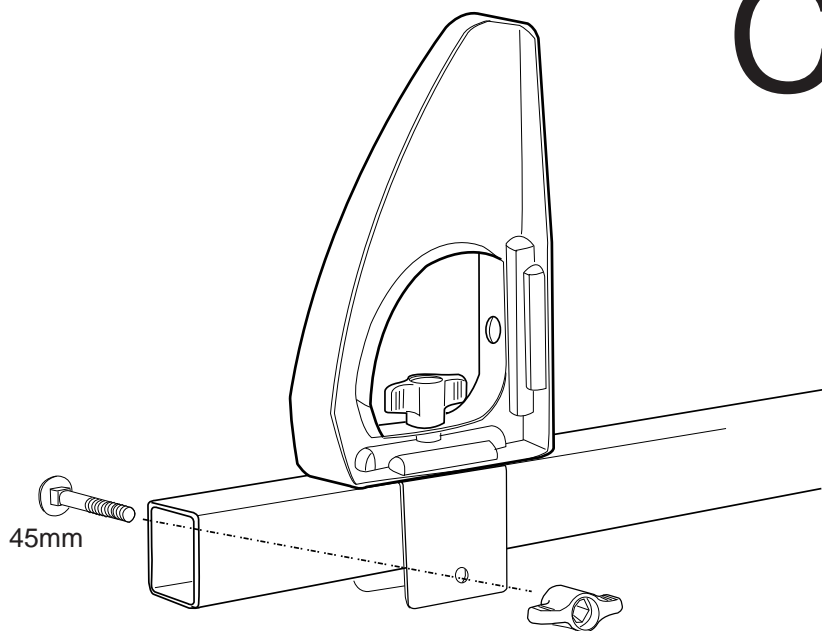


# C3

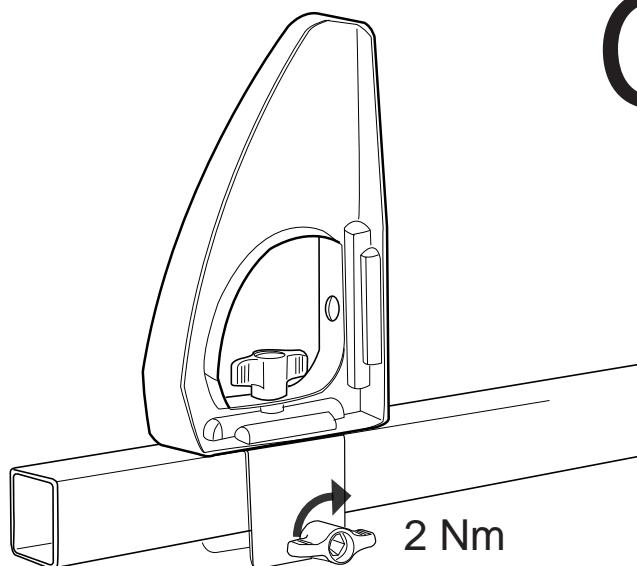

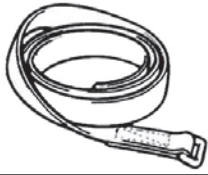


**OK !**

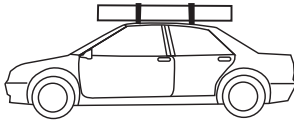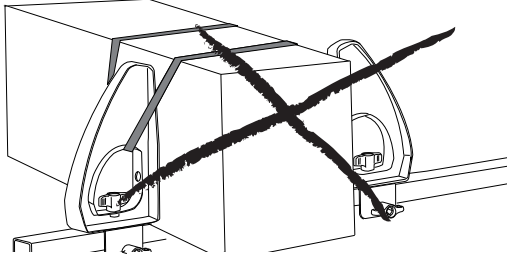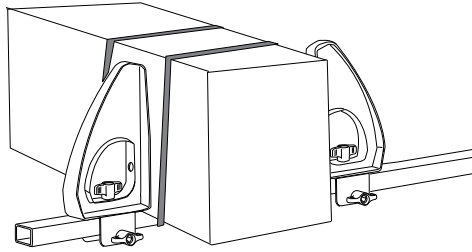

~100 km



**CHECK !**

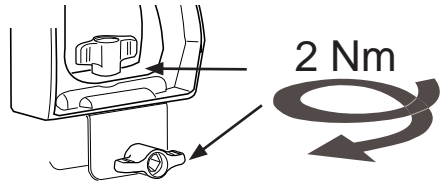

2 Nm

