








MontBlanc BARRACUDA





Fitting instructions

WARNING !


- Read these instructions carefully before using the product for the first time.
- Assemble and fit the product using these instructions only.
- Keep instructions in car.
- Be sure to follow the national rules and legislations in force regarding method of application of load carrier and accessories.

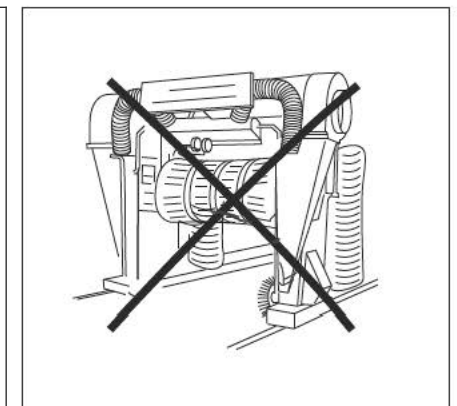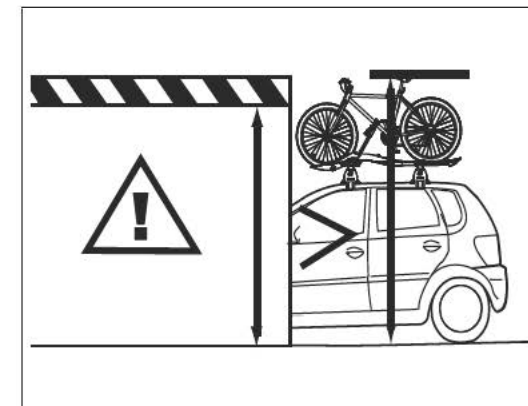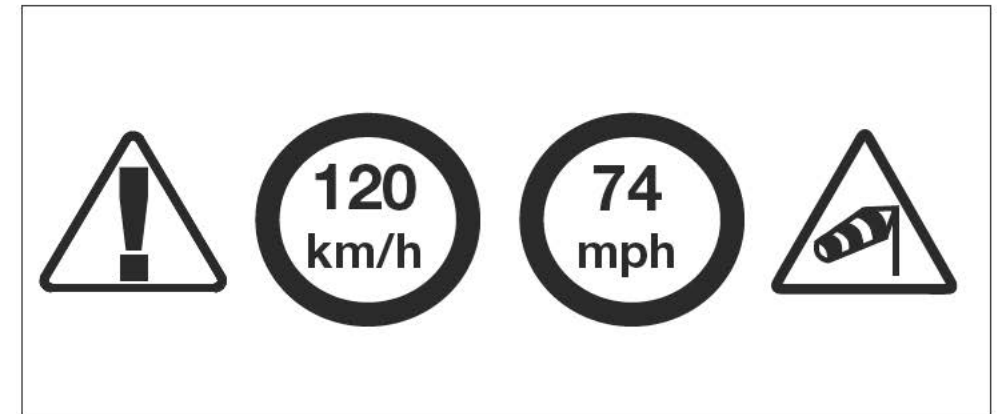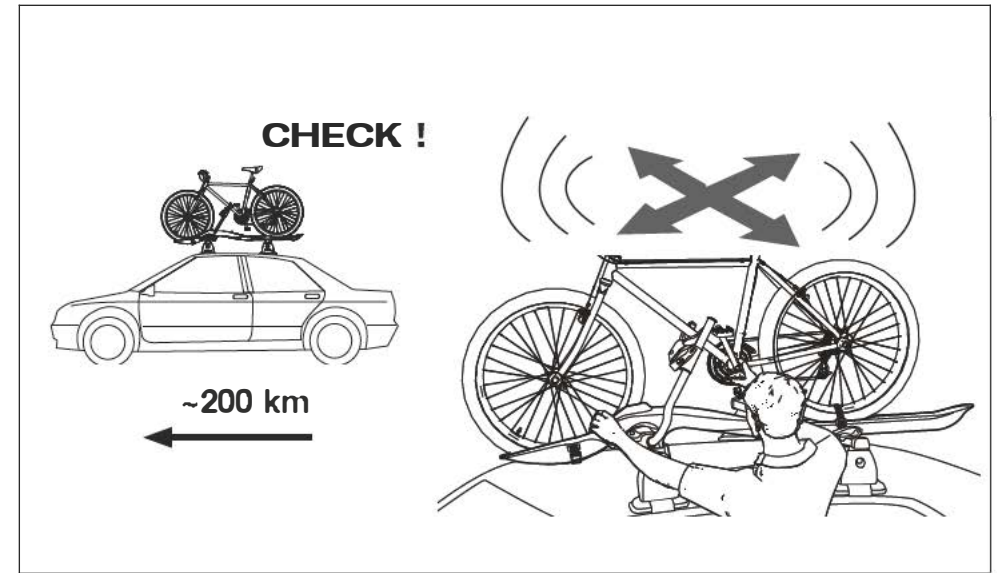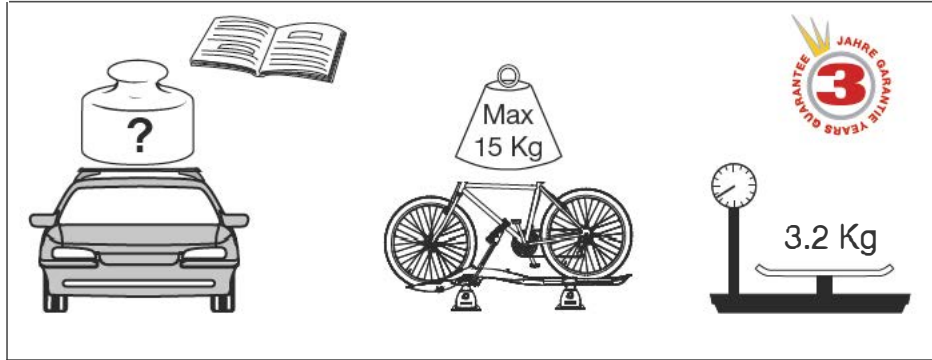


10

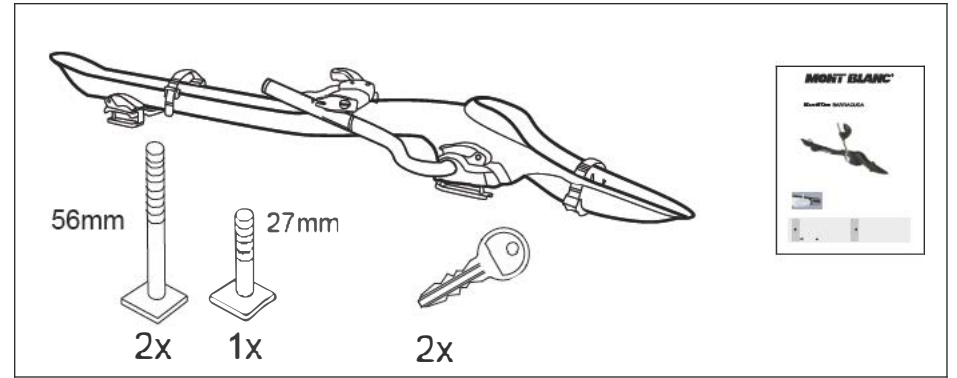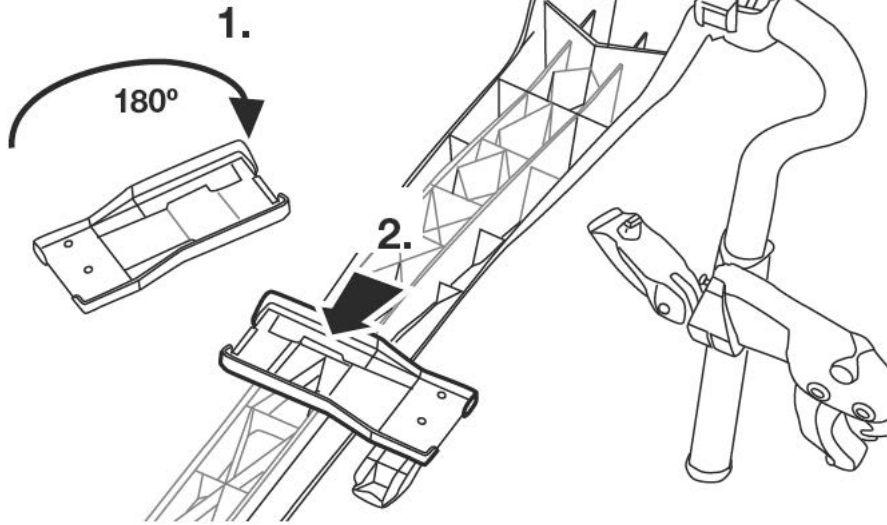


11

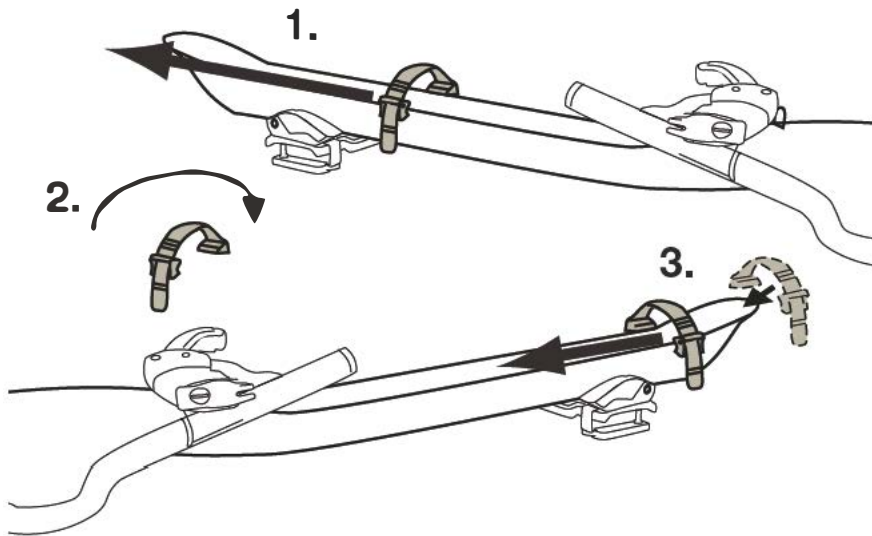


A1

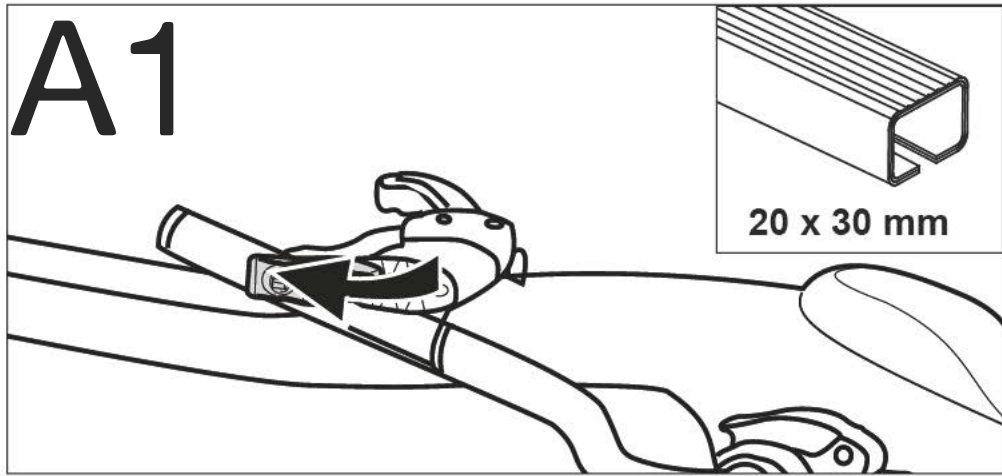


A2

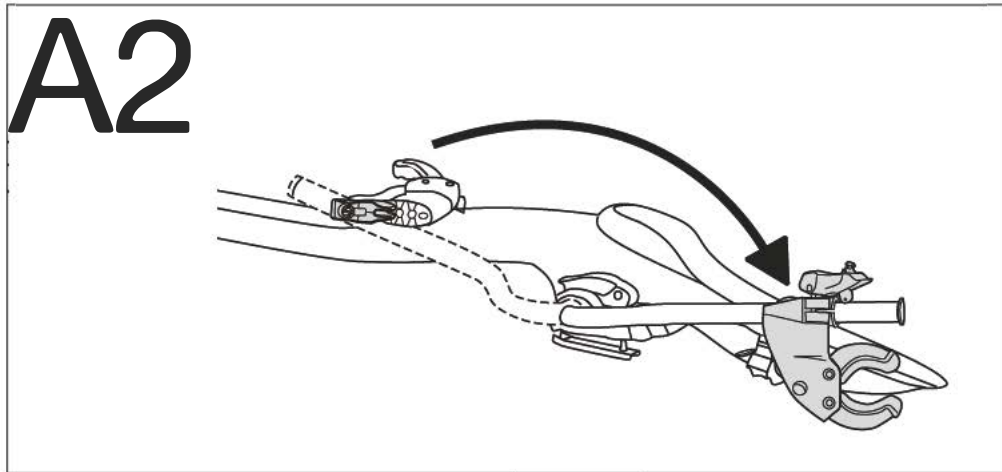


A3




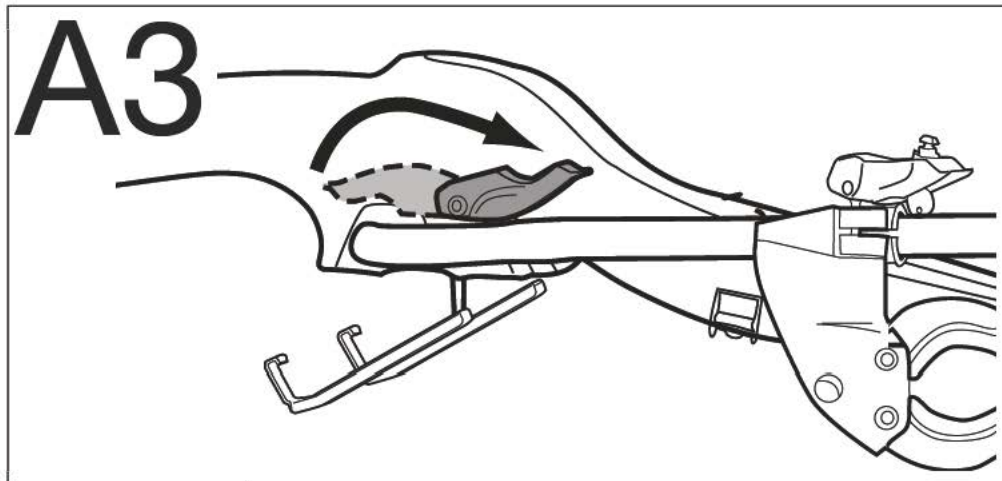







8

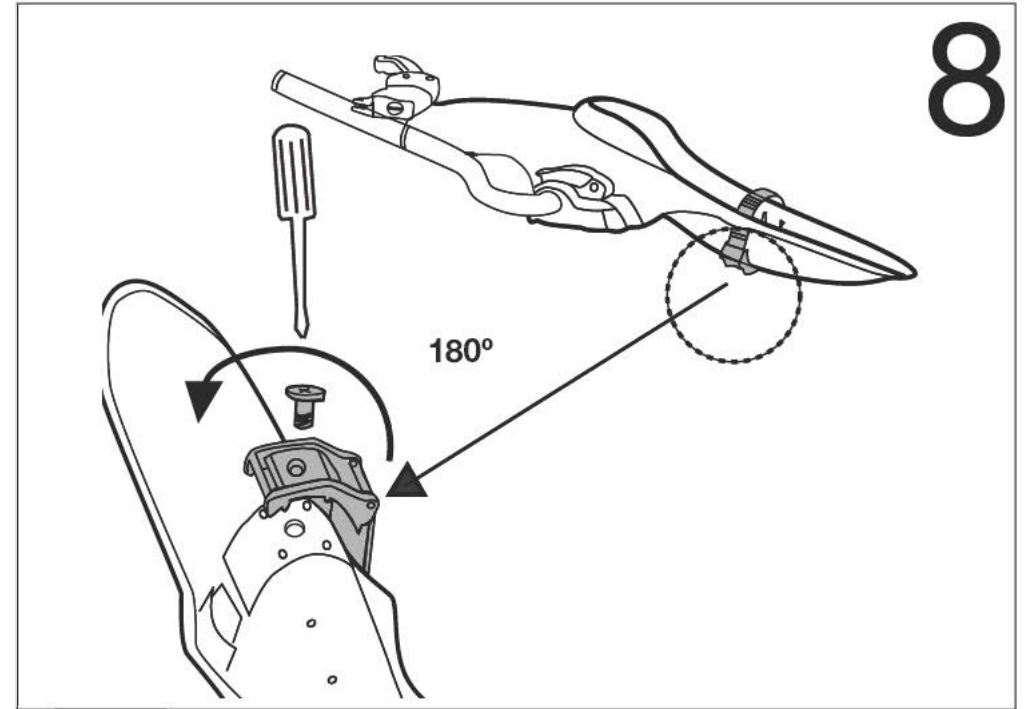


9

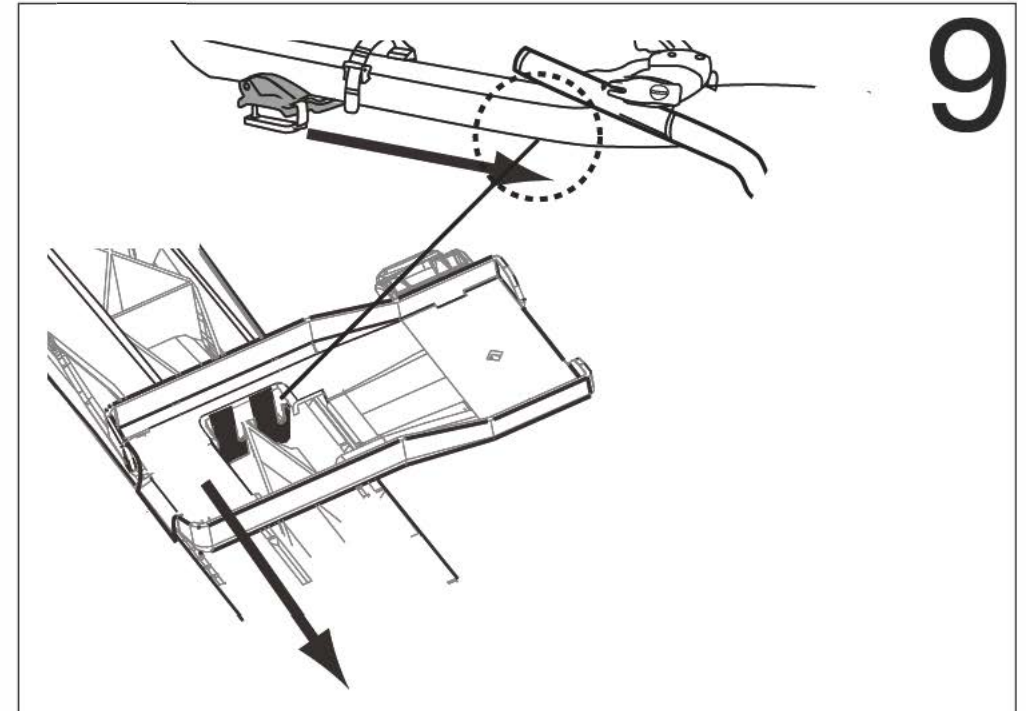

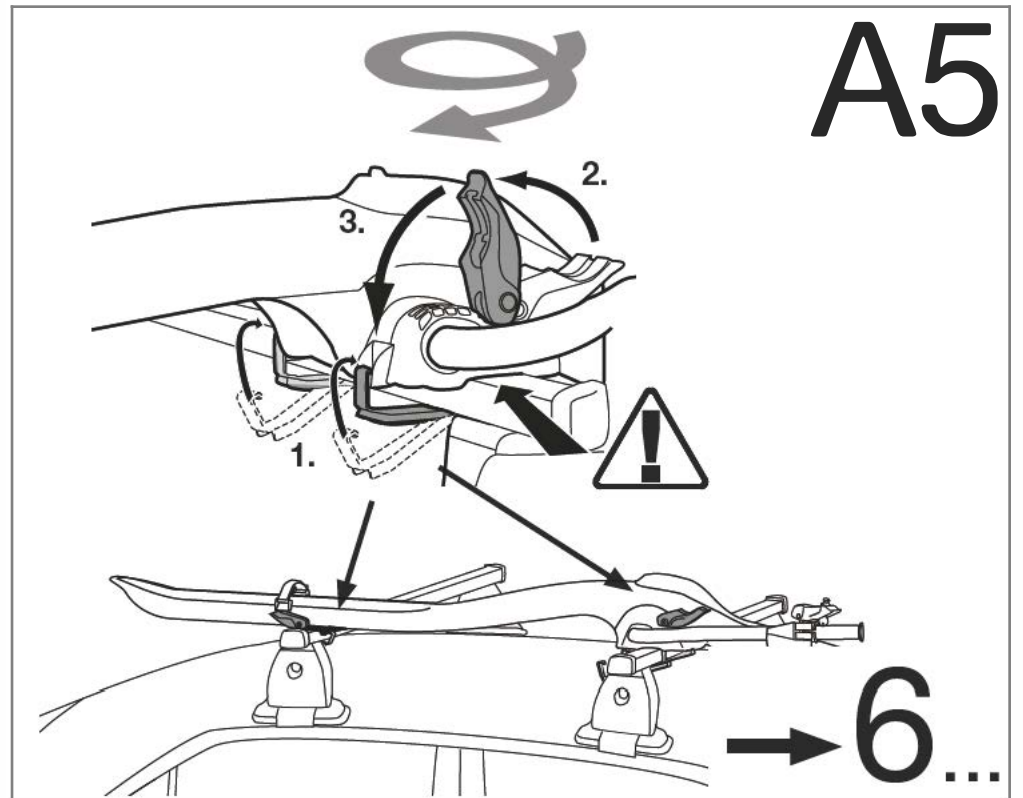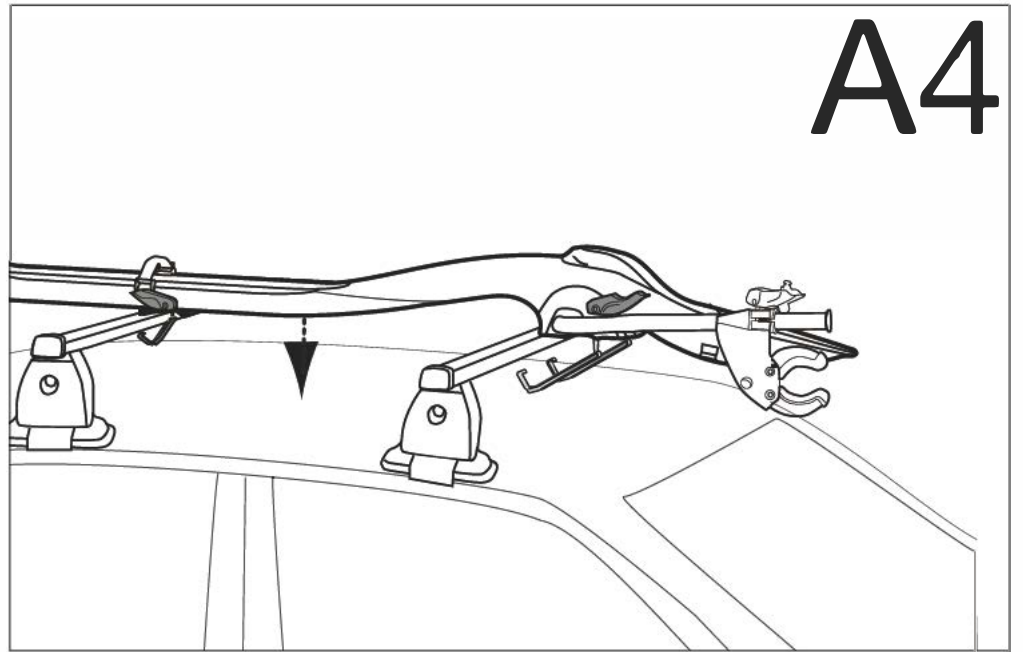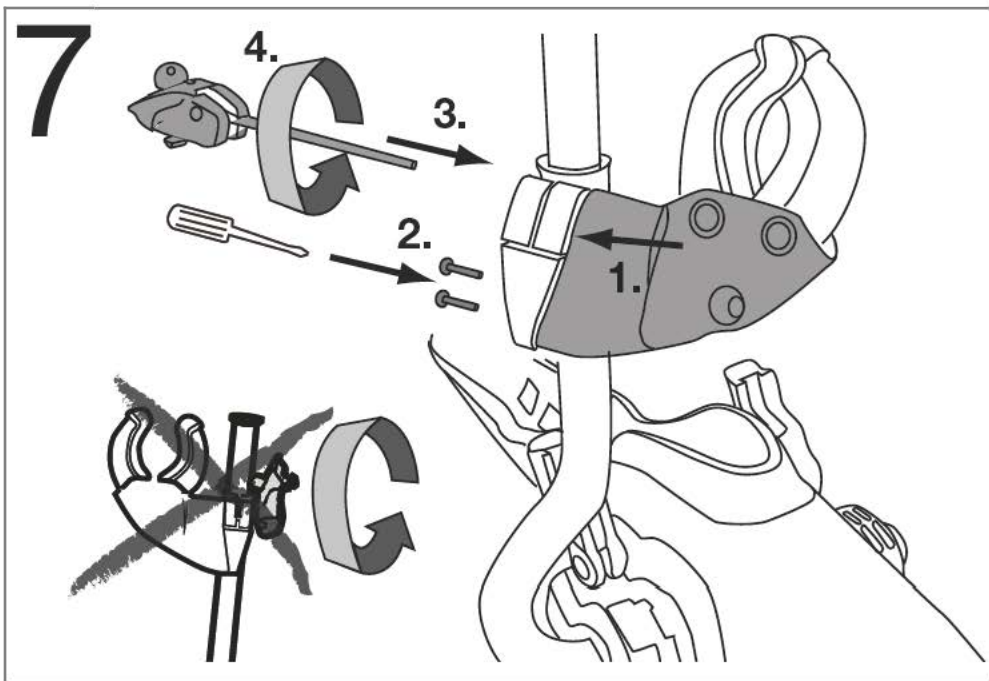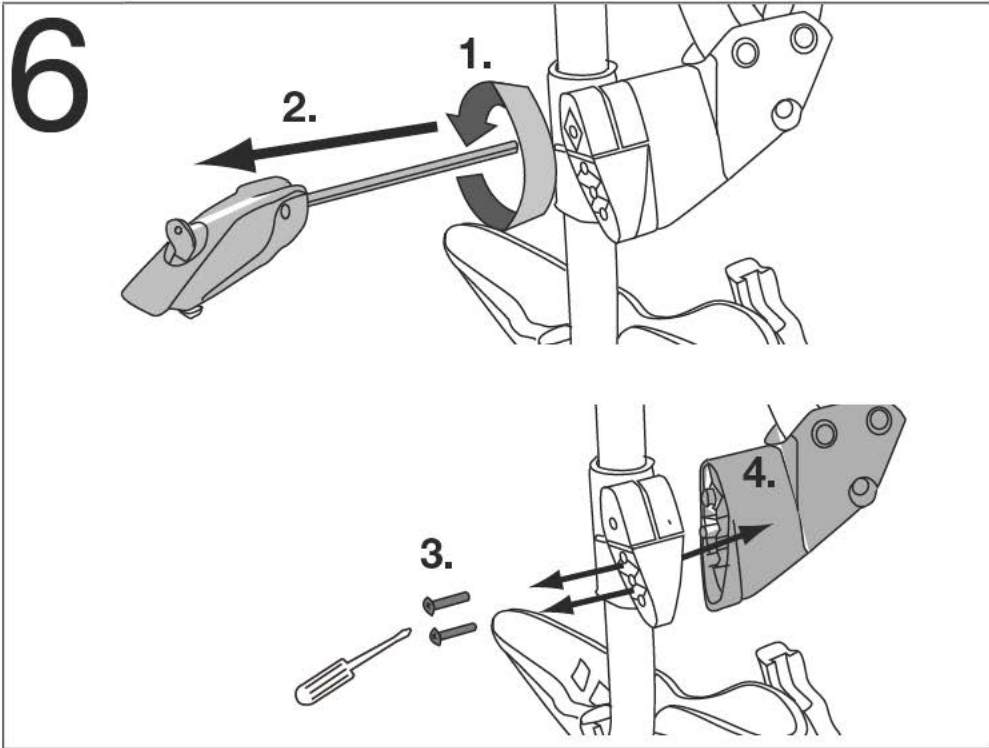


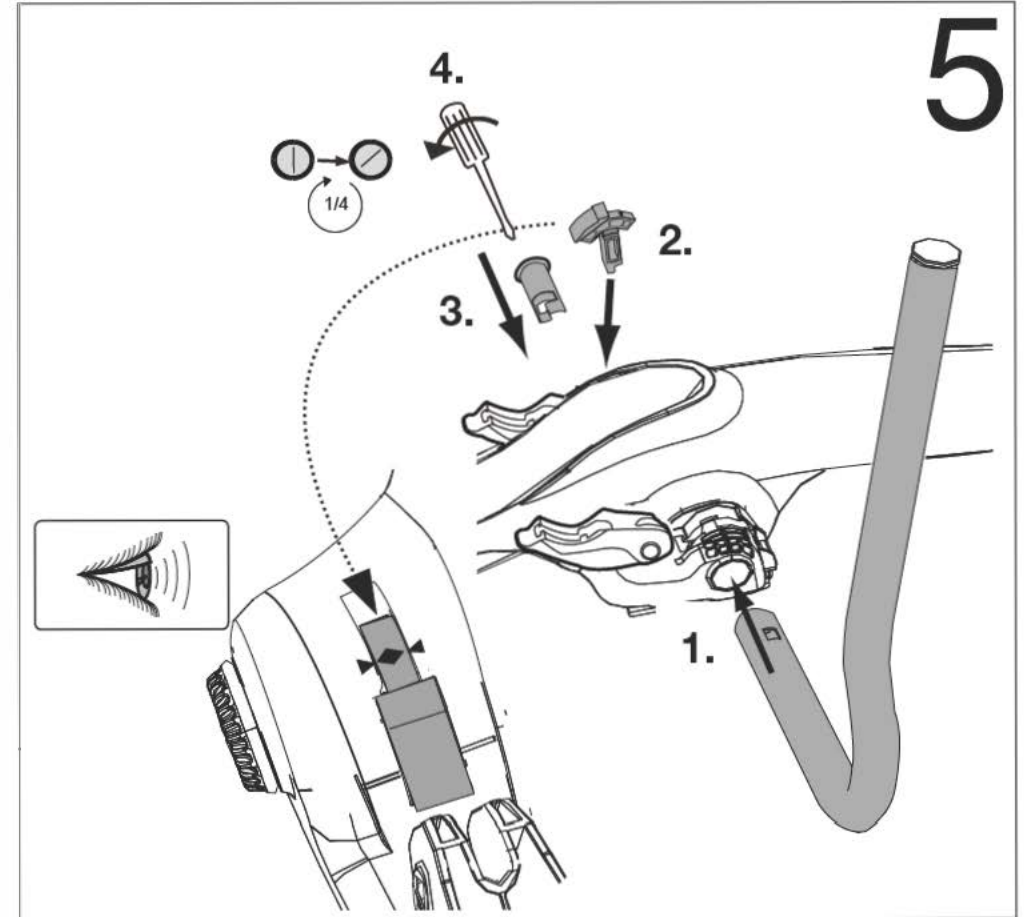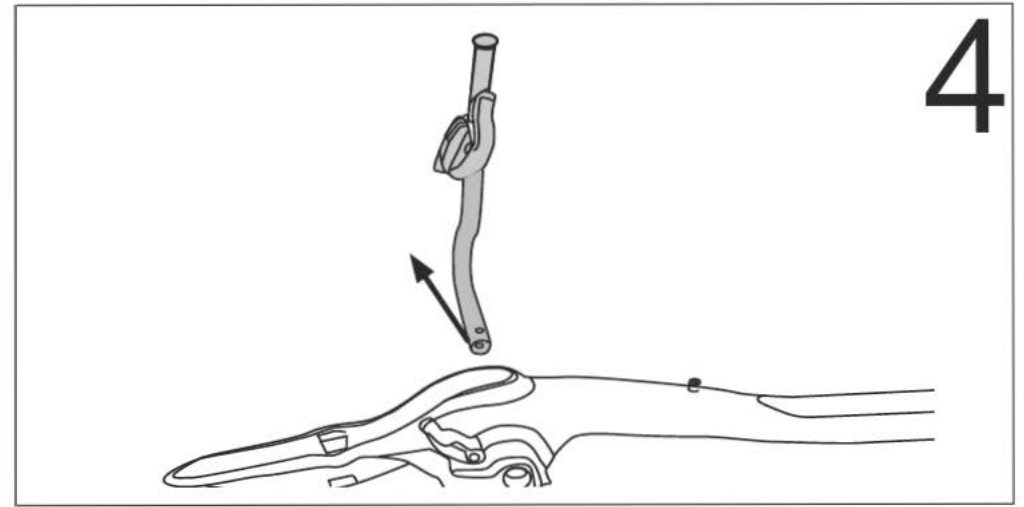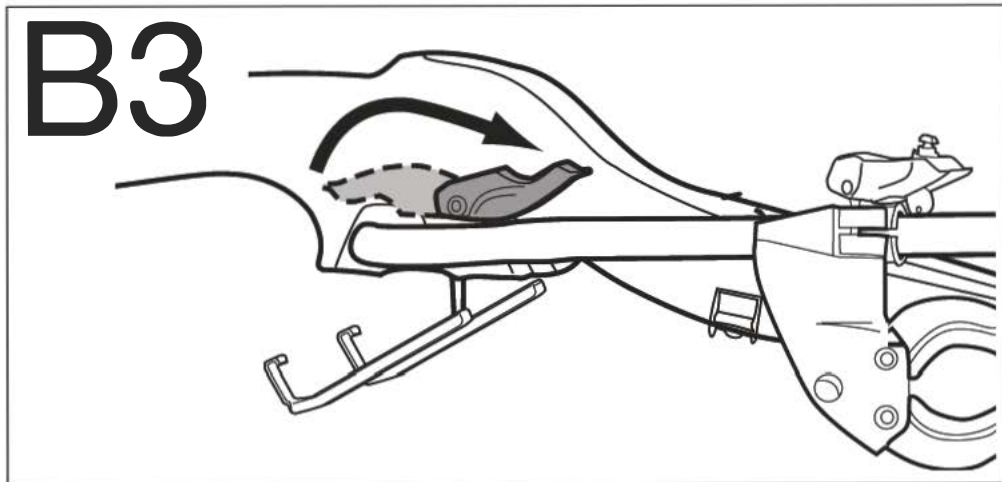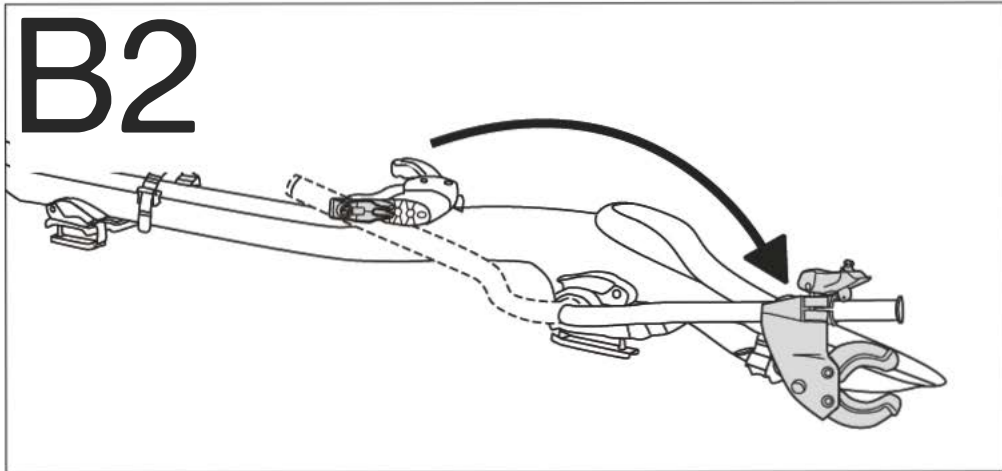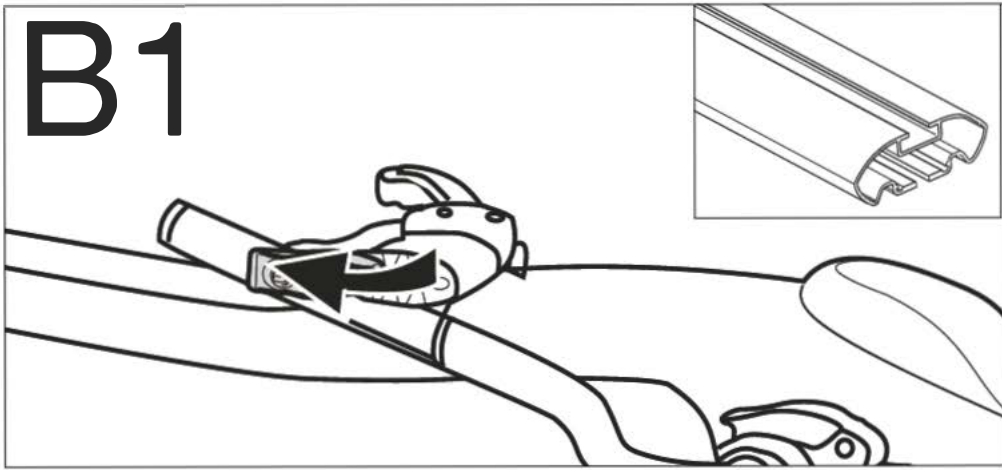


2

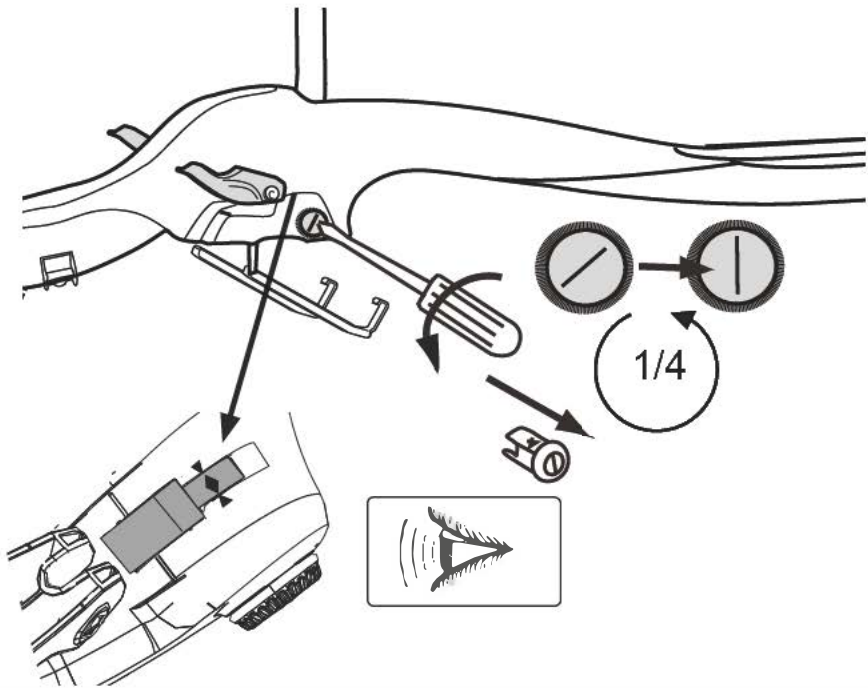


B4

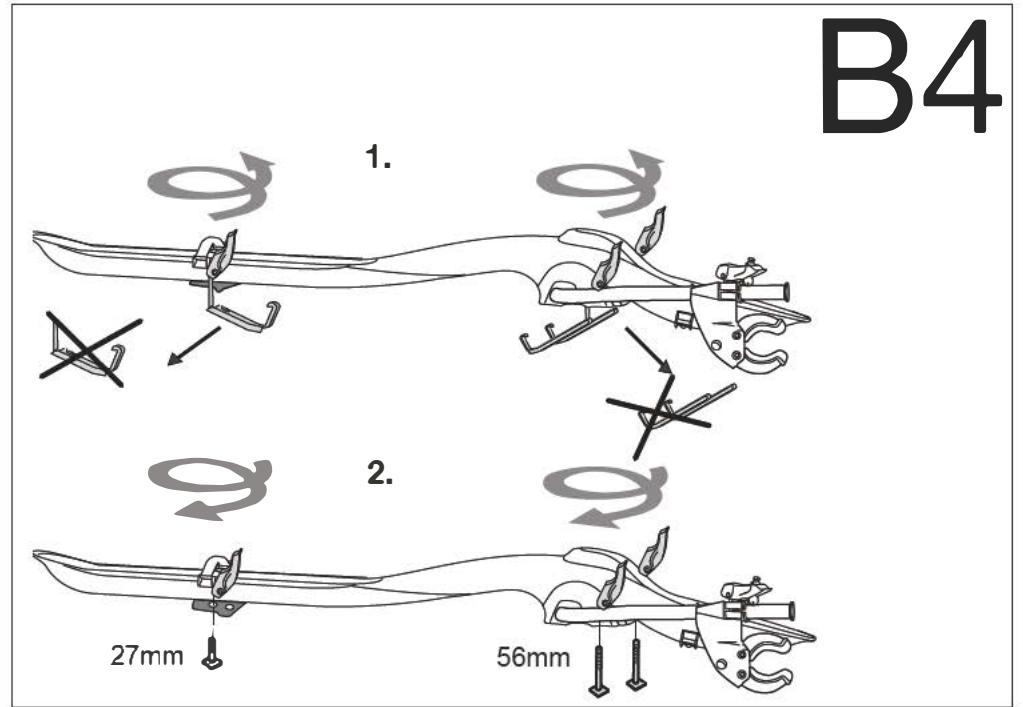

3

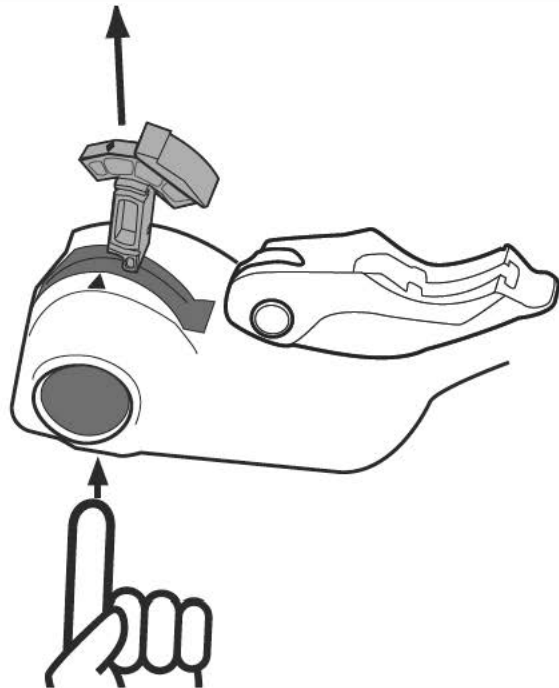

B5

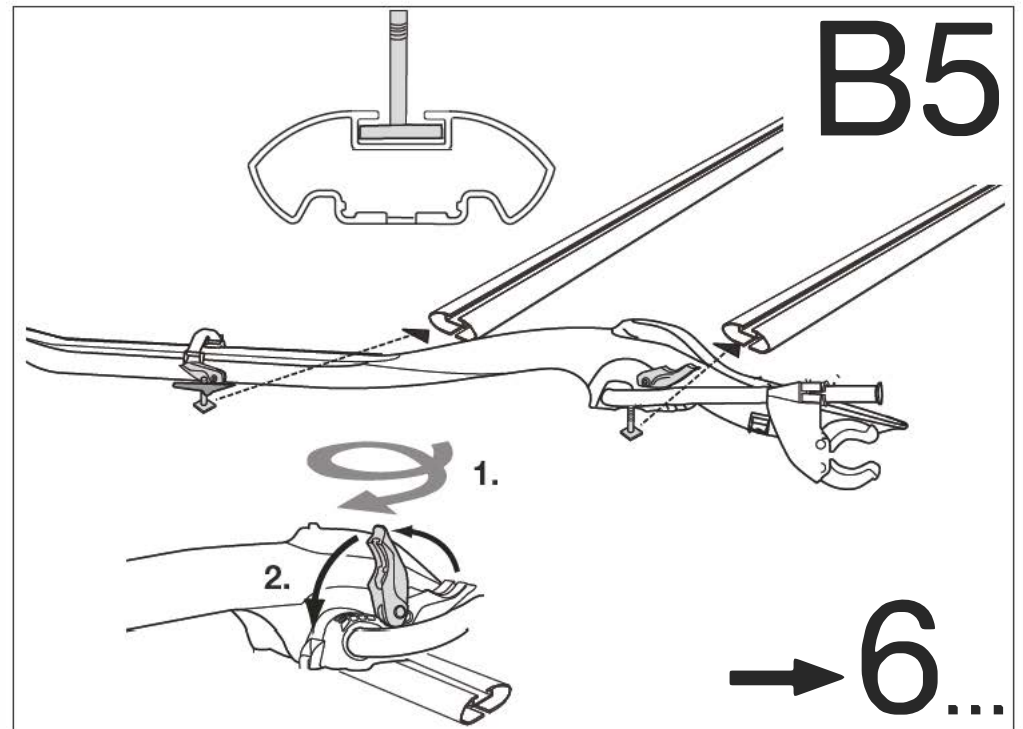

6

