


MONT BLANC®



MontBlanc BARRACUDA




WARNING !

- Read these instructions carefully before using the product for the first time.
- Assemble and fit the product using these instructions only.
- Keep instructions in car.
- Be sure to follow the national rules and legislations in force regarding method of application of load carrier and accessories.
- Do not assemble or use this product unless you have understood the fitting instruction.

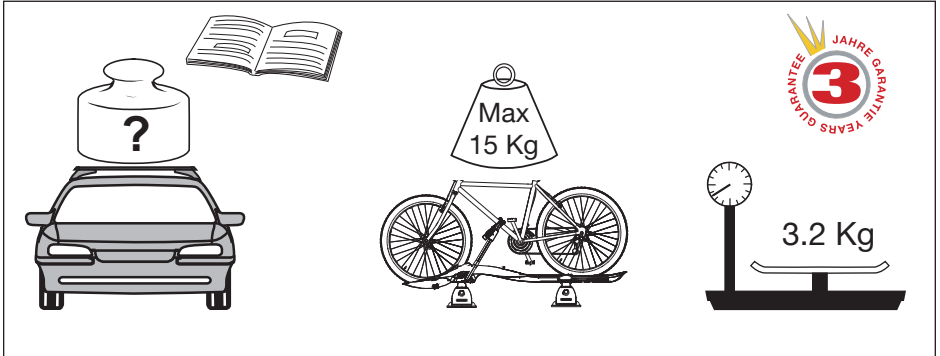


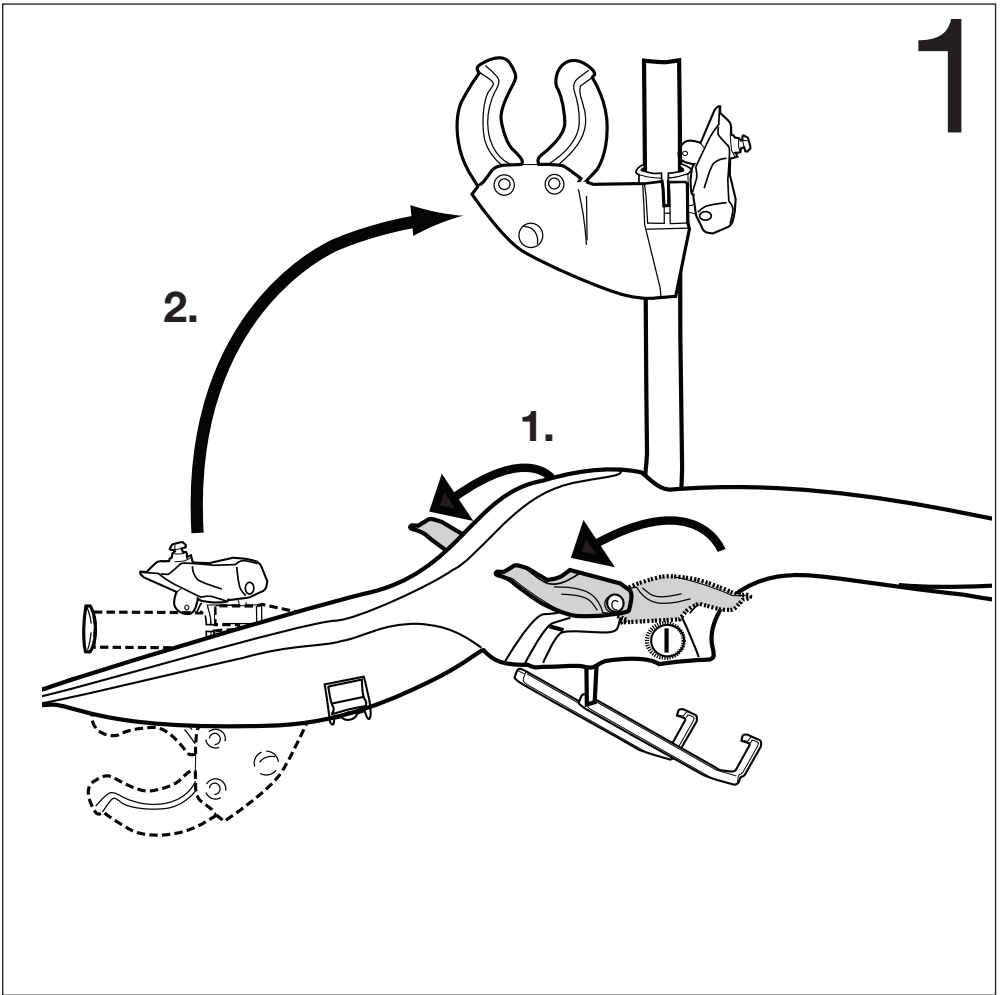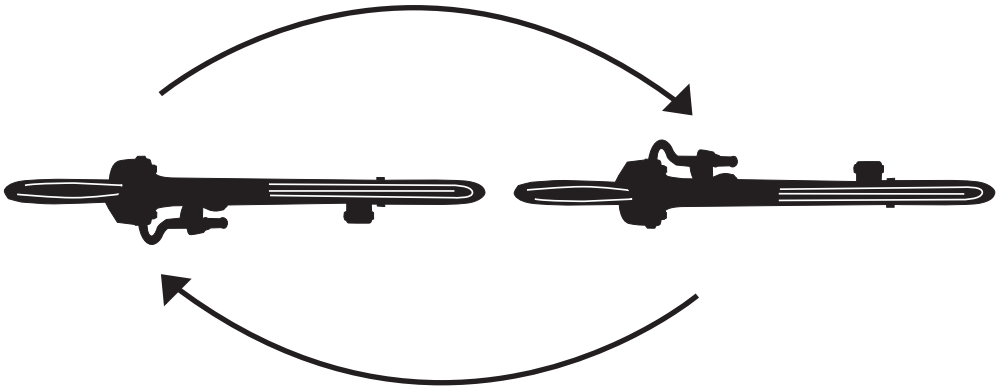


2

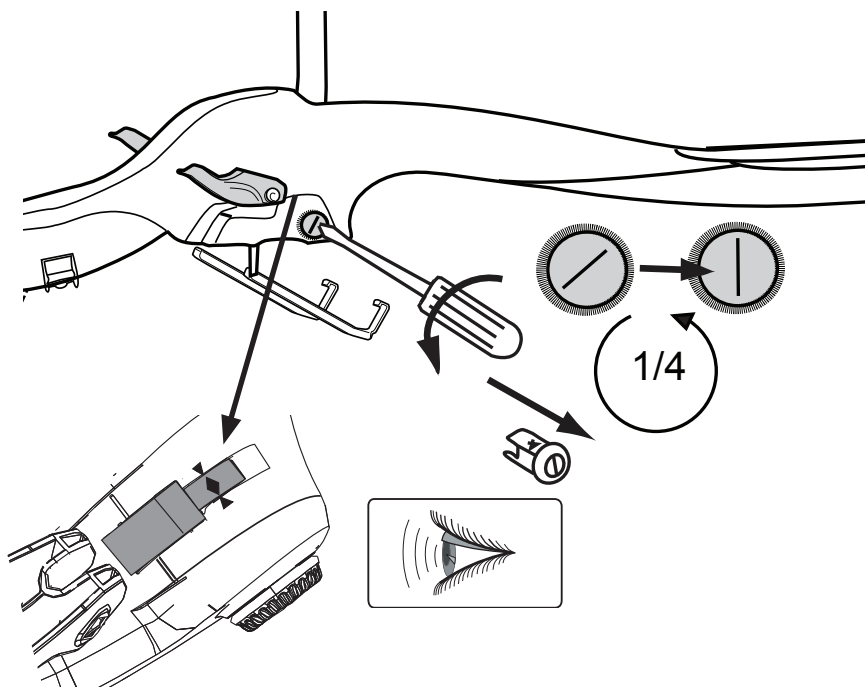


3

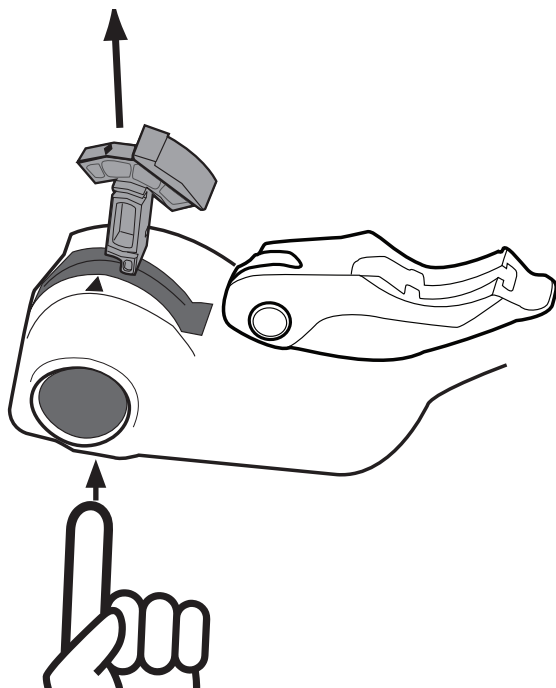


4

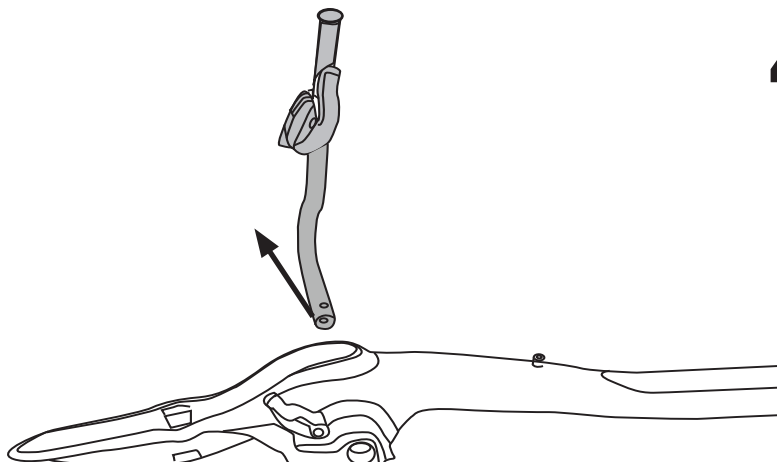

5

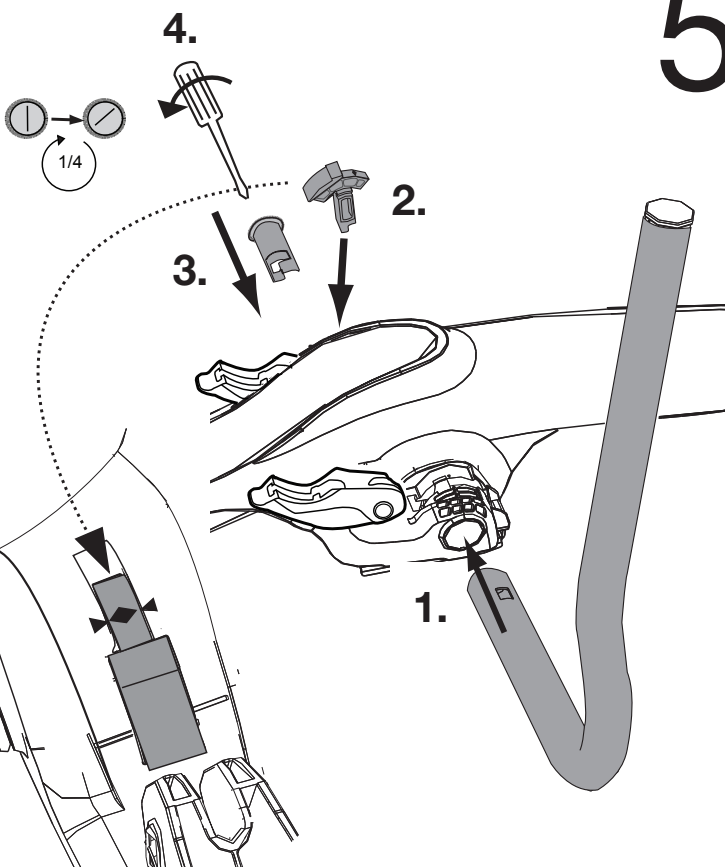


6




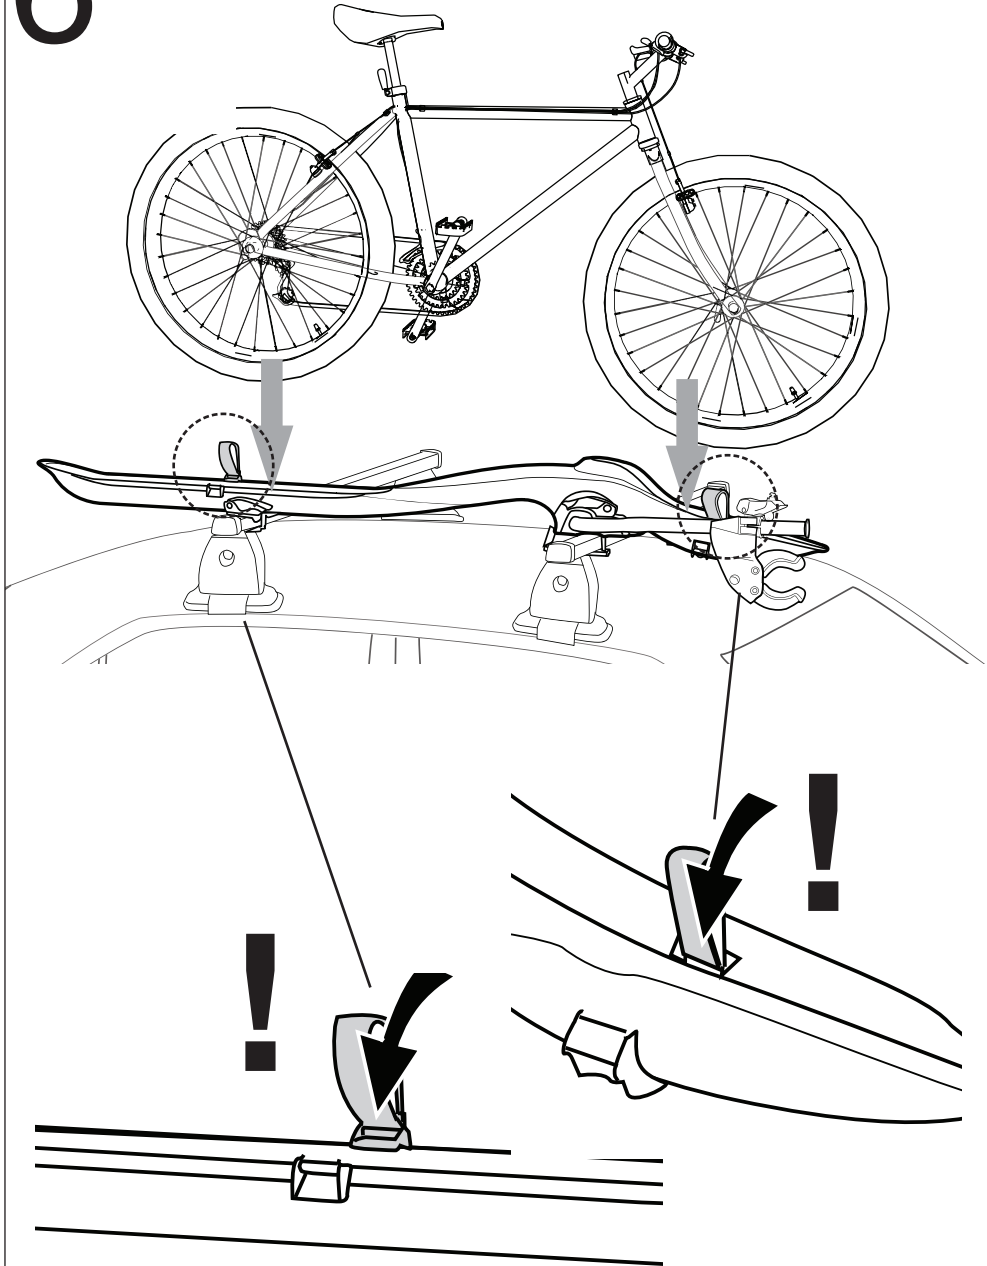


7


min 20mm - max 80mm

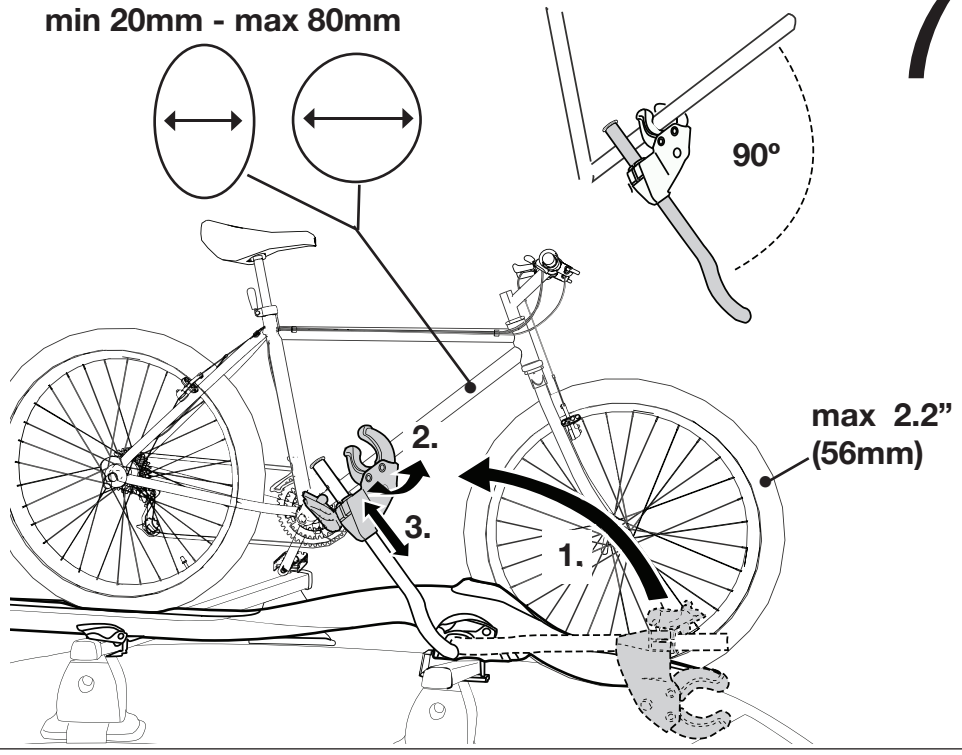



8

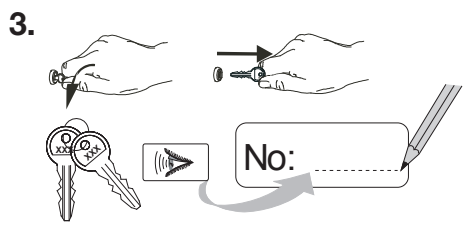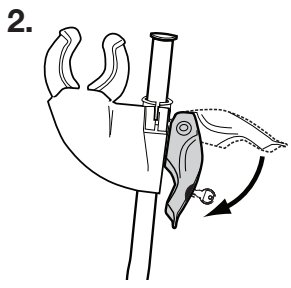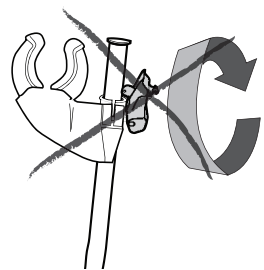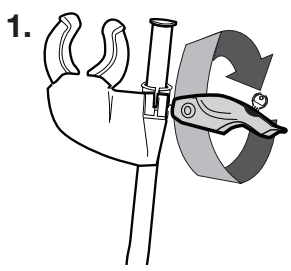



9

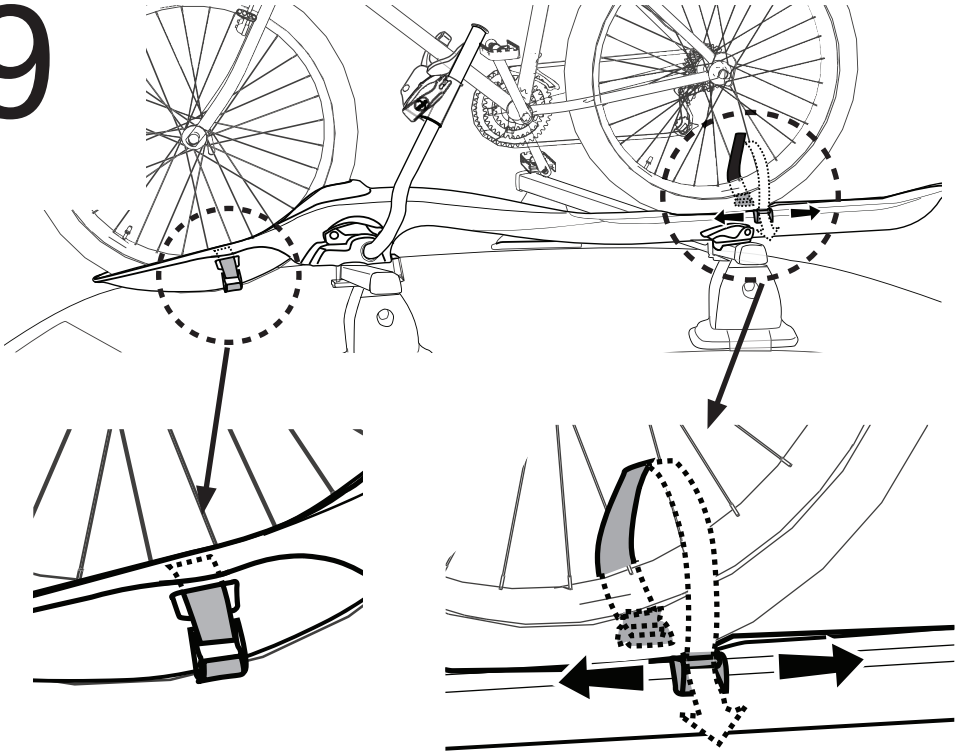

10

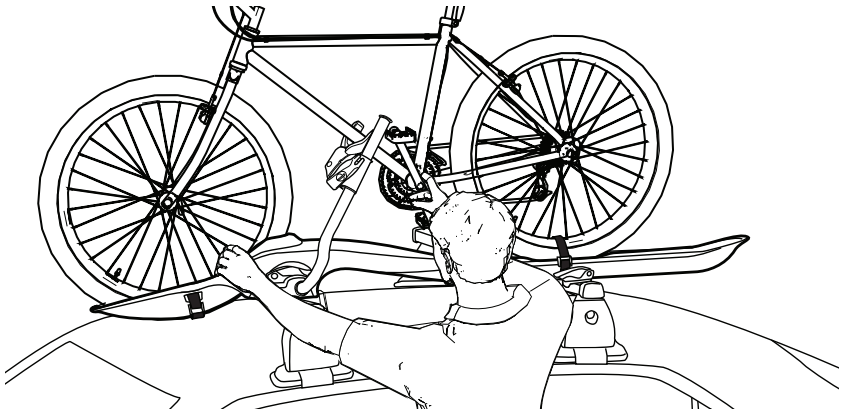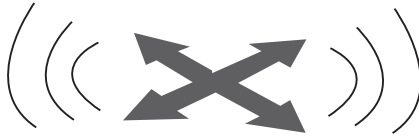


0x 

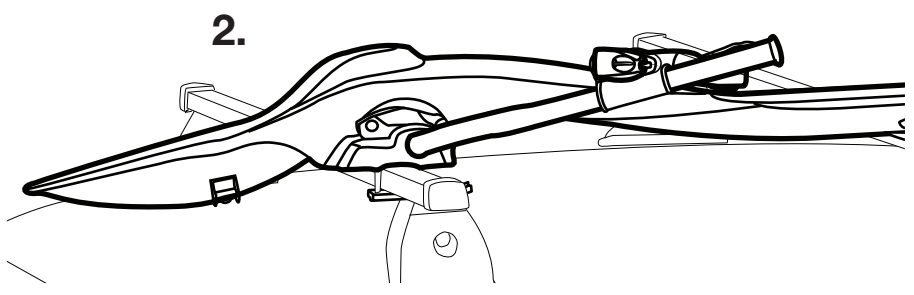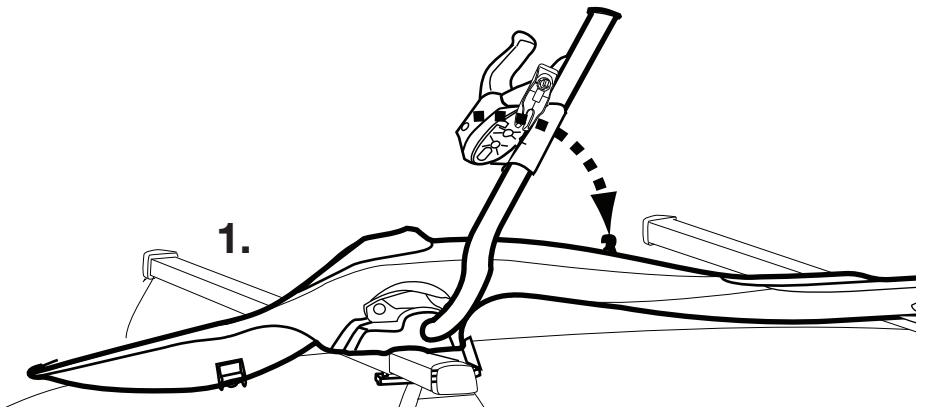


A1




A2

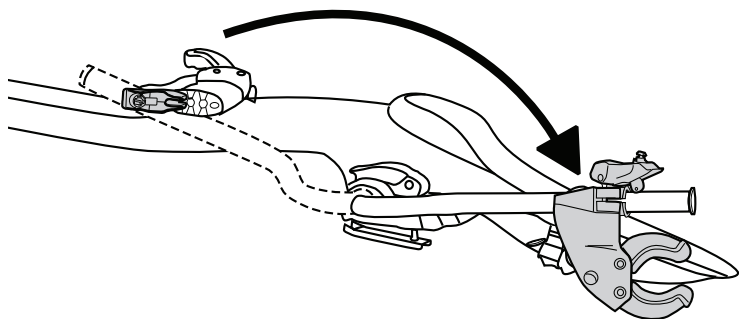


A3

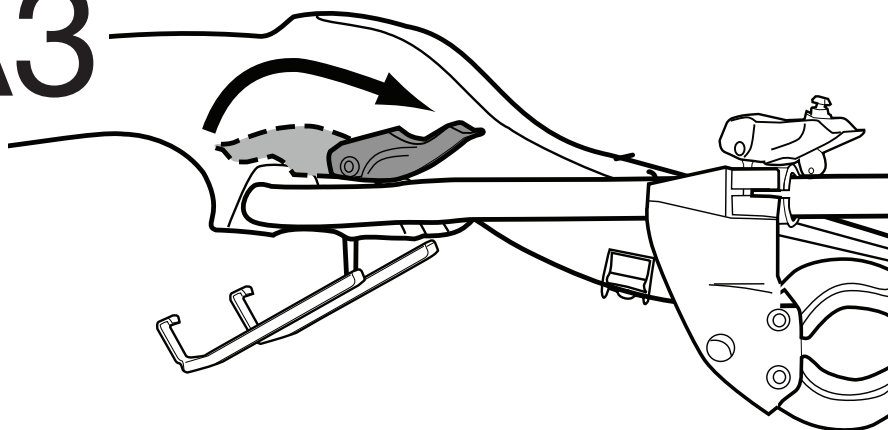


A4

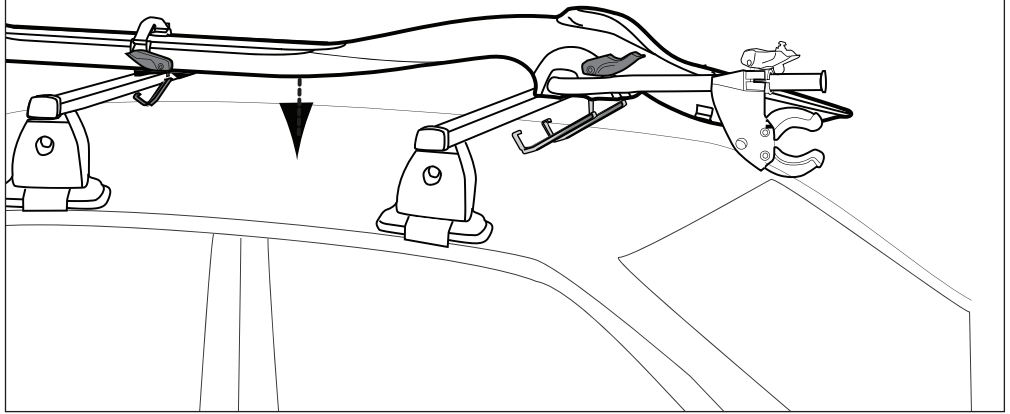


A5

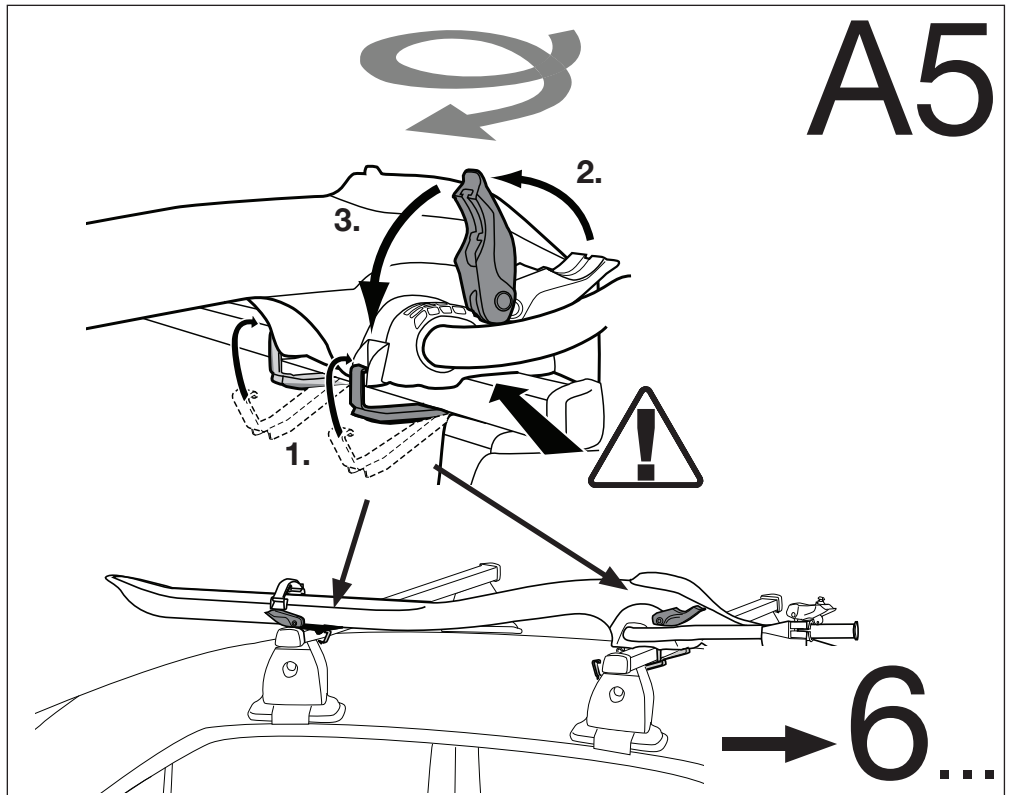


B1

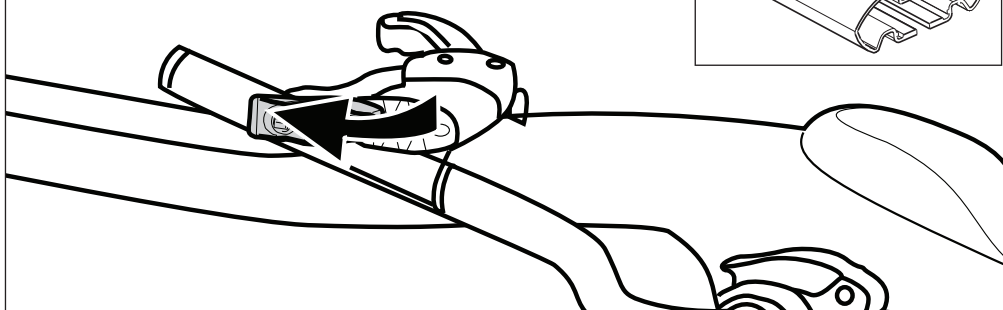


B2

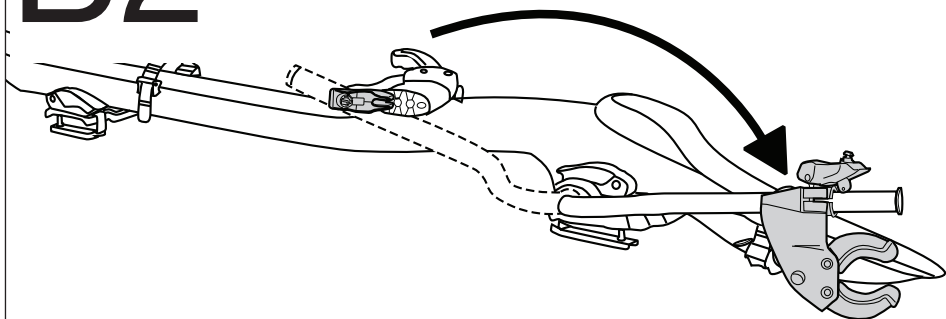


B3

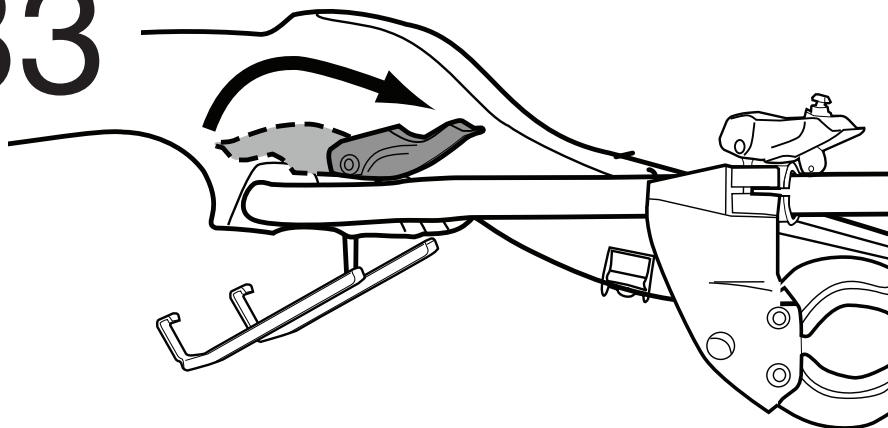



B4

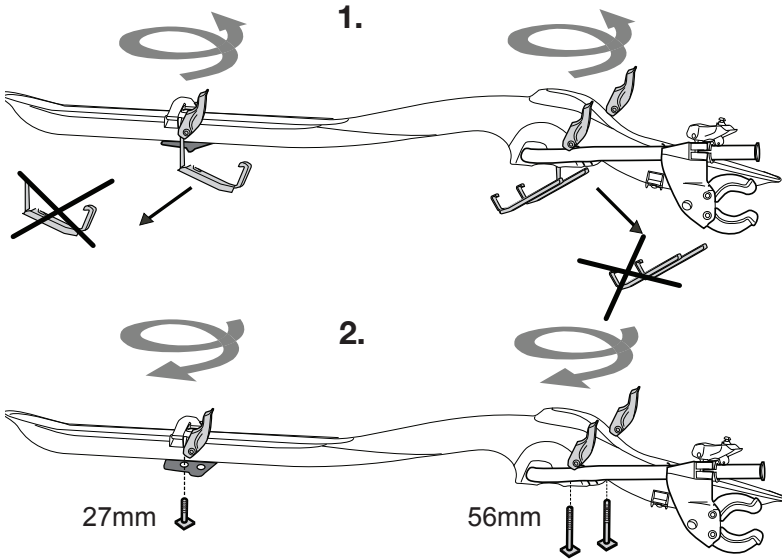


B5

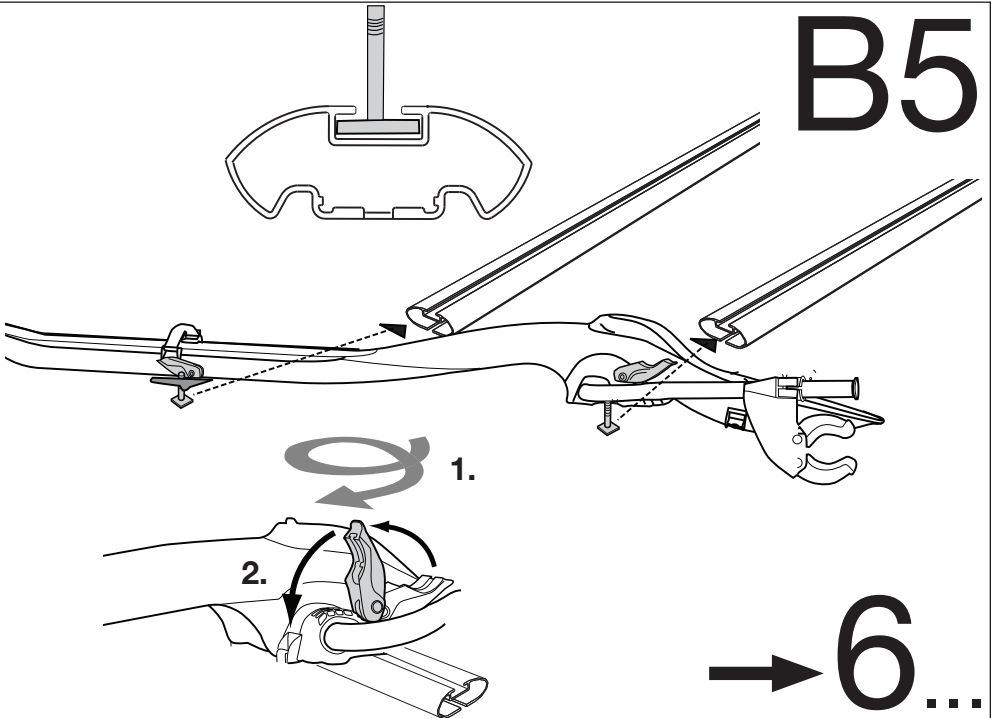


6

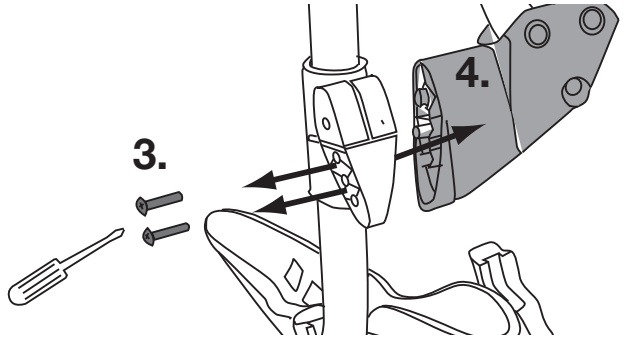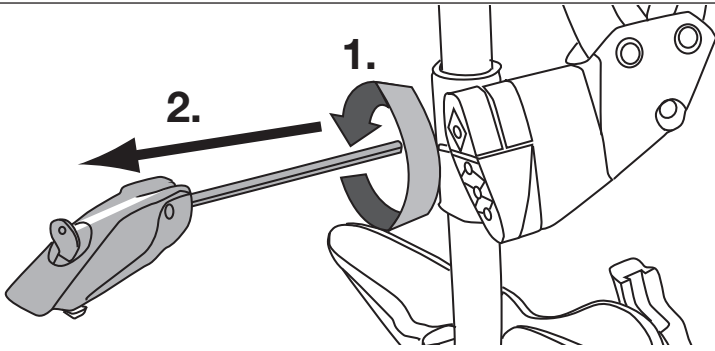


7

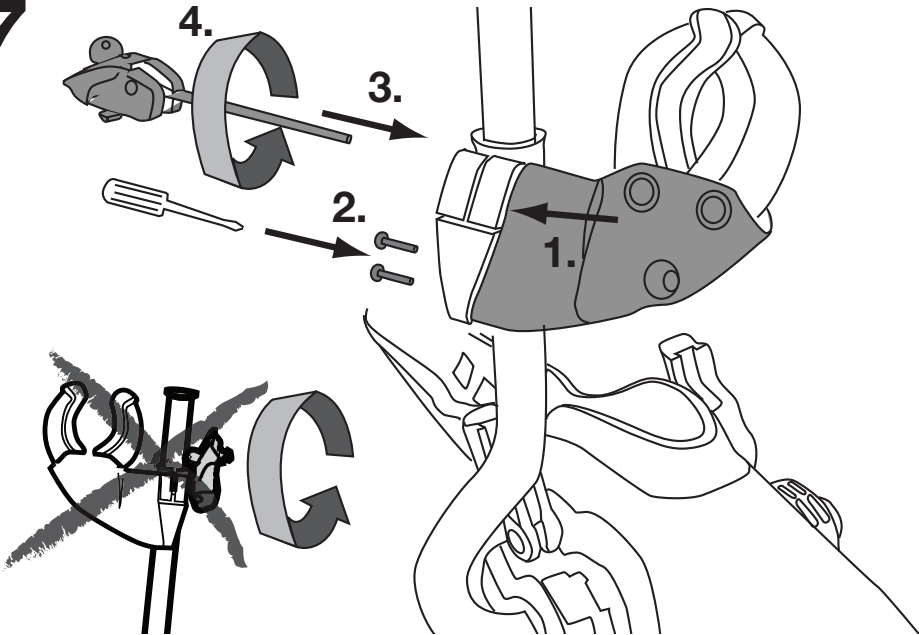


8

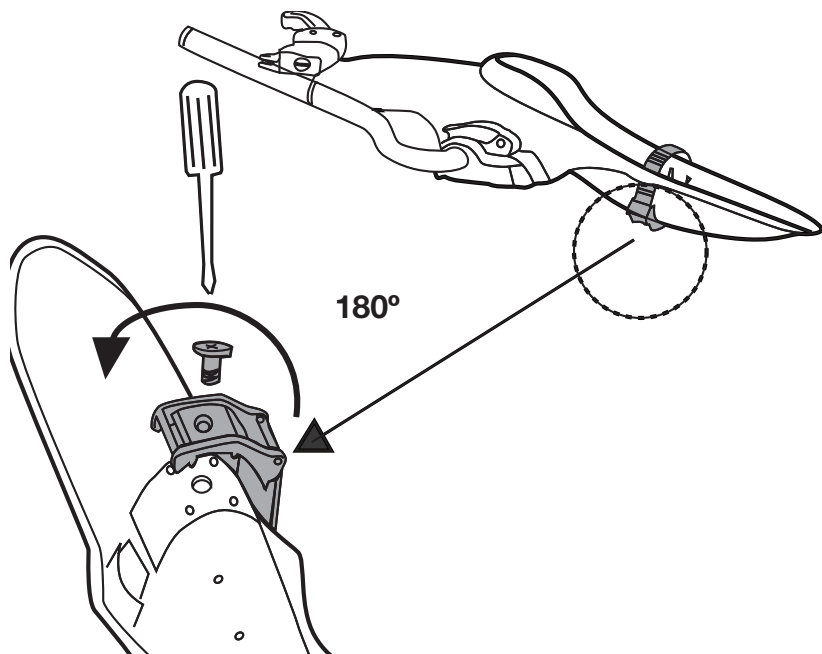


9

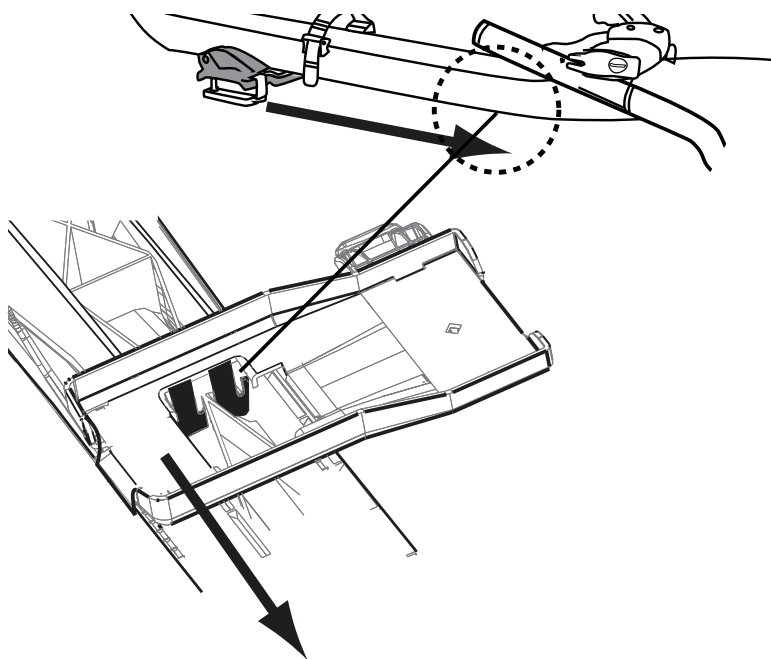

10

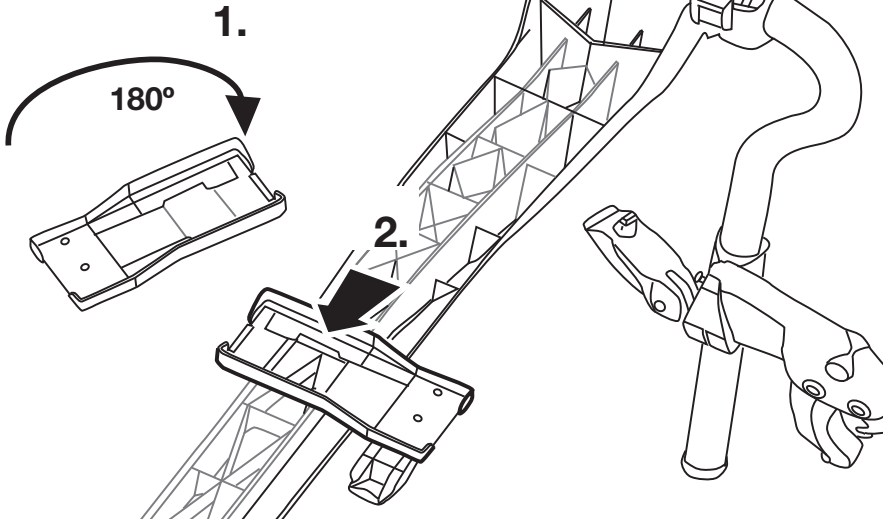

11

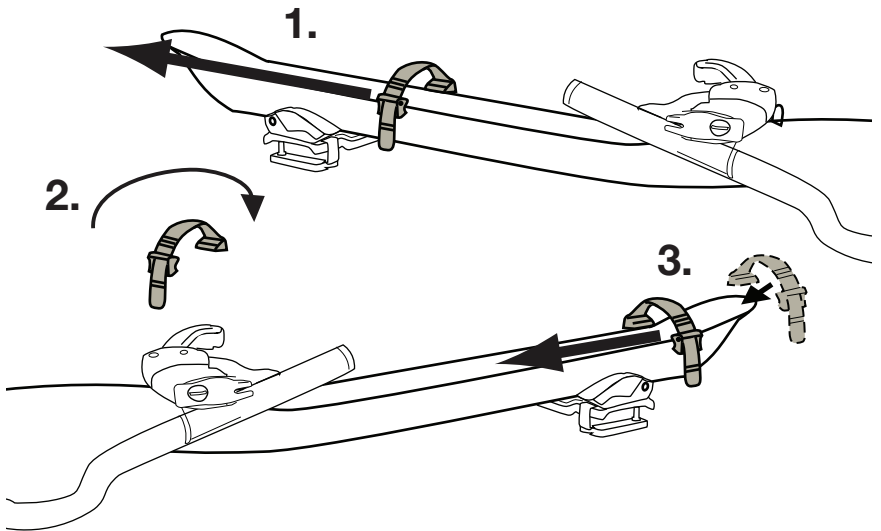




210mm




270mm




2x

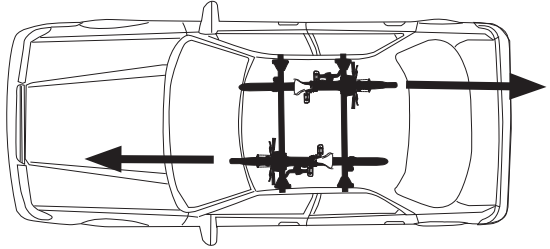


3x

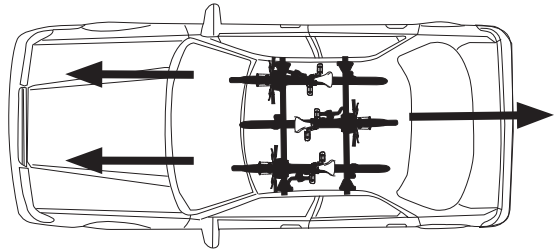




4x

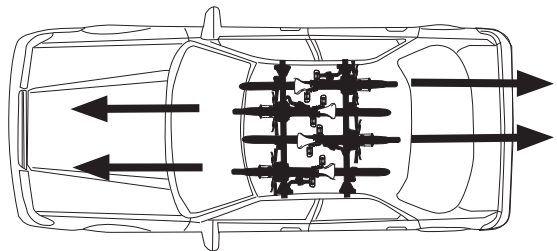

CHECK !

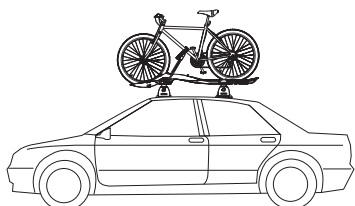

~200 km

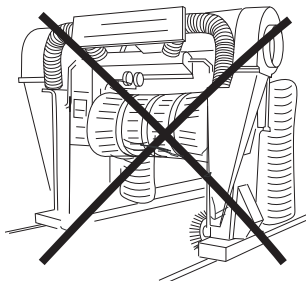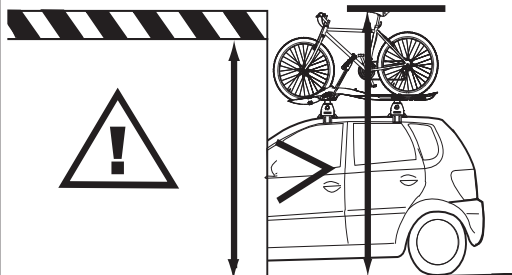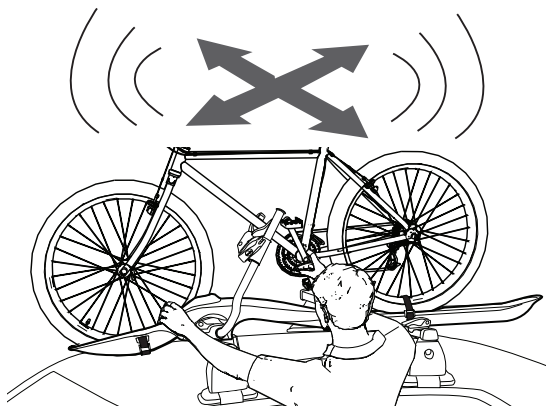

Spare parts

