





MontBlanc McKinley & Everest

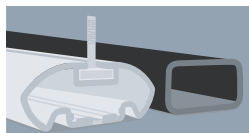

Fitting instructions

WARNING !


- Read these instructions carefully before using the product for the first time.
- Assemble and fit the product using these instructions only.
- Keep instructions in car.
- Be sure to follow the national rules and legislations in force regarding method of application of load [carrier](#) and accessories.

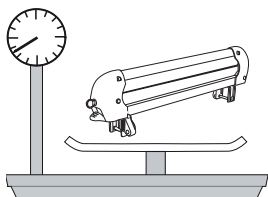


McKinley: 2.0 KG
Everest: 3.0 KG





x2

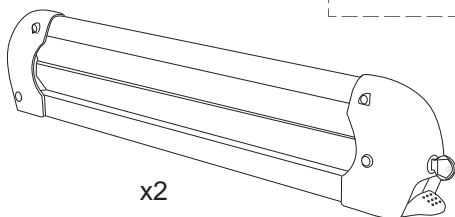

x2

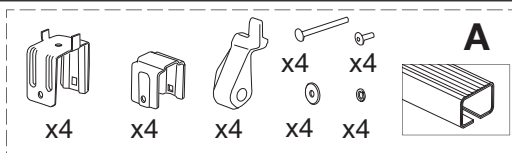

A



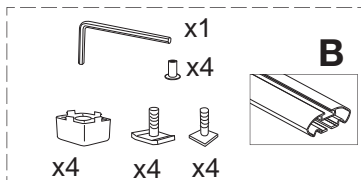
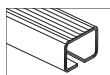


B




x1


A

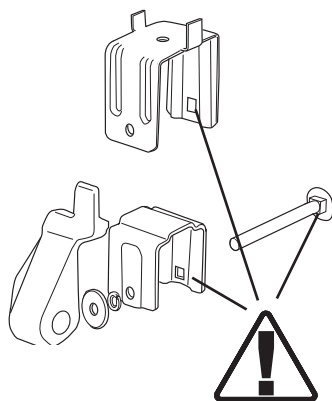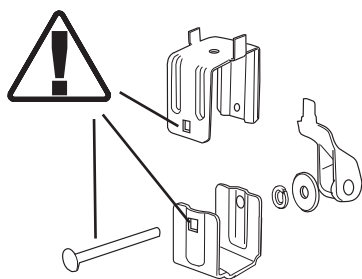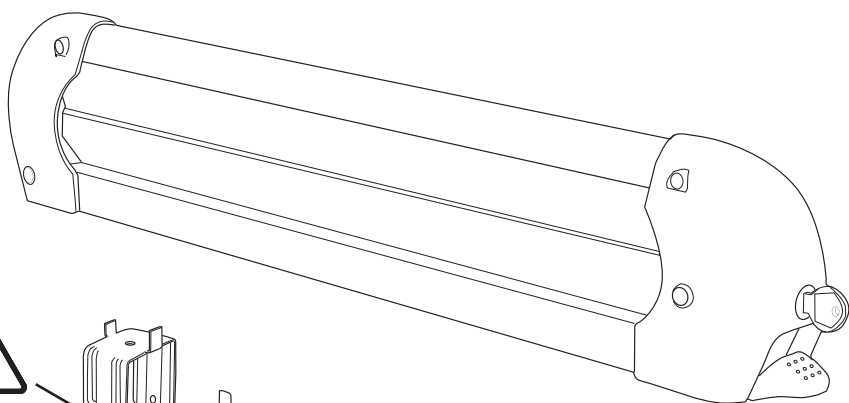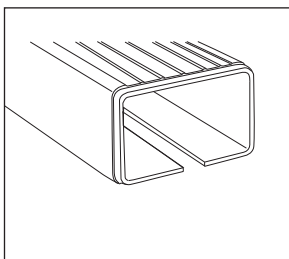


A1

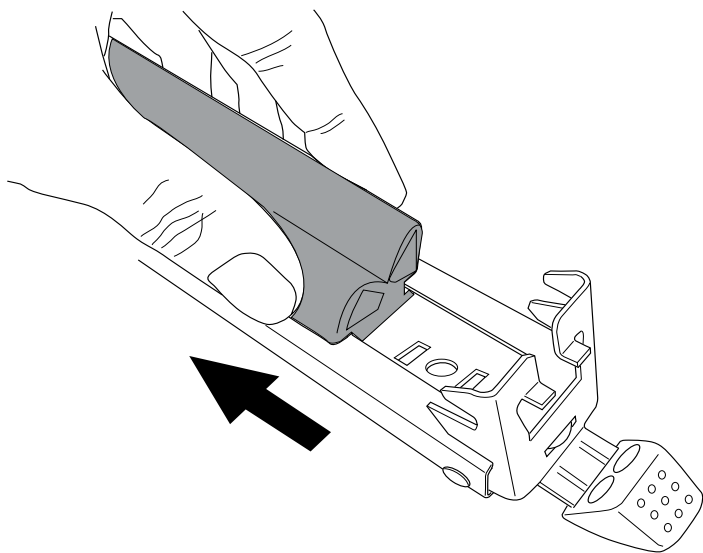


A2

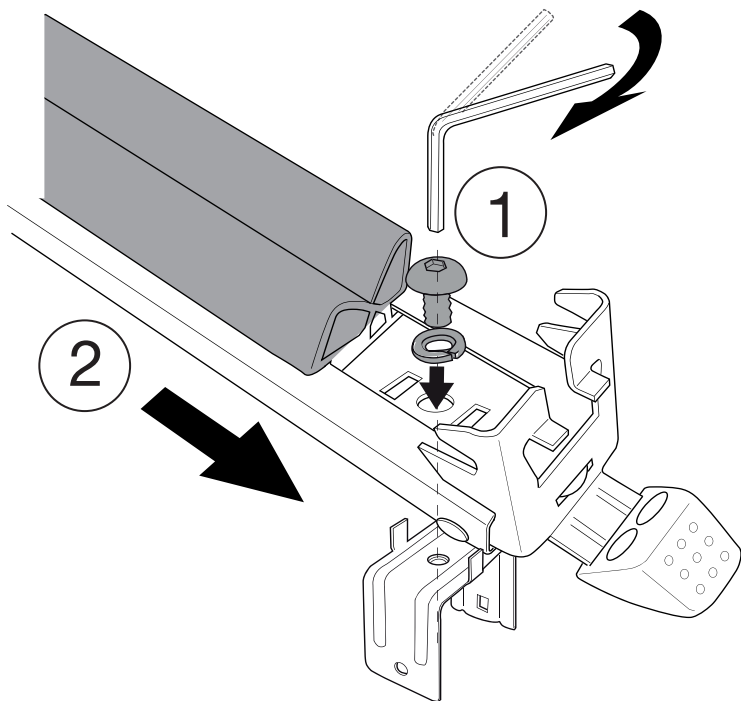


A3

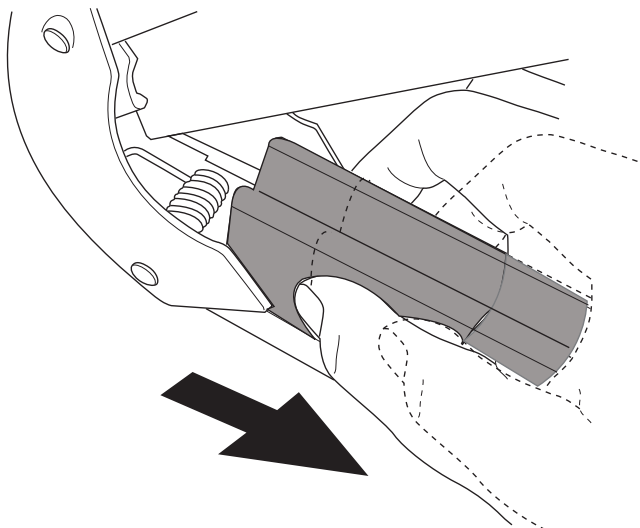


A4

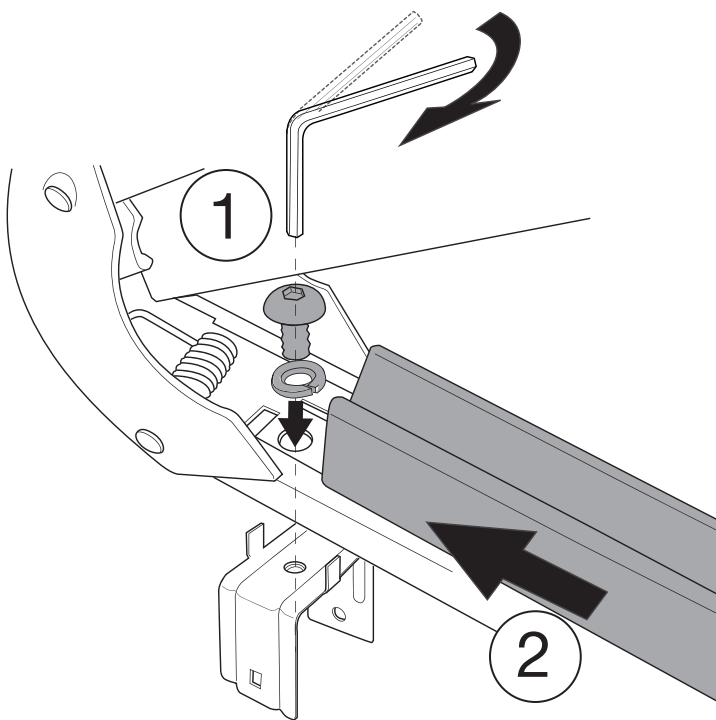



A5

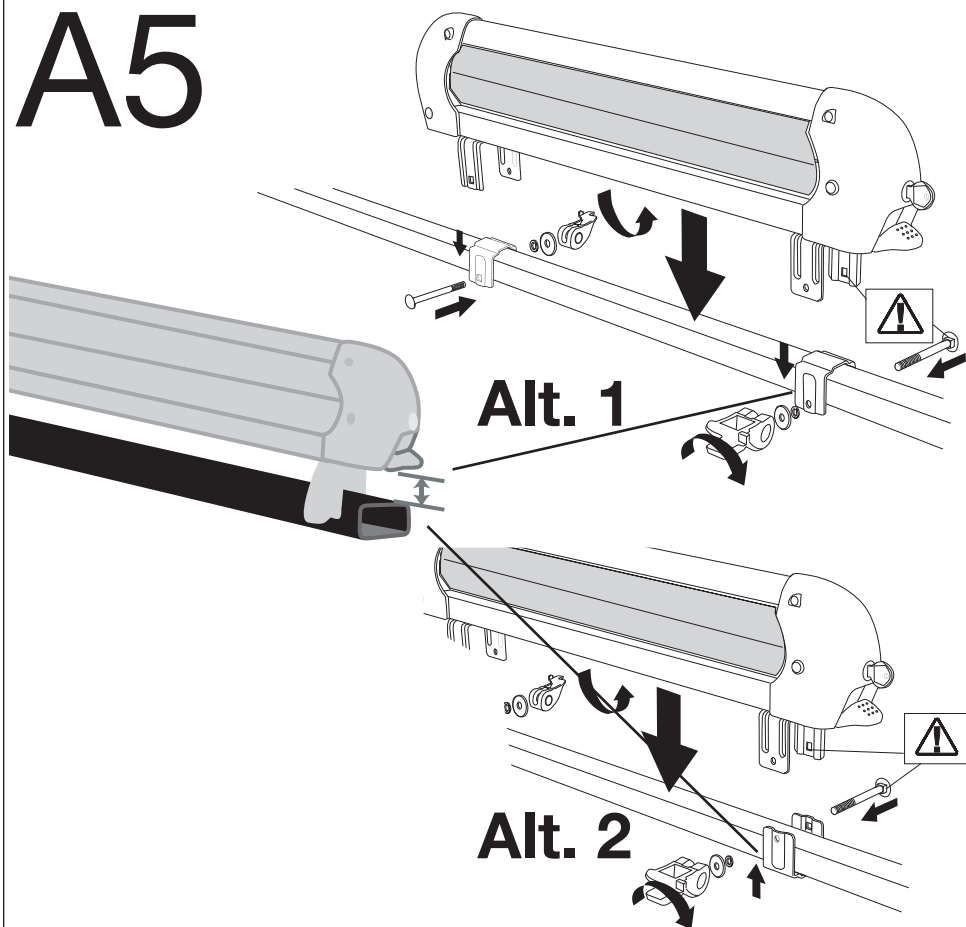


A6

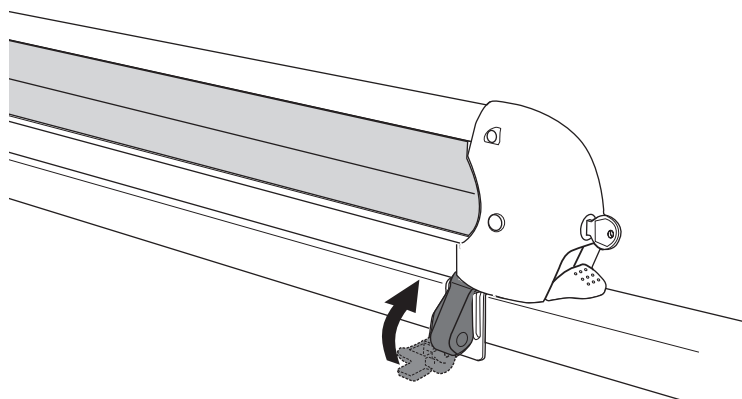


B

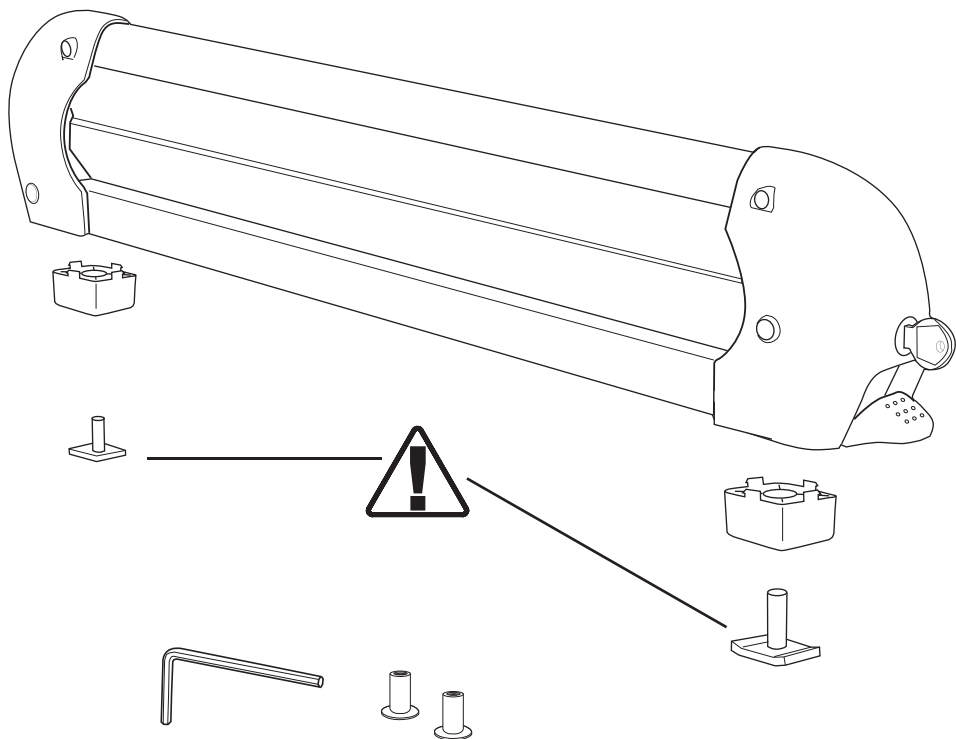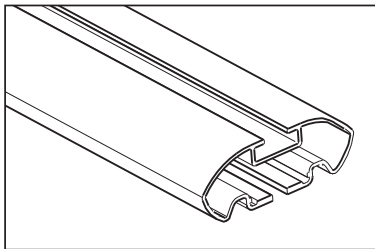


B1

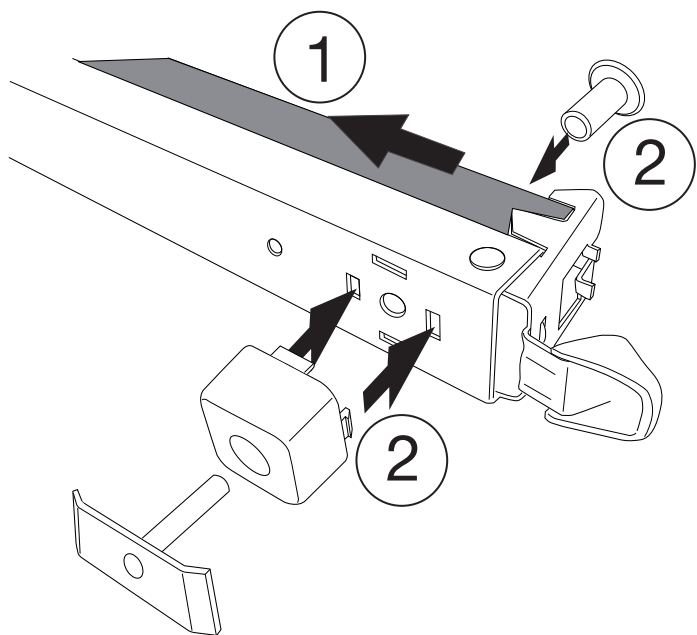


B2

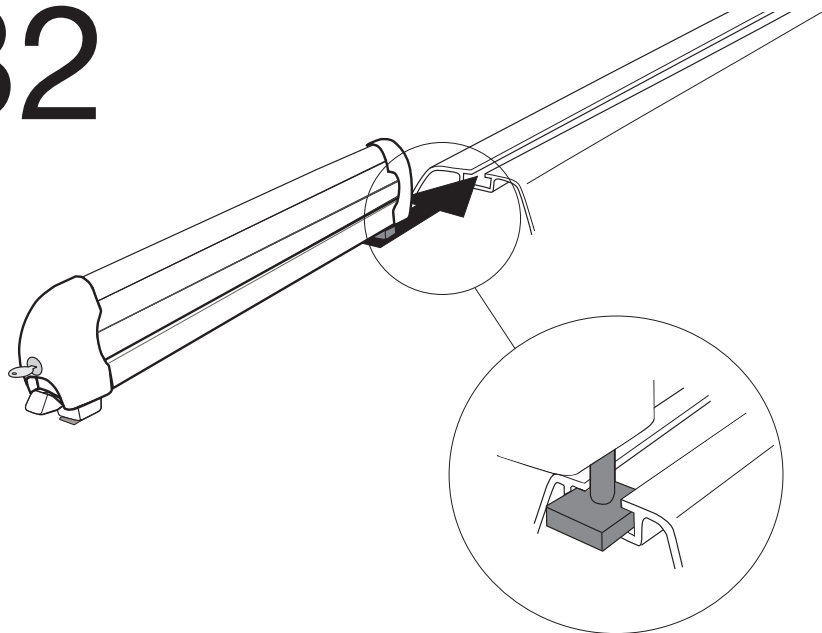


B3

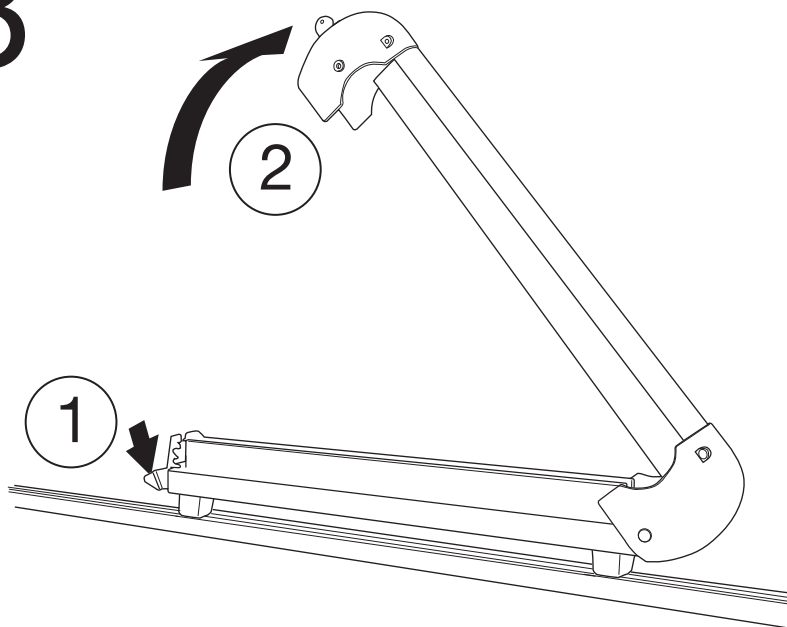


B4

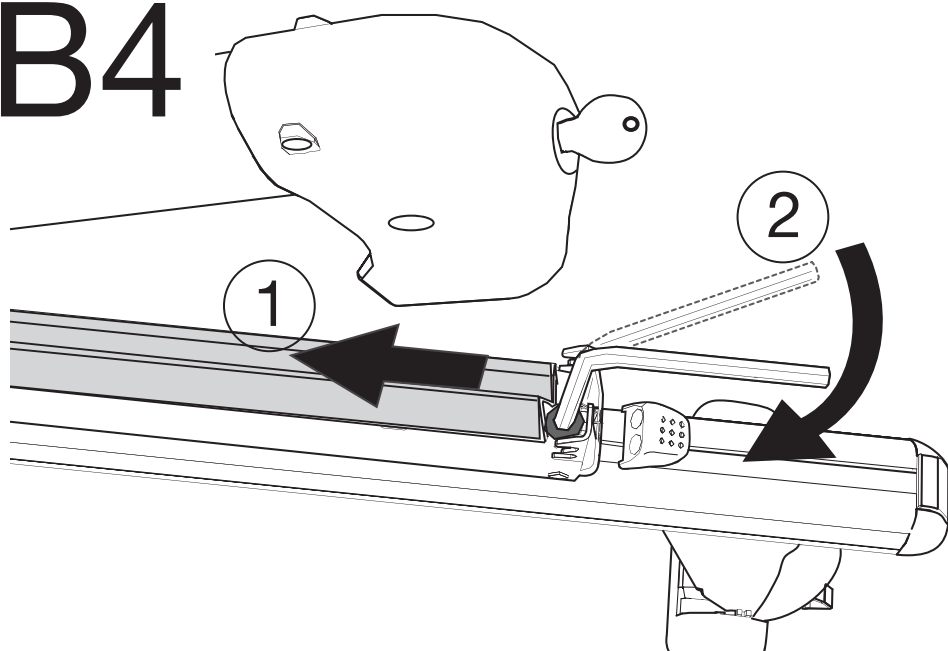


1

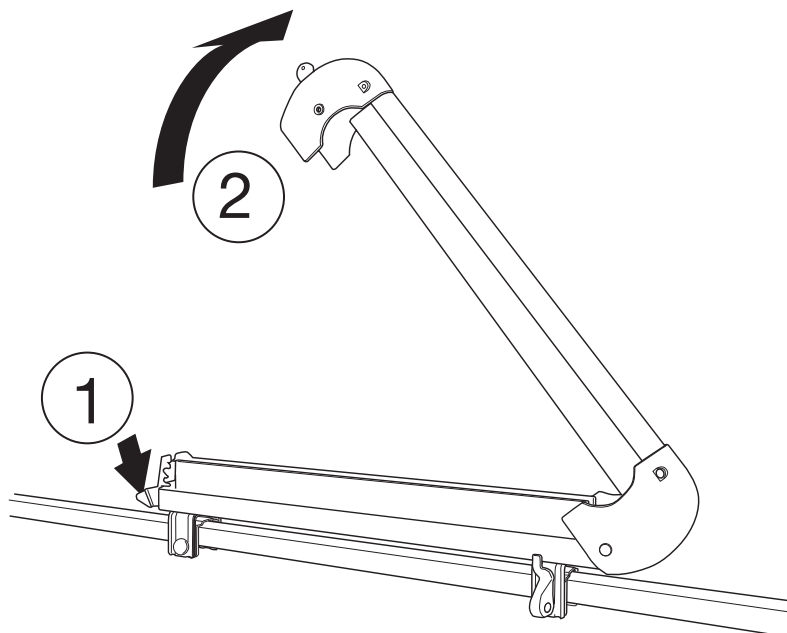

2

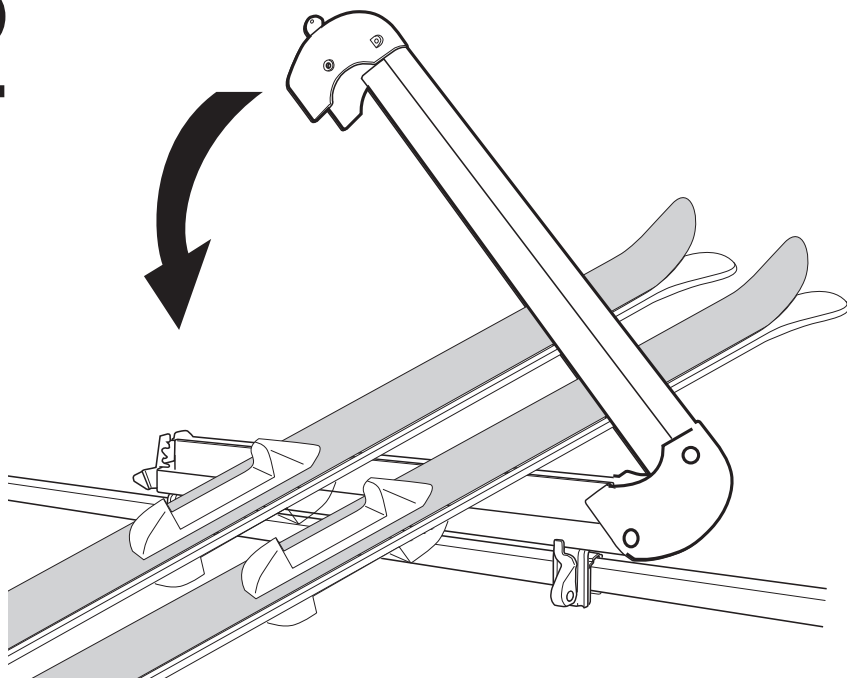

3


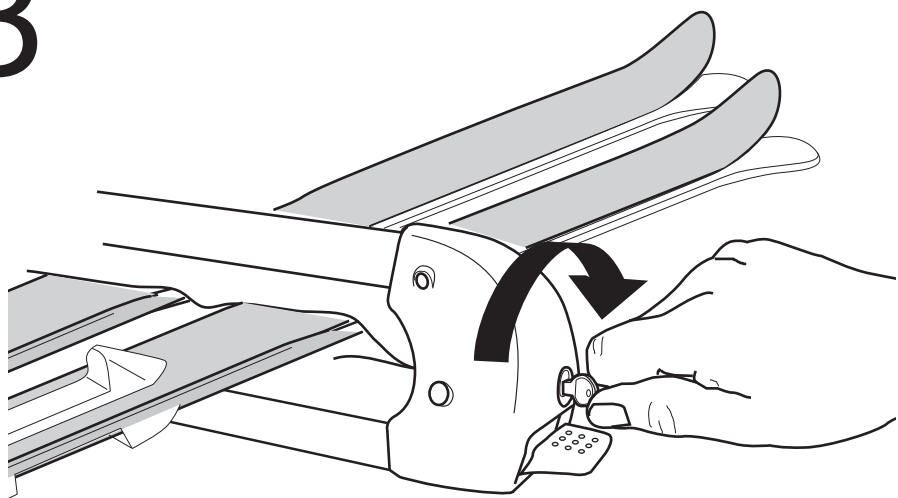


4



5


CHECK !

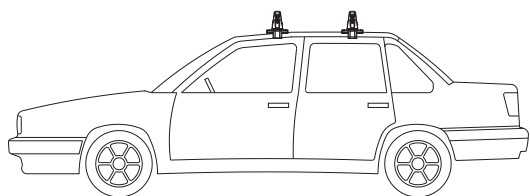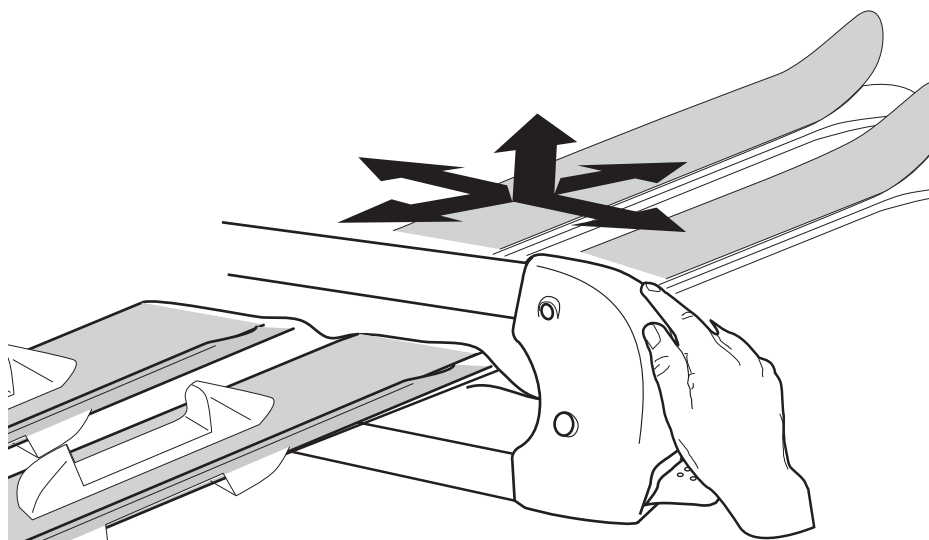

~20 km




CHECK !



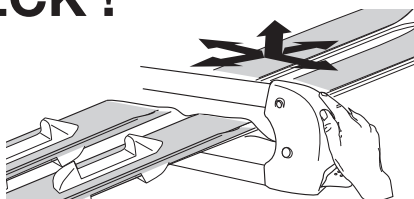







MAX

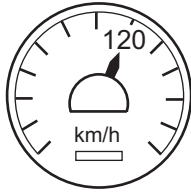

MAX

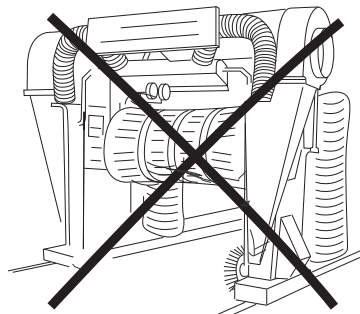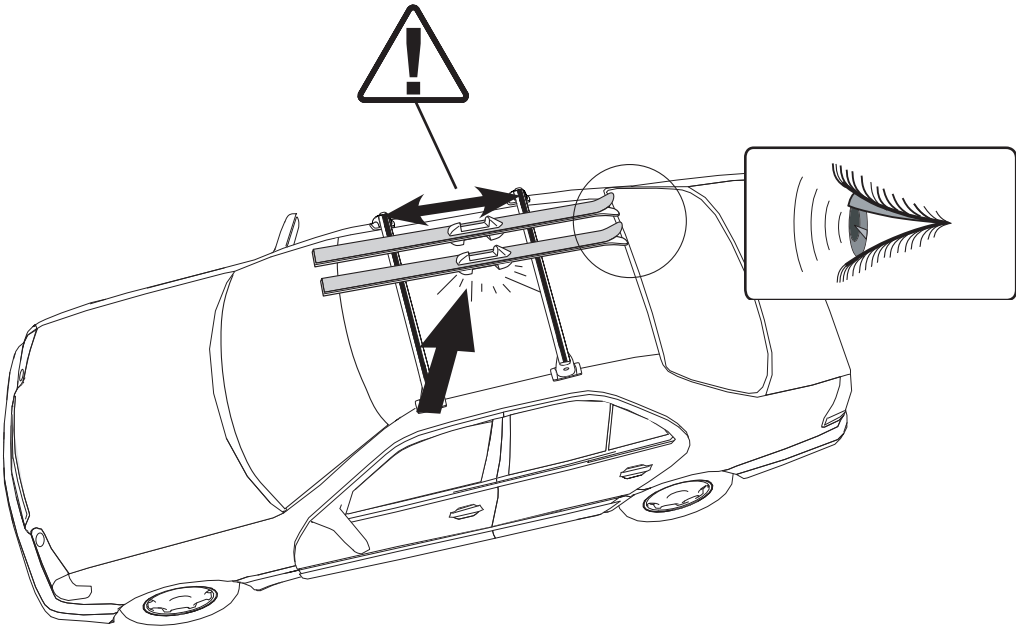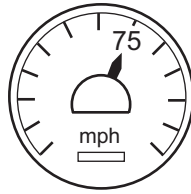

Spare parts

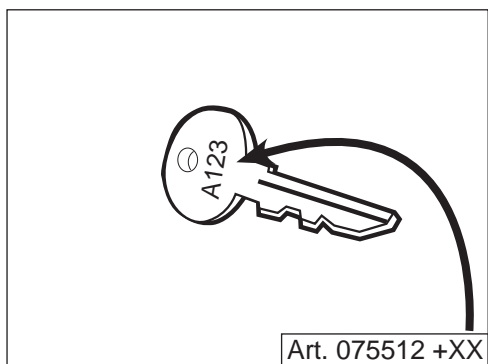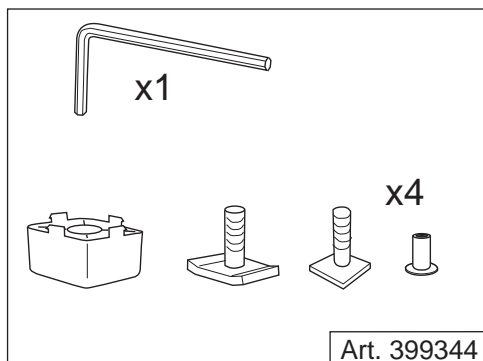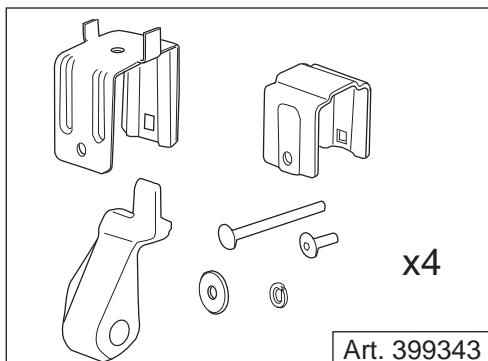

Accessoires

Barracuda	Triton 450
Discovery	 <i>Dual Opening</i> Triton 650
 Galactica	Odin
 Excursion / Safari	Sirius