



Installation Instructions Tailgate Lock PL2400, PL2400C

Ford Euro Ranger 2006 - 2011
Mazda BT-50


Contents:

Lock Assembly, Bracket, Striker Plate, 2-4mm Nuts, 2-4mm Washers, 2 keys and Instructions.


Tools Required:

Phillip Screwdriver, Utility Knife, 4mm Drill Bit, Ratchet, 7 mm Socket.


Step 1: Remove the access panel from the inside of the tailgate. (You may have to remove the bed liner cover if applicable) Remove the latch rods from the factory handle by rotating of the plastic rod clips and pulling the rods up and out of the clips. Remove the handle mounting bolts from the factory handle. Remove the handle from the tailgate.

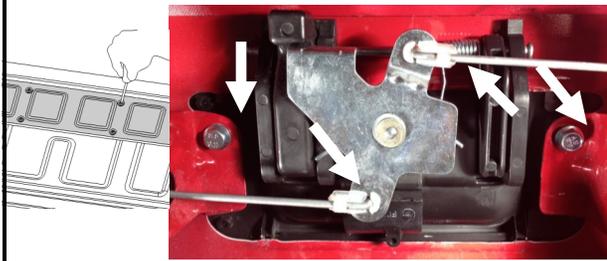

Step 2: If your handle has the gasket running up the middle of the handle as shown below, cut the gasket away in this area to allow for the supplied bracket to sit flush to the plastic of the handle. Cut the gasket where the lines are shown below and remove that portion of the gasket.

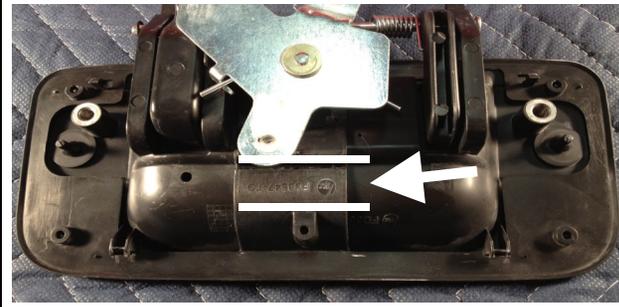

Step 3: Install the supplied support bracket as shown below using the factory bolts to hold the bracket in place. Using the holes in the bracket as a template drill through the plastic bezel using a 4mm drill bit. The arrows below point to the holes to be drilled.

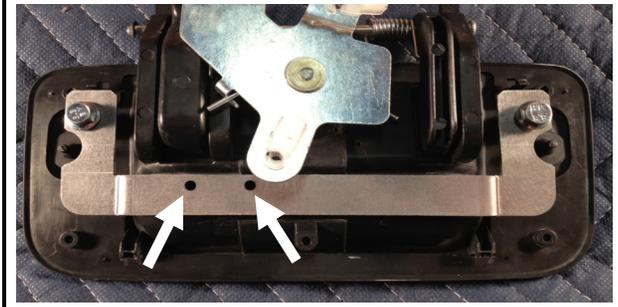

Step 4: Install the lock assembly from the **front** of the handle putting the threaded studs through 4mm holes that were just drilled (make sure the lock assemble is in the unlock position when installing). Install the 2-4mm washer and nuts on the studs and tighten. Now remove the factory mounting bolts that were used to temporarily hold the bracket in place.



Step 5: Clean the area under the handle where the striker plate will be adhered with the provided alcohol wipe. Peel red backing of the 3M tape that is attached to the striker plate and install on the handle as shown below *noting the slot and bend position, also the plate sits flush to bottom of the handle.



Step 6: Test the functionality of the lock by turning the key to the lock position and trying to lift the handle from the bezel. If prevents the handle from lifting away when locked reinstall the handle into the tailgate. Install the handle mounting bolts and tighten. Re-attach latch rods to clips. Install the access panel and bed liner if applicable.

