


Package Contents: Handle Assembly
Instructions

Tools Required: 10mm Wrench

Step 1: Remove the screws from the inside of the tailgate that hold the access panel in place. Remove the access panel.

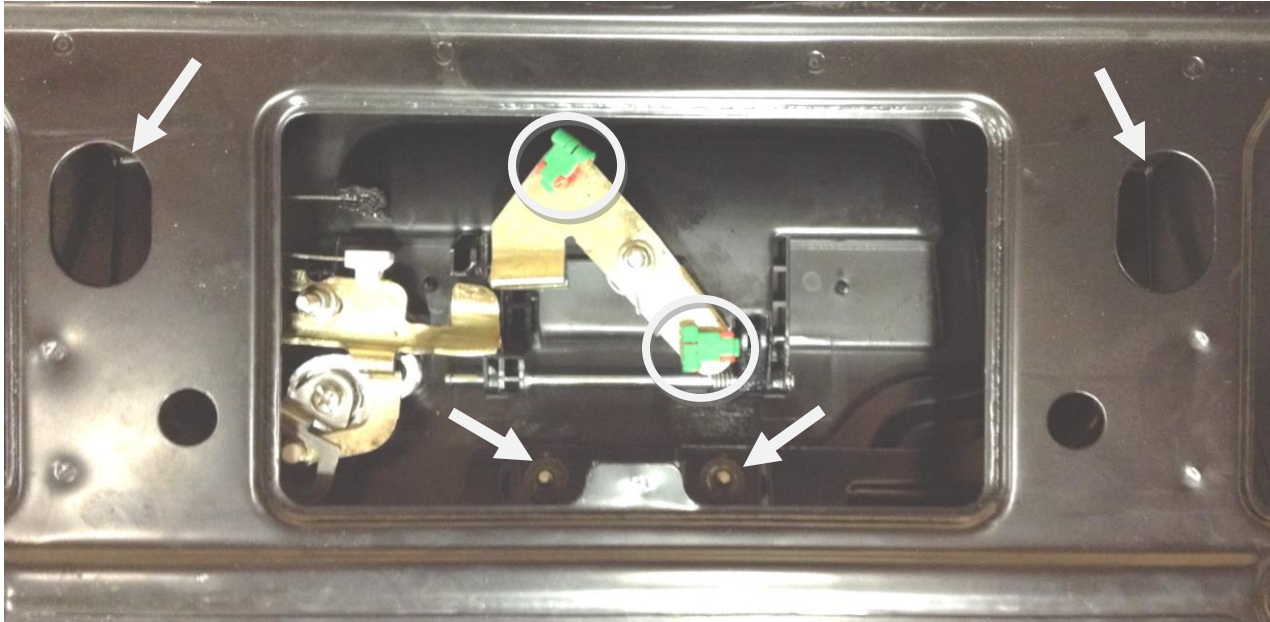

Step 2: Remove the latch rods from the plastic clips (circled on picture). Do this by prying up the top side of the clip and popping it open. Lift the rod out of the clip.

-Remove the four bolts that hold the factory handle into the tailgate (shown by the four arrows on picture). Hold the handle in place to prevent the handle from falling out.

-Remove the factory handle from the tailgate.

Step 3: Remove the logo from the factory handle and reinstall it onto the Pop and Lock handle.

-Install the Pop and Lock handle assembly into the tailgate.

-Reinstall the four mounting bolts and tighten.

-Attach the latch rods to the plastic clips. Install the rods into the plastic clips. Snap the clips closed onto the rods. Make sure the rods are secure.

Do not install the access panel yet.

Step 4: - Shut the tailgate. Test the function of the lock. Turn the key clockwise to lock. Turn the key counter clockwise to unlock. If lock functions properly, reinstall the access panel.