



INSTALLATION INSTRUCTIONS

Model **PL5225**
2005-2015 Toyota Tacoma
Small Lock Box


Package Contents: Lock Cylinder and 2 Keys
Cylinder Washer, Cam
E-Clip, Screw with lock washer
Instructions

Tools Required: Phillip Screwdriver
Pliers

Step 1: Remove the phillip screw from the backside of the knob used to open. Then remove the factory cam and knob. There should be a hole now where the knob was.




Step 2: Install the cylinder washer

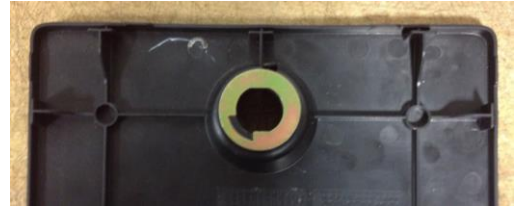

Step 3: Install the lock cylinder. There are two flat sides that need to match up with the washers flat cut outs.



Step 4: Install the E-Clip from the side of the lock sliding it into the groove cut into the side of the lock cylinder.

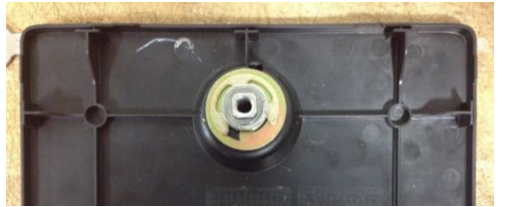

Step 5: Install the cam. Make sure the cam is pointing up towards the top/edge of the cover.



Step 6: - Test the function of the lock and panel. Turn the key 90 degrees to unlock (cam horizontal). Turn the key 90 degrees to lock (cam is vertical).