



# Power Tank Instructions

## Power Shot Bracket with Daystar clamps

BKT-2256, PT01-4050, PT01-4051, PT01-4250, PTM-0200, PTM-0220


*(Instructions are for (1) bracket, your kit may include double the hardware shown)*

### What's included:

- 1x Bracket Body
- 1x 20oz Clamp with wingnut and thread protector
- 2x Clamp Front (with hole in center)
- 2x Clamp Back
- 2x Bracket Bolt
- 2x Washer
- 2x Spring washer
- 4x Allen cap screws
- 1x Nut (to be used in place of wingnut if desired)
- 2x Rubber spacers (optional)


### You will need:

- 5/32 hex wrench

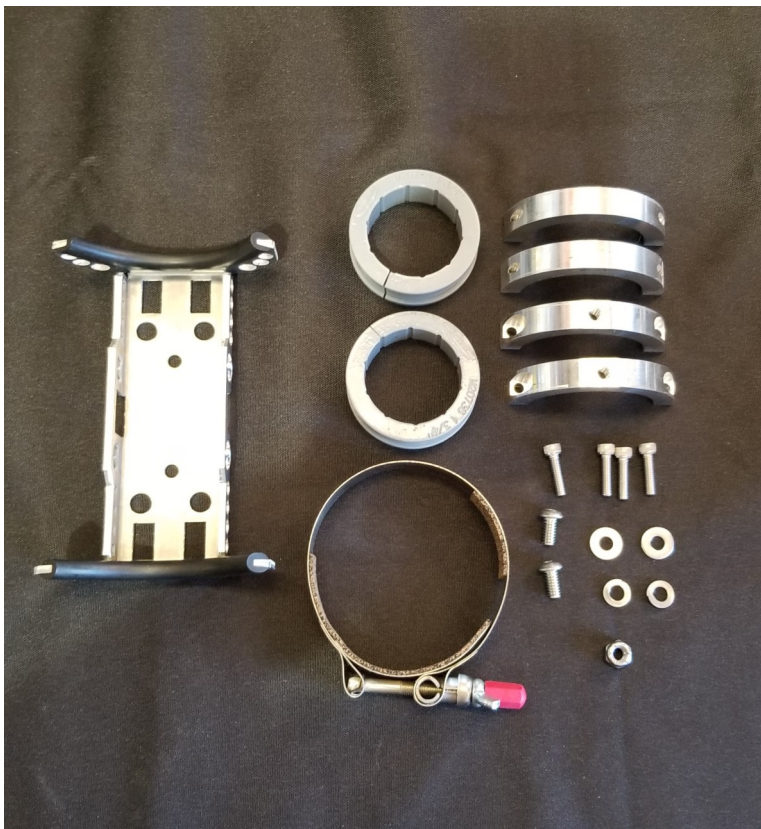

### Step 1: Prepare the bracket

- Remove the red thread protector and the wingnut on the clamp (not pictured)
- Feed the open end through the bracket body being careful not to lose the cap
- Reassemble the clamp with the wing nut and red thread protector

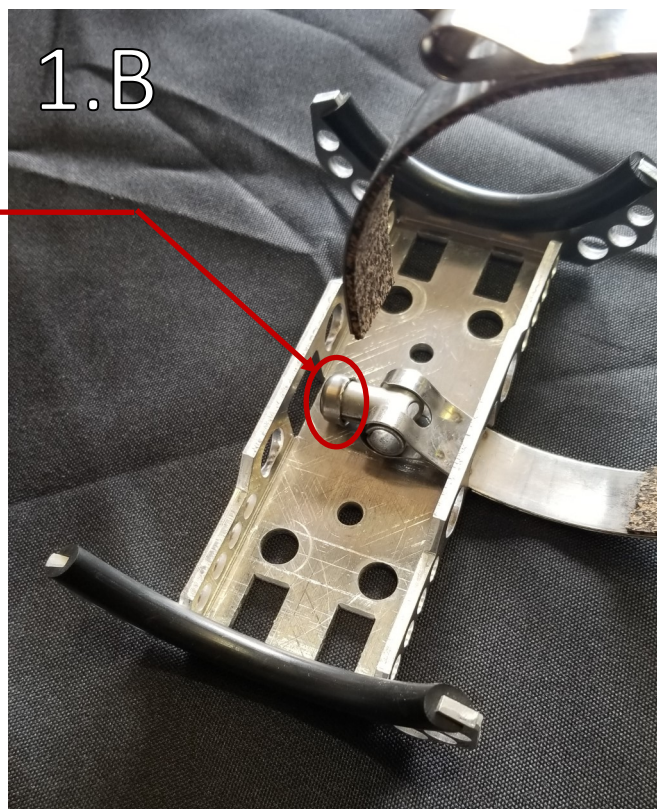


## Step 2: Prepare the clamps

- A. (optional) wrap the spacers around the roll bar
- B. Install the (2) pairs of clamps with the (4) machine bolts about 2 inches apart. Do not tighten.



## Step 3: Install the bracket body onto the clamps

- A. Bolt -> Washer -> Bracket Body -> Spring Washer -> Clamp
- B. Tighten the clamps into place (not pictured)
- C. The leftover nut is optional to use in place of the wing nut

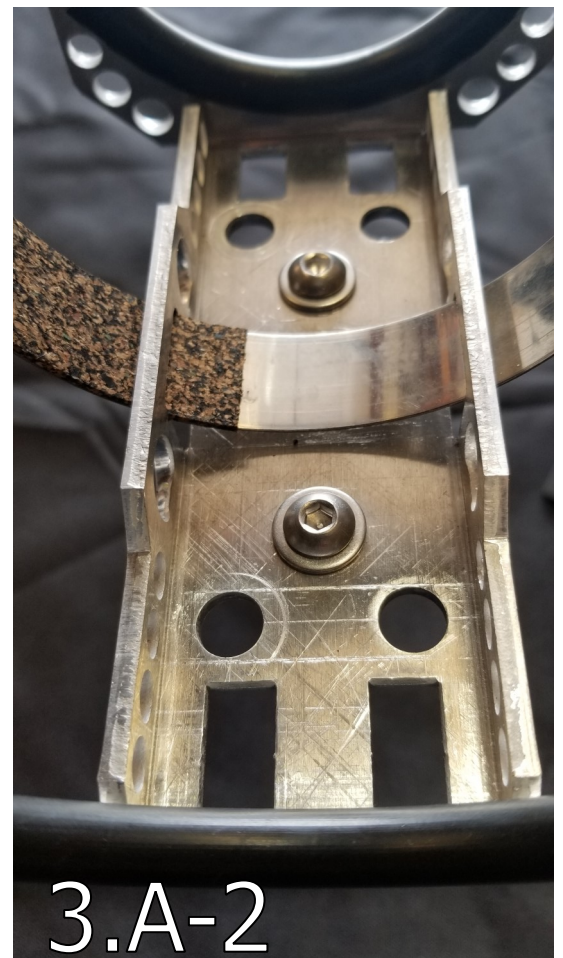



Discover other automotive tools on our website.