

# 860 Bracket Instructions




## 860 Bracket

**Fits:** LS1 Driver side Snug Mount

- 1998-2002 5.7L LS Camaro/Firebird
- Must Use Electric Water Pump
- Light Weight Billet Aluminum

<u>Includes:</u>	<u>QTY.</u>
A) Bracket	(2)
B) 2" Mid Spacer	(1)
C) .942" Rear Spacer	(2)
D) M10x1.5x120mm Bolt	(2)
E) 3/8" Washer	(4)
F) M10x1.5x80mm Bolt	(1)
G) M10 Nut	(1)

**NOTE:** For Use With CS130D, AD230, AD244 Style Alternators with 2" Mounting Spools

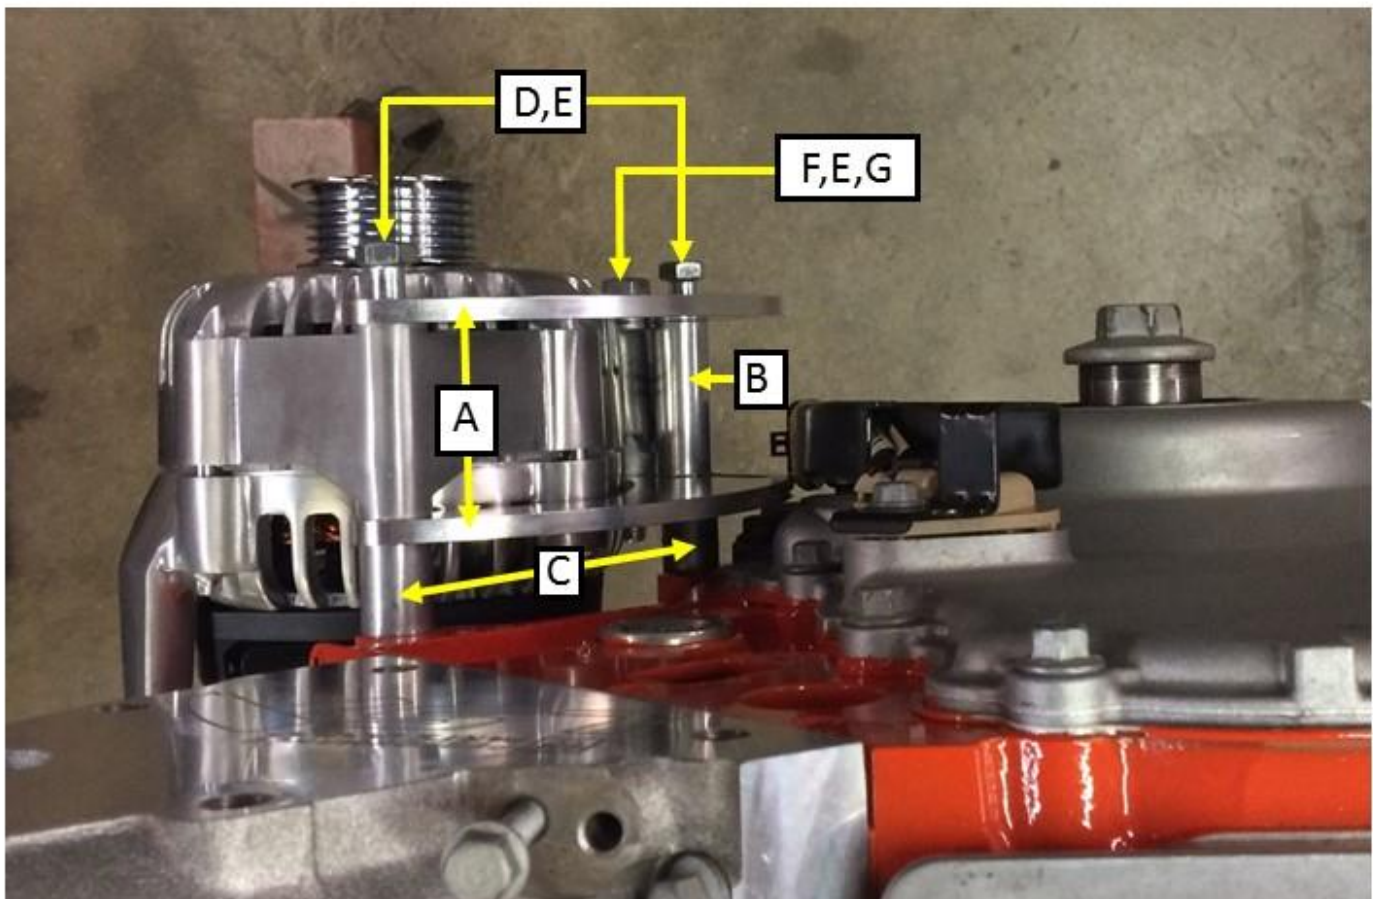

- Clean all paint and debris from mounting surfaces before installation
- Always ensure Alternator has a clean and direct ground to the battery
- Check belt tension before startup

[View other performance starting and charging made by Powermaster on our website.](#)