



INSTALLATION INSTRUCTIONS

Progress Technology [Anti-Sway Bar](#)

04-06 Mazda RX8 (Front) # 61.1152



11/27/06

NOTE: Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.


Parts List

<u>Item</u>	<u>Quantity</u>
Anti-roll bar (32mm)	1
Pivot bushing	2
Bushing Bracket	2
Lube	1
Instruction Sheet	1

1. Park vehicle on a smooth, level, asphalt or concrete surface. Block rear wheels. Jack up front end of car and support with jack stands. Remove front wheels and tires. Remove the lower splash tray and lower radiator mounts. Disconnect the ABS wires and remove the stock (OEM) sway bar and brackets (as shown). Leave the end link attached to the lower control arm.

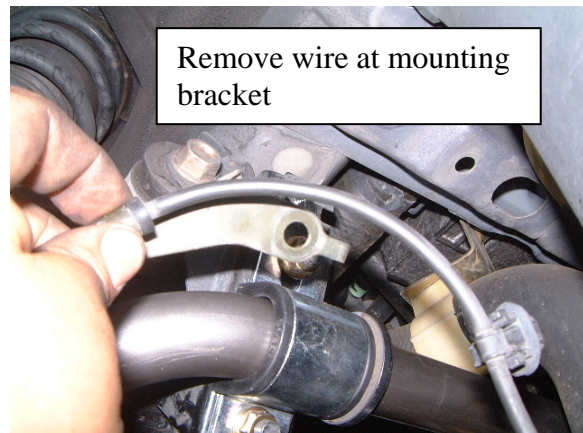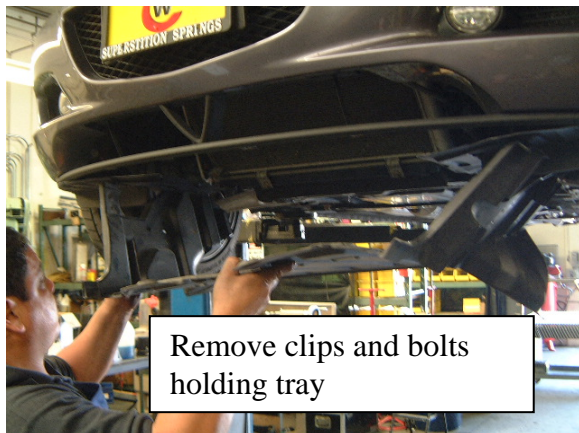

2. Locate the pivot “D shaped” polyurethane bushings and tube of special grease supplied in the hardware kit. Cut the end off the grease tube and apply the grease to the bore of the polyurethane bushings (in the hole). Open the bushings and snap them over the new Anti-roll Bar, as positioned on the stock bar.

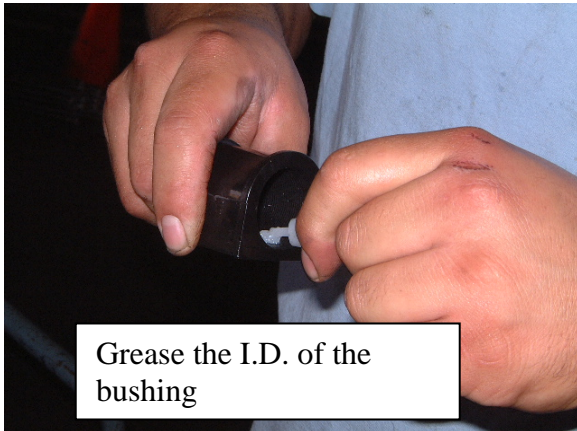

3. Attach end link, radiator mounts and ABS wires. Torque all fasteners to factory specifications. Attach splash tray then install wheels and tires. Lower the front of car onto ground, and roll car back and forth to settle suspension.
4. *THIS IS AN ADJUSTABLE SWAY BAR. THE HOLE TOWARD THE FRONT OF THE VEHICLE IS THE FIRMEST SETTING. CHARACTERISTICS IN HANDLING HAVE BEEN ALTERED, USE EXTREME CAUTION DURING DRIVING.*
5. Installation is complete. Check assembly periodically for tightness.