



INSTALLATION INSTRUCTIONS


Progress Technology [Anti-Sway Bar](#)
2000-> Dodge Neon & SRT-4 (Rear) # 62.0604

NOTE: Progress Technology products should only be installed by a qualified licensed mechanic experienced in the installation and removal of suspension components. Please read instructions from start to finish and verify the parts in the parts list before beginning installation.

Parts List

Item	Quantity	Item	Quantity
Anti-roll bar (24 mm)	1	3/8 Female Heim	4
U bracket	2	3/8-24 Stud	2
Pivot bushing	2	3/8 Jam nuts	4
3/8-16 X 2.00 HHCS	4	Cup Washer	2
3/8-16 X 1.00 HHCS	2	Grease tube	1
3/8-16 Lock Nut, nylon	6	Instruction Sheet	1
3/8 Flat washer	8		

1. Park vehicle on a smooth, level, asphalt or concrete surface. Block front wheels. Jack up rear end of car and support with jackstands. Remove stock (OEM) sway bar, brackets and end links.
2. Locate the pivot “D shaped” polyurethane bushings and tube of special grease supplied in the hardware kit. Cut the end off of the grease tube and apply the grease to the bore of the polyurethane bushings (in the hole). Open the bushings and snap them over the new Anti-roll Bar, as positioned on the stock bar. Place the new brackets (supplied) over the pivot bushings. Using the stock (OEM) hardware and washers provided, attach the bar and brackets to the stock mounting locations. Tighten the mounting bolts.

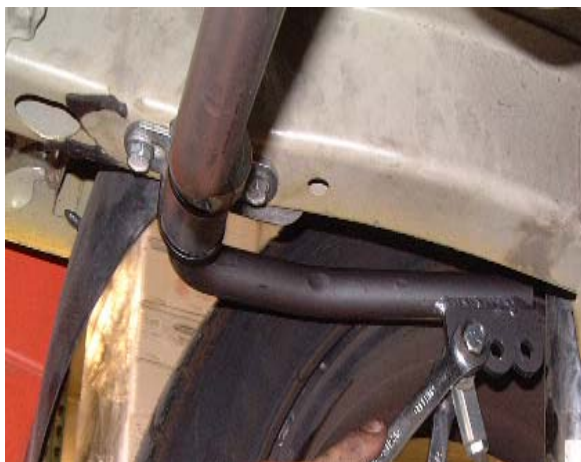

3. Assemble end links as shown in the picture and diagram page. The hole located toward toe front of the vehicle is the softest setting.

4. Install wheels and tires. Lower rear of car onto ground, and roll car back and forth to settle suspension.
5. Installation is complete. Check assembly periodically for tightness.

62.0604

DRIVER SIDE VIEWED FROM THE REAR

