


HOOD SHIELD INSTALLATION INSTRUCTIONS

Please read all instructions before installation and to check to see that all parts are included.

Kit Contents:	
Description	Qty.
Hood Shield	1
#12 5/8" Screws (A)	4
#12 Flat Washer (B)	4
10-32 Well Nut (C)	1
10-32 Philips Bolt (D)	1
3/16 Flat Washer (E)	1
Rubber Bump-on	4

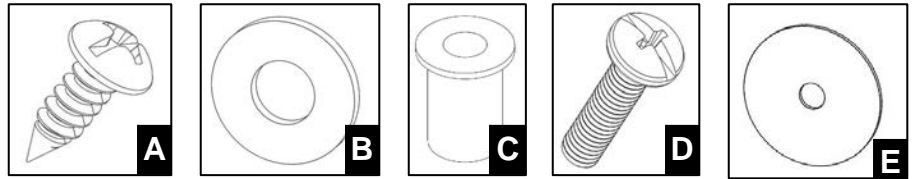

Note: Rubber Bump-on is required for this application to prevent damage to the hood.

- **Installation Temperature:**
60° - 110° F (16° - 43° C)

1. Clean and open the hood. Make sure that the hood is free of any dirt or debris.
2. Trial fit Hood Shield by aligning the center mounting point up with the center factory hood slot. **(Figure 1)** **(NOTE: Some vehicles have a tab in the center mounting slot that will need to be removed for proper hardware alignment.)**
3. Attach supplied hardware to hood shield. **(Figure 2)** Mark for pre-drill holes using a marker and referencing the slots in the Putco Hood Shield.
4. Remove Putco Hood Shield from hood and drill holes using a 5/32 drill bit. **(Figure 1)** Use the marks made in *Step-3* as a guide for the drilling.
5. Re-fit Hood Shield to the factory hood by aligning the rubber well nuts up with the factory slot. **(Figure 1)** Attach Hood Shield to the vehicle by installing the center mounting point first and working outwards. Tighten screws just enough to hold hood shield in place.
6. Center Hood Shield on the hood and tighten screw using a Philips screw driver until snug. Close hood carefully to check the fitment. If the Hood Shield is not centered loosen the screws and adjust until it is centered and re-tighten the screws.
7. Attach rubber bump-on to the factory hood where the corners of the Hood Shield are closest to the hood. **(Figure 3)** **Clean area first with isopropyl alcohol and remove adhesive backing from bump-on and apply to hood.**

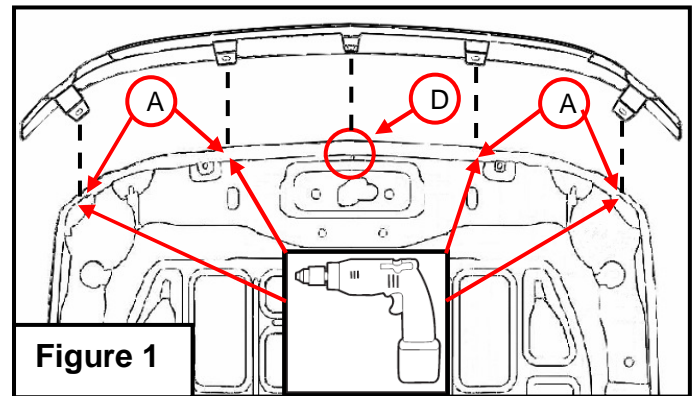


Figure 1

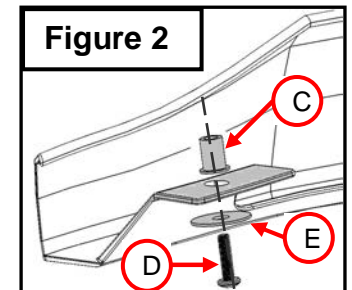


Figure 2

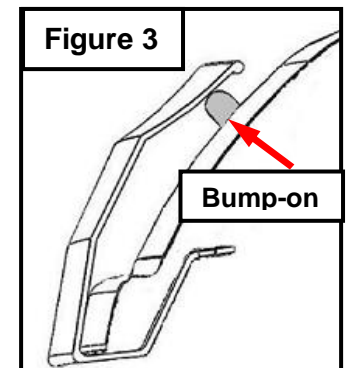


Figure 3

Bump-on