

Jeep Wrangler Chrome Fenders

Estimated Installation Time

Amateur: 1.5 hours (2 people)

Professional: 30-45 minutes (2 people)

Tools Required

Rivet Gun

10mm socket and 3/8 drive ratchet

Utility knife

Flat screw driver

Body clip removal tools recommended

Needle Nose Pliers

Car Jack

Jack Stand

Tire Iron



Specialty Plastic Clip





Hardware Kit

Specialty body clips (14 pcs for front fenders) (20 pcs for rear fenders)

Christmas tree style plastic retaining clips (8 pcs for front fenders) (10 pcs for rear fenders)


Plastic rivets (12 pieces for front fender) (12 pieces for rear fender)

Jeep Wrangler Chrome Front Fender Pictures

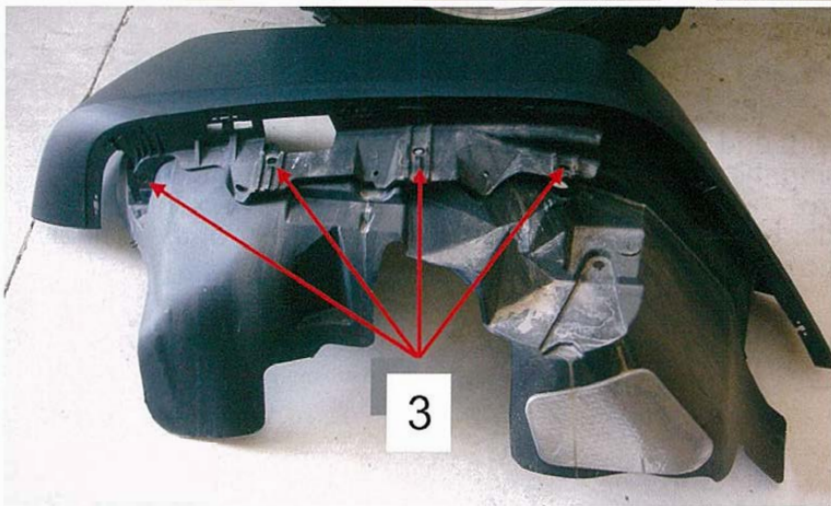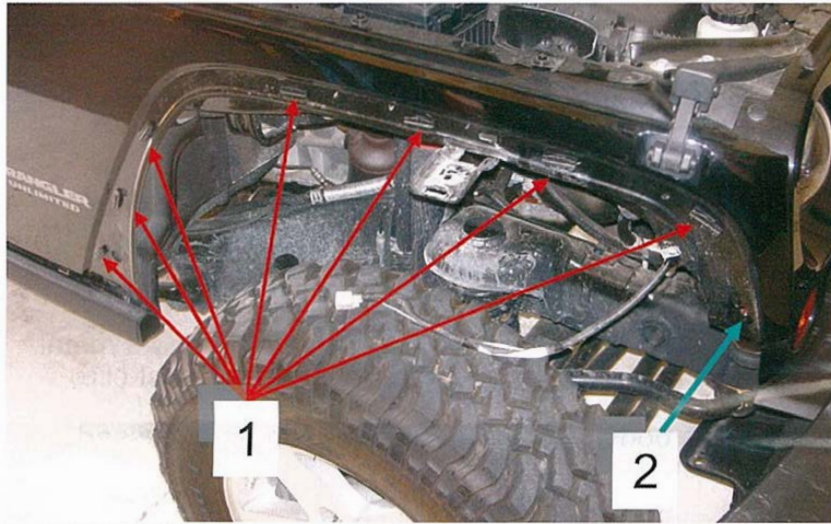

- 1) Location of specialty clips that hold the fender to the vehicle
- 2) Location of the reusable plastic push pin
- 3) The arrows point to the location of the four 10mm bolts

Jeep Wrangler Chrome Rear Fender Pictures

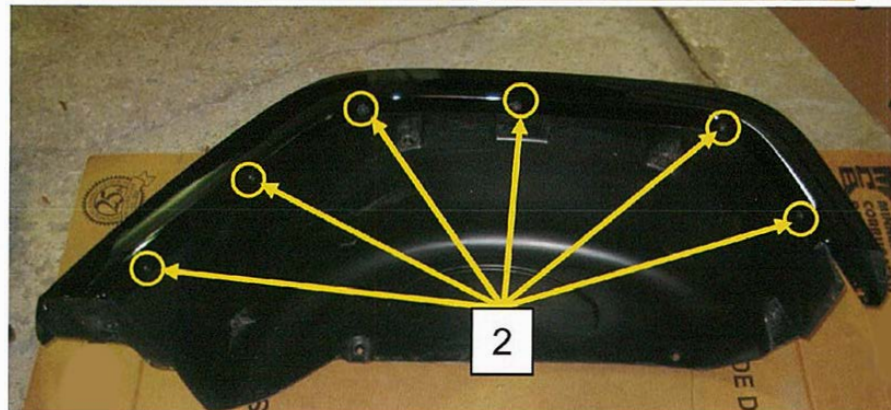

- 1) Location of arrows shows where pressure should be applied to flex the part into place
- 2) Location of arrows shows where the six rivets need to be removed from the fender
- 3) The arrows show where the ten specialty plastic clips attach to the vehicle
- 4) These two locations must be aligned first for fender to attach properly

