

## BOSS Grille Installation Instructions:

*Please read all instructions before beginning installation and be sure to check to see that all parts and hardware are included.*

Parts List		
Description	Parts	Quantity
BOSS Grille	Supplied in Kit	1
1/4" x 20 Cap Head Allen	Supplied in Kit	8
1/4" x 20 Nylock Nut	Supplied in Kit	8
1/4" Washer	Supplied in Kit	16
Top Close-Out Panel	Supplied in Kit	2
Lower Mounting Bracket	Supplied in Kit	1
Grille Fastener	Supplied in Kit	4

Tools Required			
10mm, 7/16" Socket and Ratchet	Pliers	Allen Wrench	Small Flat Blade Screwdriver
Drill	5/16" Drill Bit	Dremel or Side Cutter	Marker

**NOTE: IT IS RECOMMENDED THE INSTALLER/TECHNICIAN READ THE INSTRUCTIONS THOROUGHLY PRIOR TO INSTALLATION OF THIS PRODUCT.**

1. Open hood.
2. Remove ten push pins from the hood shroud and set aside for re-installation.
3. Remove four 10mm bolts from the top of the grille and set aside for re-installation.
4. Carefully unclip the six retainer clips that are behind the grille near the radiator.

**CAUTION:** Take the proper precautions to protect the face of the grille from cosmetic damage.


5. Reposition the factory grille away from the vehicle and place on a clean non-abrasive workbench.

6. Assemble the *Lower Mounting Bracket* to the *BOSS Grille* brackets using the supplied hardware. (Fig-1)

7. Position and align the *BOSS Grille* inside the factory opening. Confirm that the grille is centered and aligned before attaching.

**(Note: Re-adjust the lower bracket if the grille is not centered.)**

8. Remove the *BOSS GRILLE* from the vehicle and attach the supplied *Grille Fasteners* to the *Lower Mounting Bracket*.

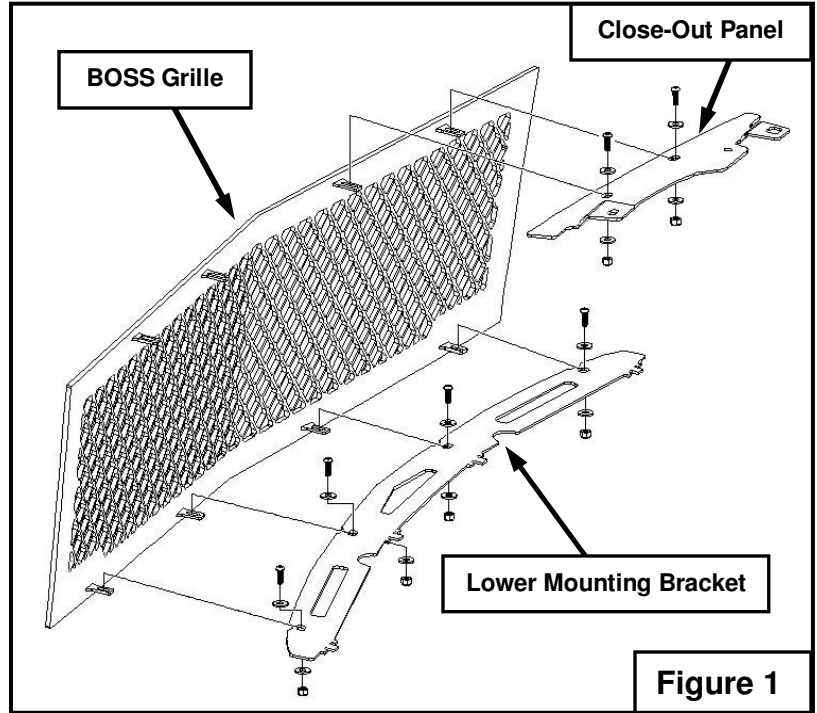

9. Attach the two *Close-Out Panels* to the top of the grille using the supplied hardware. (Passenger Side Shown Fig-1)  
**(Note: There is a left and right hand side. Leave hardware loose.)**
10. Position and align the *BOSS Grille* inside the factory opening. Secure the *BOSS GRILLE* to the vehicle by engaging the four lower *Grille Fasteners*.
11. Attach the *Close-Out Panels* to the vehicle using the four 10mm bolts that were removed in Step-3. Verify that the grille is centered and aligned before tightening hardware.  
**(Note: Verify that the *Factory Shroud* holes line up with the *Close-Out Panels*. Adjustment of the *Close-Out Panels* may be needed.)**
12. Tighten all hardware so the grille is secure.
13. Re-attach the hood shroud cover that was removed in Step-2.
14. Close hood and confirm that all components and hardware are tight and secure.