

2015+ Chevy Silverado HD Bumper Grille Installation Instructions

Please read all instructions before installation and to check to see that all parts are included.


KIT CONTENTS:	
Description	Qty.
Bumper Grille	1
Alcohol Pad	1

Tools Needed


- 10mm Socket

Bumper Grille Installation


1. Remove bumper grille from packaging. Check to see if all parts from above table are included.
2. On back side of bumper, remove 2 factory bolts with 10mm socket and set aside for later use. Refer to Figure 1 for bolt location.

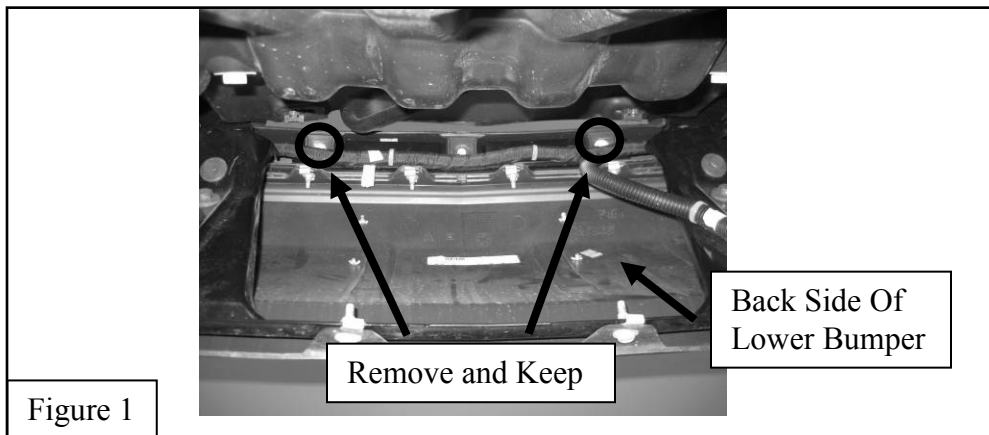


3. Clean behind the upper part of the bumper. Clear all dirt away and wipe of with alcohol pad. Refer to figure 2.

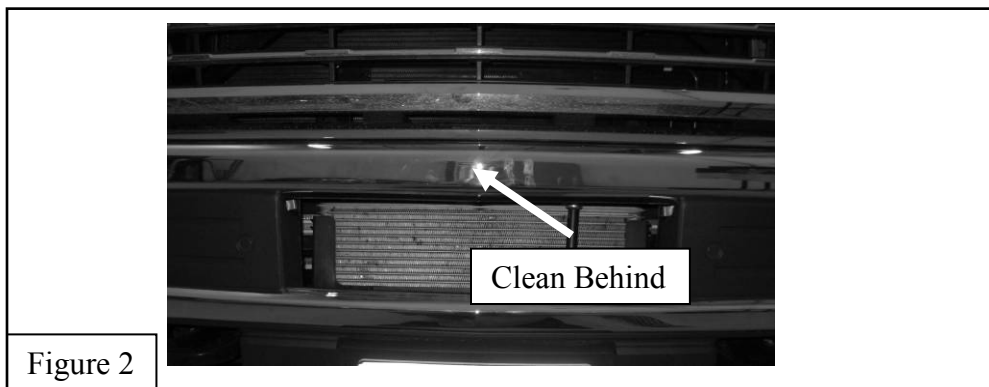

4. Peel tape backing on Putco grille, refer to figure 3

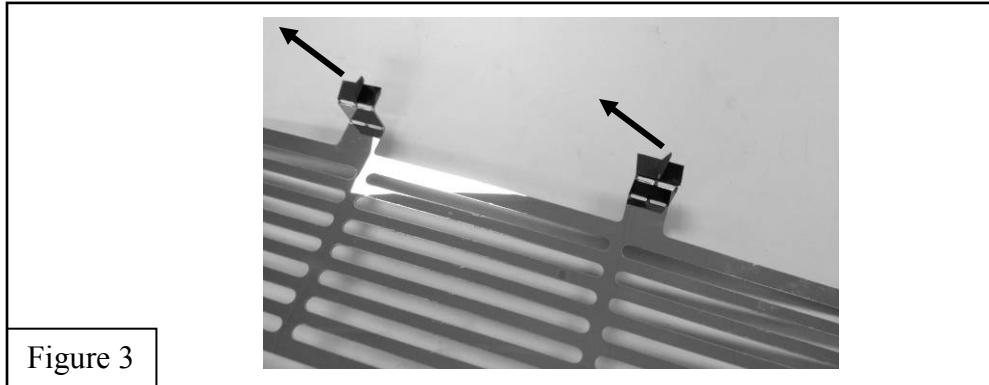

5. Tilt grille into bumper opening, bottom first, tabs on the top go behind upper bumper. On some trucks these tabs will go between a black bracket and the upper bumper, refer to Figure 4.

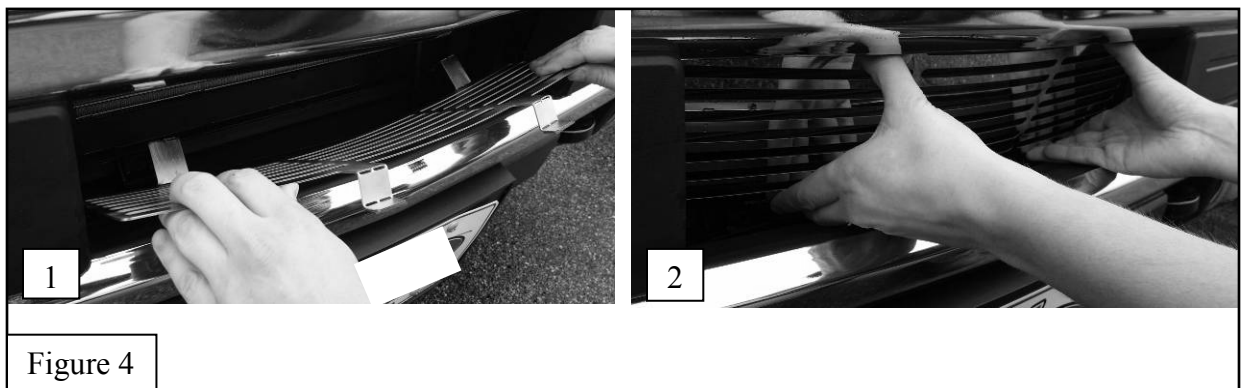

6. Reinstall factory bolts (bolts removed in Step 2) through the holes in the grille's lower tabs and into the original threaded holes. Tighten down with 10mm socket.
7. Once bolts have been tightened, pull the top of the grille toward the front of the truck and hold for 30sec. Refer to Figure 5. This will set the tape to the back of the bumper. Wait 2 hours for tape to completely set before driving. Allow 24 hours before washing bumper grille.



For lighted bumper grilles, refer to Light Bar Installation Instructions for wiring installation instructions.