



11-12 Ford F-150 Eco Boost Bumper Grille 84182, 86182, 91182

PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED.

Please consult your Vehicles owners manual for vehicle air flow restrictions
Putco is not liable for any vehicle damage resulting from the installation of our Grille inserts

Tools Needed: 5/32" Allen and 7/16" Wrench

Step 1: Verify kit contents. (Stainless Steel Grille, 2 Allen Bolts, 2 Washers, and 2 Nylon Lock Nuts)

Step 2: Hold your grille in your bumper opening to check for proper fit.

Step 3: Open the hood to gain access to the back side of the grille opening.


Step 4: Align the 2 bottom tabs with the slots in the bumper.



Step 5: Rotate the Grille up, into the bumper opening.



Step 6: Align the top mounting tabs with the existing holes in the bumper.

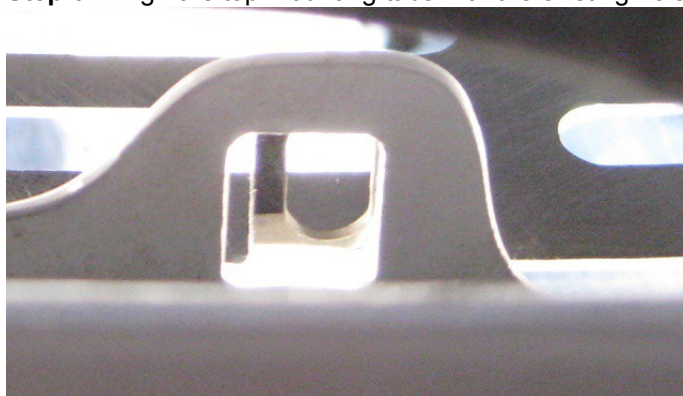

Step 7: With the head facing down, insert the Allen Head Bolt through the upper grille tab and the existing holes in the bumper.



Step 8: Secure the Allen Head Bolts with the provided Washers and Nylon Lock Nuts.



Note: PUTCO recommends applying a high quality automotive wax to maintain the original appearance.
