


PUTCO®

MOLLE PANELS

- MODULAR LIGHTWEIGHT LOAD CARRYING EQUIPMENT -

INSTRUCTION GUIDE

TOYOTA TACOMA

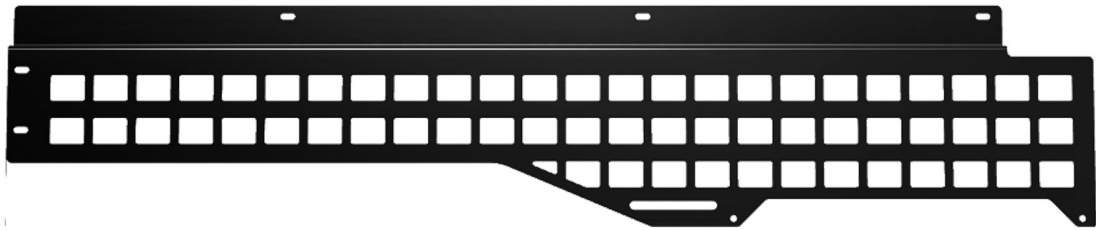

SIDE PANEL



**PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION
AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED**

REQUIRED TOOLS

T40 TORX DRIVER



T30 TORX DRIVER



CONTENT LIST

DESCRIPTION	QTY
Molle Side Plate	1
Side Brackets	1
M6 Torx-Head Bolts	2



INSTALLATION INSTRUCTIONS

- 1** Unscrew and remove both in-bed rails using a T30 Torx driver.
- 2** Using a T40 Torx driver, unscrew and remove the tie-down hook located towards the front of the bed. Place the supplied side bracket behind the tie-down hook, then fasten to the bed re-using factory hardware.
- 3** For the passenger side, remove and set aside the two T30 Torx-head fasteners from the bed cubby shown below. The passenger-side molle plate will mount to this location re-using these fasteners.



- 4** Place the side plate on the backside of the in-bed rail, then fasten to the bed re-using the factory hardware.
- 5** Fasten the side plate to its bracket using the supplied M6 bolts and a T30 Torx driver.
- 6** Once all the plates are installed in the vehicle, ensure all fasteners are tightened until snug, but do not overtighten.

Your new MOLLE Panel is now successfully installed on your vehicle!