

Congratulations on your purchase of a high quality PUTCO product.

Please read all instructions first before beginning installation.

Kit Contents:

- Chrome Trim Mirror Cover RH
- Chrome Trim Mirror Cover LH
- Chrome Trim Extension Arm RH
- Chrome Trim Extension Arm LH
- 3M™ Adhesion Promoter 4298

Tools:

- Protective Gloves
- Lint Free Cloth

Installation Steps

Step 1: Verify kit contents.

Step 2: Test fit the parts on the vehicle noting the difference between the right and left hand parts.



Step 3: Fold the Mirror up to the **vertical** position.



Step 4: Insure that the surface which the **Chrome Trim** is to be applied is clean, dry and free of all oil, grease and wax. The application surface must also be warm, the recommended temperature range is 15.6° - 43.3°C (60° - 110°F).

Step 5: Apply the supplied **3M™ Adhesion Promoter 4298** to the surface and allow surface to dry approximately 2 minutes before applying the chrome trim.

Step 6: Remove the red protective liner from the 3M™ Tape on **middle two strips and lift a small portion of a corner on the outside ring** of 3M tape and place the part on to the factory mirror.
(Note: Do NOT remove the entire outside ring of tape)

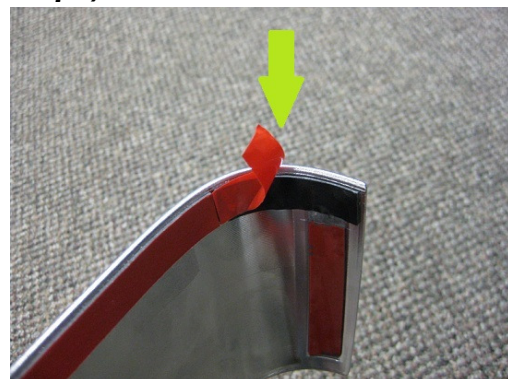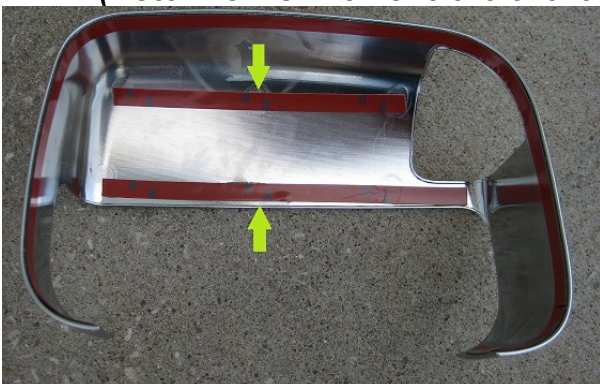

Step 7: With the two inside pieces of tape installed on the mirror, remove the red protective liner from the 3M™ Tape on the **outside ring** to fully secure the mirror cover to the factory mirror.



Step 8: Now that the mirror cover has been installed, remove the red protective liner from the 3M™ Tape on the extension arm and install.

Step 9: Press the parts into place by firmly applying pressure for 5 seconds. (**Note: Be careful not to contaminate the adhesive before pressing into place!!!**)

Step 10: Repeat **Steps 2 - 9** for the opposite side.

Note: PUTCO recommends applying a high quality automotive wax to maintain the original appearance of you chrome trim.
