


PDBT19

TEMPLATE

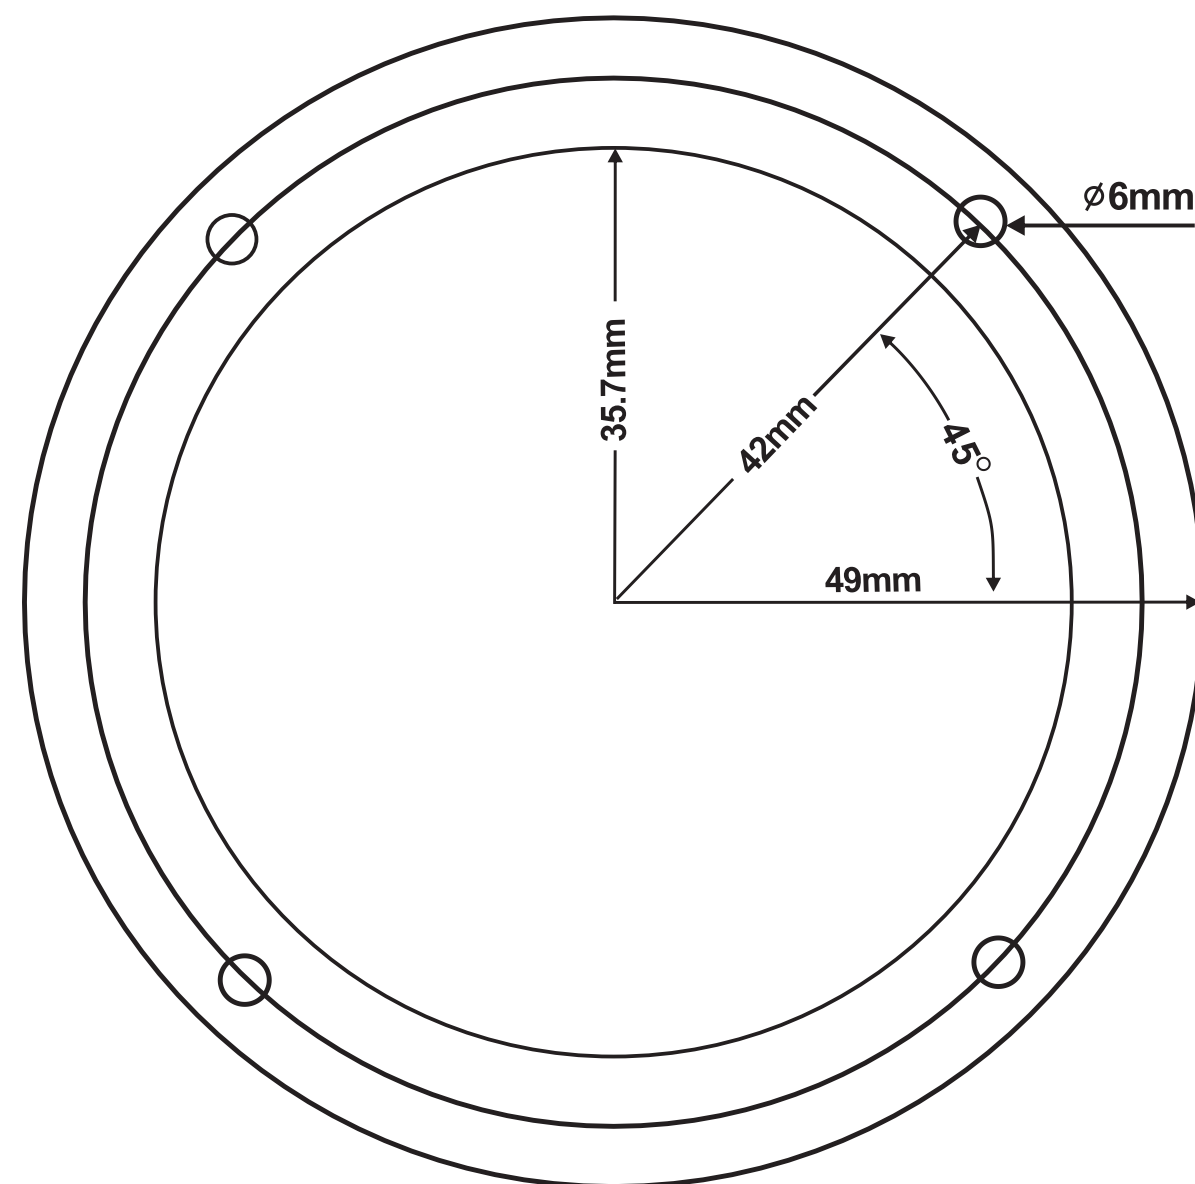


INSTALLATION INSTRUCTIONS FOR MIDRANGE OR TWEETER SPEAKERS

If you purchase a Crossover Network for your Woofer/Midrange/Tweeter system you do not need to connect condenser.

If your system does not include a Crossover Network, you must connect condenser as follows:

1. Connect either end of condenser to the positive terminal (+) of speaker.
2. Connect other end of condenser to the speaker wire harness, Be certain to connect to Positive side of harness, which is the radio out put (+) side.
3. It is recommended that you solder each connection for best results.
4. Secure condenser to speaker frame with glue.

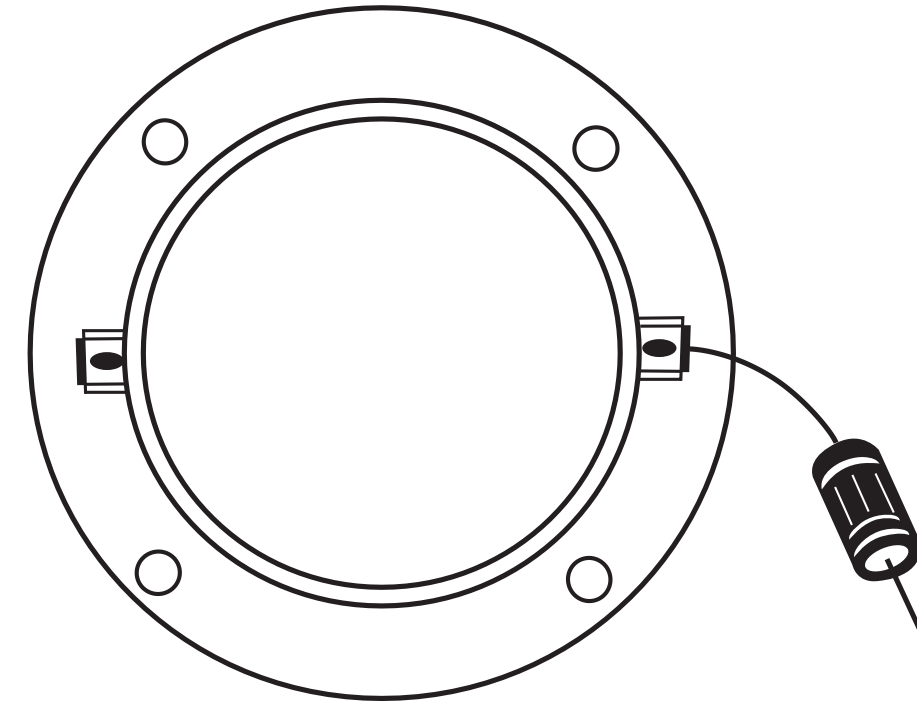

Looking for dependable car audio and electronics? Rely on Pyle for quality and long-lasting products.