


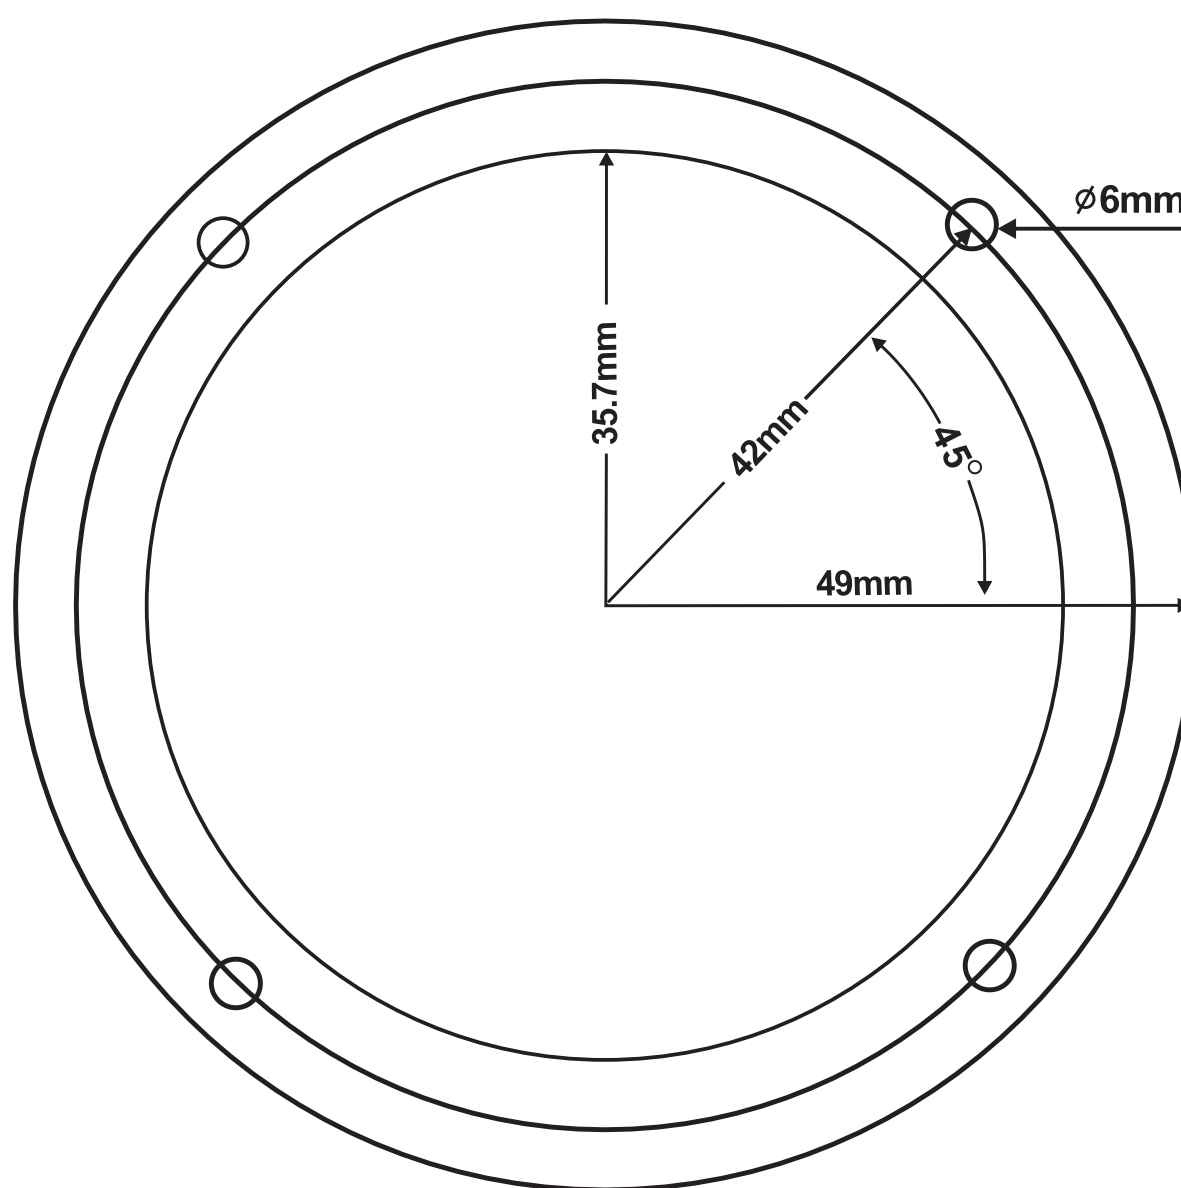

TEMPLATE



INSTALLATION INSTRUCTIONS FOR MIDRANGE OR TWEETER SPEAKERS

If you purchase a Crossover Network for your Woofer/Midrange/Tweeter system you do not need to connect condenser.

If your system does not include a Crossover Network, you must connect condenser as follows:

1. Connect either end of condenser to the positive terminal (+) of speaker.
2. Connect other end of condenser to the speaker wire harness, Be certain to connect to Positive side of harness, which is the radio out put (+) side.
3. It is recommended that you solder each connection for best results.
4. Secure condenser to speaker frame with glue.

