SFM60MS

SFM60MS: 2005-10 GT 304 Stainless Pype Bomb, 4" tip.


Thanks again for purchasing your new stainless steel Pypes Performance Exhaust 05-10 Ford Mustang Axle-back system. Please be sure to confirm all the components in the kit were received in your shipment before beginning installation. These kits include your new PYPE BOMB System w/ 4" polished stainless dual wall tips and a (2) band clamps. Installation of these kits will require a few simple tools: jack stands, 13mm & 15mm wrenches and penetrating oil.



- 1. Begin by placing the vehicle on a lift or four jack stands at maximum height. This will aid in an easier installation.
- 2. Unbolt the factory band clamps (15mm wrench) connecting your factory axle-back to your mid-pipes. Soaking your factory mounting points with penetrating oil will allow for easier removal. Next, remove all the bolts (13 mm wrench) connecting the factory hangers to the frame rails. Now, drop both sides out from under the car.
- 3. It's time to install your new axle-back muffler delete system. Begin by installing the two band clamps on to the muffler necks. Place the factory hanger in the right configuration on to the welded wire forms on the axle-backs. Slide the expanded necks on to the mid-pipes, and then bolt the hangers back on to the frame rails. Once all the hanger bolts are tight make sure the tip is adjusted properly in the bumper cut-out and now tighten the band clamps. Slide the 4" tips on to the end of the tailpipe with a band clamp, adjust to your liking and tighten. Be sure to check all the connection points periodically, as they may come loose.

<u>Note:</u> If you find the new tips are not aligned properly in the bumper cutouts, you may need to adjust your factory midpipes by loosening the two band clamps located where your factory h-pipe meets the mid-pipes. A slight rotation of the midpipes will allow for the best fit. Most years, the round alignment tab at the rear of your mid pipes will need to be ground off to allow the axle-back delete pipe to slide on far enough for proper tip alignment.

Now it's time to fire up that muscle car and enjoy your new Pypes Performance Exhaust.

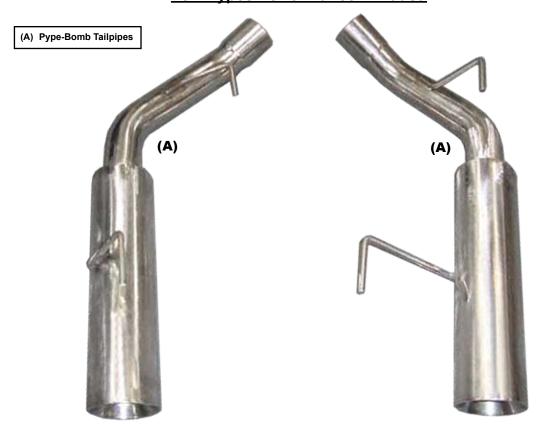

Shop for other performance exhaust systems on our website.