

## SMC10/ SMC11/ SMC12

[Stainless steel cat-back exhaust system](#)  
for 2005-08 300 / Charger / Magnum

**SMC10:** 2005-10 V8 300/Charger/Magnum 2.5" Cat-Back  
**SMC11:** 2005-10 V8 300/Charger/Magnum 3" Cat-Back  
**SMC12:** 2005-10 V6 300/Charger/Magnum 2.5" Cat-Back



1. Begin by placing the vehicle on a lift or four jack stands at maximum height. This will aid in an easier installation.

2. Unbolt your existing system starting from the factory catalytic converter downpipes. Once the original system is removed, V6 owners will need to install two rear hangers on the drivers side and also install new rubber insulators on the 4 additional hangers already mounted to the vehicle. Also the rear bumper cover must be trimmed using the template to allow the 4" tips to exit.

3. It's time to install your new Cat-back system. Begin by installing the two band clamps on to the after-cat x-pipe. V6 owners use part #HVC21 and V8 owners use part #HVC65. Snug the clamps but do not tighten yet.

4. Now install the two mufflers with band clamps, snug but do not tighten.


5. Next install the new four piece tailpipes into the rubber insulators. Notice that the pipes that connect to the mufflers have only one hanger and the rear pipes have two hangers. Remember to use a band clamp at the center joint.

6. Slide the tips on to the tailpipes with a band clamp and snug.

7. Finish by making all the final adjustments to the system and tips. Tight all clamps.

8. Check all the connection points periodically, as they may come loose.

**Now it's time to fire up that muscle car and enjoy your new Pypes Performance Exhaust.**

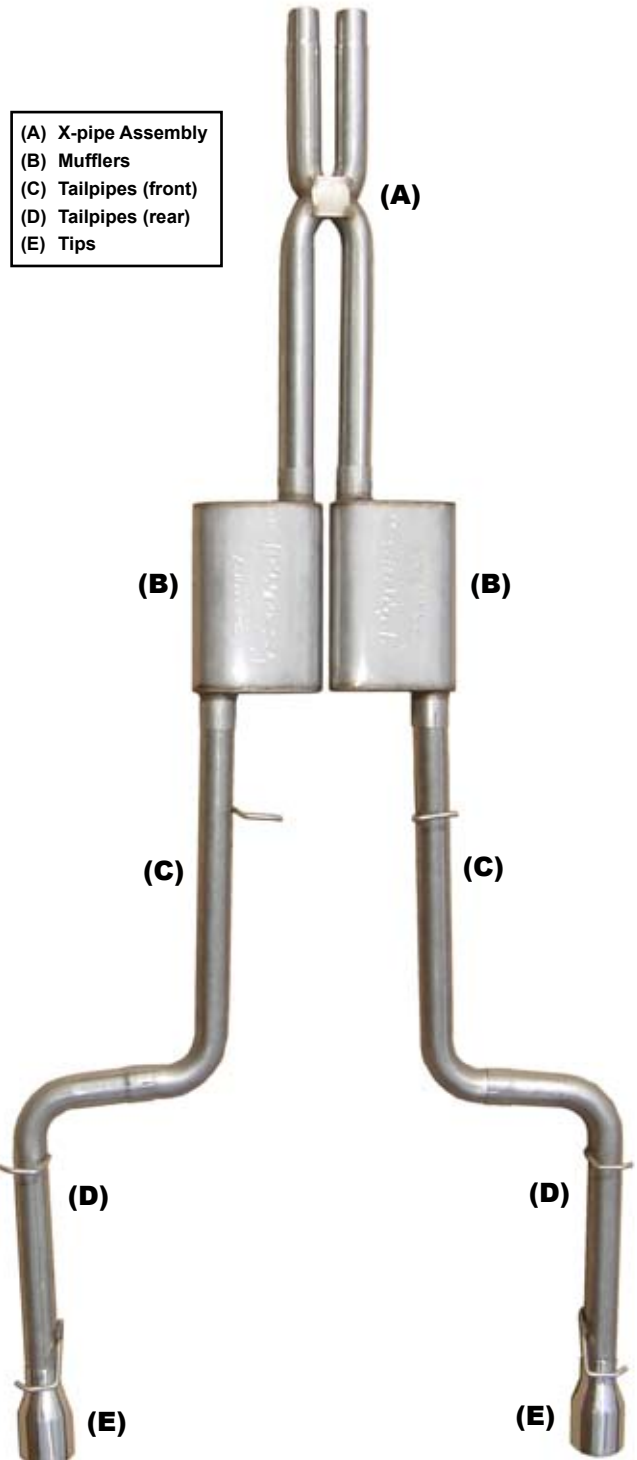

**Bumper Cutout Template  
V6 Dodge 2005-10  
Magnum  
Charger**

**For System:  
SMC12**

