


INSTALLATION INSTRUCTIONS FOR FULL SIZE PICK UP TRUCKS



TOOLS NEEDED:

- ISOPROPYL SOLUTION
- LINT FREE CLOTH
- MEASURING TAPE
- PAINTERS TAPE
- PENCIL

CAB LIGHTS ARE TYPICALLY INSTALLED IN ONE OF TWO PATTERNS:

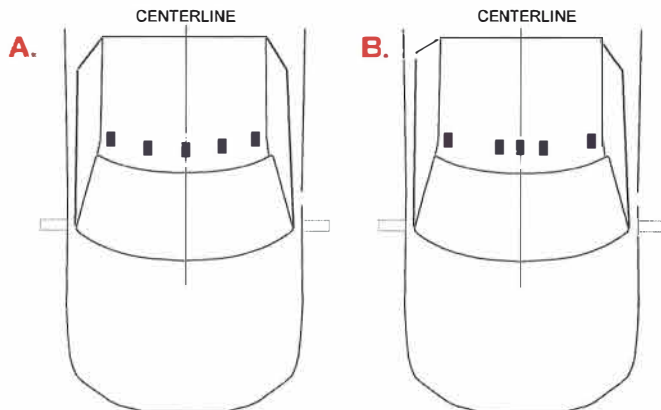

1 Clean Surface:

- Clean surface with Isopropyl. Ensure surface is totally clean from oil, grease, wax and clear of debris. Failure to verify this may result in lamps not sticking to cab surface and thus voiding the warranty.
- Ideal indoor/outdoor temperature for application is between 60F-90F
- Wait 24hrs before exposing to elements.

2 Measure & Mark: Use pencil and painters tape to mark desired lamp locations

- All lamps to be located approximately 4.5" from windshield.
- Position lamps where surface is clear of curvature and is flat.
- Use measuring tape to locate centerline of cab.
- Use measuring tape to locate outer lamps approximately 4.5 inches from rain gutter and 4.5" from windshield just like centerline mark.
- Decide on pattern A or B:

A. Measure and mark middle of centerline and outer lamps

B. Measure and mark to desired locations

3 Peel & Place:

- Peel paper off of adhesive and place where marked.
- Apply adequate pressure for maximum adhesion.
- Power device on