

2022+ Hyundai IONIQ 5 Installation Instructions

View instructions and photos online

<u>CARE AFTER INSTALLATION</u> Once installed, vehicle owner is responsible for condition of mud flaps and all costs associated with replacing damaged or lost parts. Warranty covers manufacturer defect on new, never installed parts.

Watch for blind spots when parking Avoid contact with curbs and objects that compress flaps with excessive force. Check wheel clearances, especially on vehicles equipped with aftermarket wheels and suspensions.

QUESTION ON INSTALLATION? CONTACT www.rallyarmor.com/support

NEED TO PURCHASE REPLACEMENT PARTS? SEND RECEIPT OR PHOTO OF MUD FLAPS TO www.rallyarmor.com/support

IMPORTANT NOTES INSTALLATION KIT CONTENTS QUANTITY **PART ITEM ID** SPACER .25SP 10 **SCREW 1.5SS ALWAYS USE** ALWAYS TEST COMPATIBILITY 4 CLIP **POLCLP CAUTION DURING** WITH YOUR SPECIFIC WHEEL, SMF29-2A FOAM SPACER 2 PARKING/REVERSAL TIRE AND SUSPENSION THICK FOAM SPACER SMF29-3 2 **SCENARIOS** COMBINATION WASHER **SMWASH** 16 LOCK NUT SSLNUT 6 BRACKET LEFT FRONT BMF87-LF 1 BMF87-RF **BRACKET RIGHT FRONT** 1 BRACKET LEFT REAR BMF87-LR **BRACKET RIGHT REAR** BMF87-RR .25SP SSLNUT SPACER LOCK NUT BMF87-IR 1.5SS SCREW BMF87-RR ALWAYS ALIGN YOUR MUD POLCLP CLEANING INSTRUCTIONS: BRACKET FLAP PERPENDICULAR TO CLIP USE WATER AND SOFT CLOTH GROUND PRIOR TO TIGHTENING TO CLEAN FLAPS. AVOID SOLVENT BASED CLEANERS SMF29-2A FOAM SPACER BMF87-RF BMF87-LF BRACKET BRACKET SMF29-3 THICK FOAM SPACER SMWASH WASHER

Recommended Tools Low-profile offset or ratcheting screw driver, 7/16th" wrench, flathead screwdriver. **Important Tips** Installation should be done on an even surface. Do not use power tools to tighten hardware. Hand tools only. Avoid overtightening.

RALLY ARMOR - A BIT ABOUT OUR STANDARD IN MUD FLAPS

Rally Armor mud flaps are fabricated from a high grade polyurethane plastic that is rigorously reviewed for quality and consistency. As with all manufacturing processes, controlled conditions and multiple QC checkpoints minimize major irregularities, however certain very minor surface layer marks appear periodically. These are visual variations that do not affect construction nor do they impede the performance of the flaps. Most matte away as the material ages naturally with continued exposure to the outdoors. Each flap is unique in appearance yet all are structurally sound.



2022+ Hyundai IONIQ 5 Installation Instructions

FRONT MUD FLAP

Bracket & Hardware 1 x Front Flap → 1 x BMF87-LF/RF; 2 x 1.5SS; 2 x POLCLP; 1 x SMF29-2A; 4 x SMWASH; 2 x SSLNUT


Turn the steering wheel towards the side you are working on to gain access to the inner wheel well area.

FIGURE A Remove factory fasteners. Pull liner away from fender.

FIGURE B Install POLCLP over upper and lower mounting points. Reinstall liner.

FIGURE C Affix SMF29-2A THIN FOAM SPACER behind low section of bracket. Slightly curve lower bracket back about 3mm to ensure foam contacts liner when installed. Repeat process as needed.



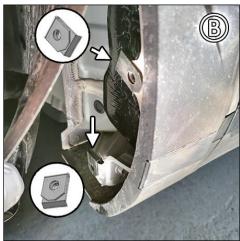


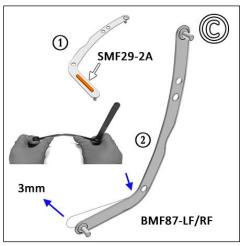


FIGURE D/E Position BMF87-LF/RF bracket behind mud flap. Place logo-side of mud flap facing rear of the vehicle against mounting points on liner and bracket. Use 1.5SS & SMWASH to fasten points 2 & 4. Use SSLNUT & SMWASH for mounting points 1 & 3. Ensure inner foam spacer contacts liner. Repeat Figure C as needed.

FIGURE F Ensure mud flap is parallel to even ground. Hand tighten only until washers seated against flap. Adjust as needed.





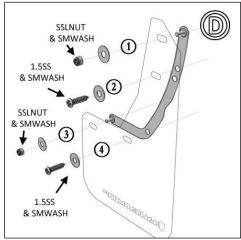



2022+ Hyundai IONIQ 5 Installation Instructions

REAR MUD FLAP

Bracket & Hardware 1 x Rear Flap→ 1 x BMF87-LR/RR; 3 x .25SP; 3 x 1.5SS; 1 x SMF29-3; 4 x SMWASH; 1 x SSLNUT

FIGURE G Remove factory liner fasteners 1 - 3.

FIGURE H Adhere SMF29-3 spacer to upper section of rear bracket BMF87-LR/RR.

FIGURE I Remove and retain lower fastener under bumper. Re-install BMF87-LR/RR bracket in mount 5.




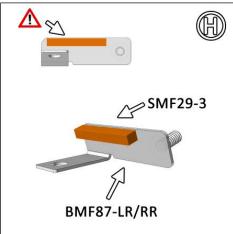




FIGURE J Place logo-side of mud flap facing rear of the vehicle against corresponding mounting points. Use 1.5SS & SMWASH to fasten points 1 - 3. Use SSLNUT and SMWASH for mount #4. Do not fully tighten.

FIGURE K Ensure mud flap clears fender liner.

FIGURE L Ensure mud flap is parallel to even ground. Hand tighten only until washers seated against flap. Adjust as needed.

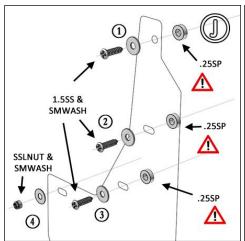





IMF87



2022+ Hyundai IONIQ 5 Installation Instructions

