

Installation Instructions

18-19 Jeep Wrangler JL
and Jeep Wrangler JL
Unlimited 4 Dr

IS-7690_RevA



Cowl Light Mount

For proper installation and best possible fit, please read all instructions BEFORE you begin.


Important Safety Information




- CAUTION - Before driving, ensure that the Cowl Light Mount and Lights are properly secured to vehicle.
- Periodically check all components for tightness.

Contents


NOTE: Actual product may vary from illustration.

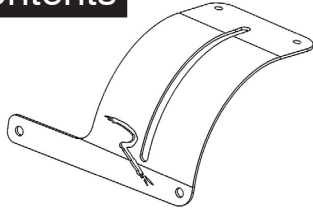


Right/Passenger Cowl
Light Mount (1)

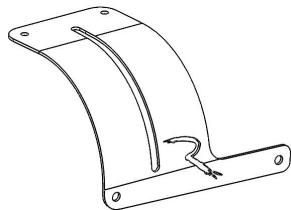


Left/Driver Cowl Light
Mount (1)




Large Spacer (4)



Small Spacer (4)

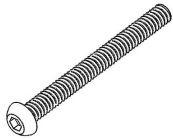

6mm x 55mm Allen
Head Bolt (4)



8mm x 35mm Allen
Head Bolt (4)



6mm Washer (4)



8mm Washer (4)



5mm Allen Wrench (1)



6mm Allen Wrench (1)


Tools Required



Socket
Wrench



Torx Sockets



Provided Allen
Wrenches (2)

NOTE

The Rampage Cowl Light Mount is designed to work with a wide range of lights. Some lights may need to be installed on the mount prior to the mount being installed on the vehicle. Review your parts and how they interact with each other prior to beginning installation.

Installation

1

Starting on the Left/Driver side, remove the (4) factory bolts holding the Cowl Panel to the vehicle.

See Figure 1

Figure 1



2

Place Large Spacers in top bolt recesses with foam side down.

See Figure 2

Figure 2



3

Locate Driver/Left Cowl Light Mount. Place (1) 8mm Allen Bolt with 8mm flat washer through rear side mounting hole.

Place (1) Small Spacer on bolt with foam side away from bracket.

Bolt assembly to the rear side mounting hole in the cowl.

See Figure 3

Figure 3



4

Place (1) 8mm Allen bolt with 8mm flat washer through from side mounting hole.

Place (1) Small Spacer on bolt with foam side away from bracket.

Line up bolt with appropriate hole in Cowl Panel and hand tighten bolt. Do not fully tighten at this time.

See Figure 4

Figure 4



5

Install 6mm Allen Bolts with 6mm flat washers at top mounting holes, through the Large Spacers and into the body. Leave hand tight.

See Figure 5

Figure 5




6

Adjust light mount and tighten all hardware.

See Figure 6

Figure 6

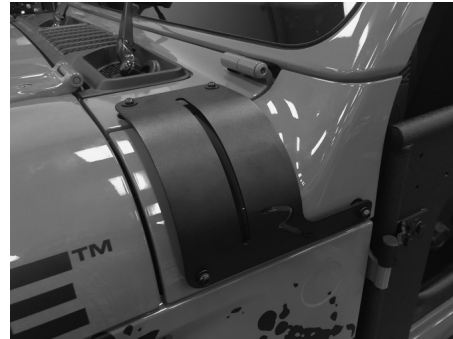

7

Install and adjust light in slot.

The slot allows for a wide range of light positions and configurations.

Multiple lights can be mounted or a Light can be mounted on top, then loosened and slid down to allow the windshield to fold down without complete removal of the light.

See Figure 7

Figure 7



8

Repeat steps 1 - 7 on Passenger/Right side.

Care and Cleaning

Rampage products are built to last; any automotive detergent you use to wash your vehicle is sufficient to clean the Cowl Light Mount. Do not use any harsh abrasive detergents.

Congratulations!

You have purchased one of the many quality Rampage branded products offered by Lund International. We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment. We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



Learn more about off-road lights we have.