

# Installation Instructions

07-18 Jeep Wrangler JK  
 Jeep Wrangler JL  
 Jeep Gladiator



## Off-Road Jack Mount


### Important Information




- The Rampage Off-Road Jack Mount can be used to properly secure a Rampage Off-Road Jack or any other “farm jack” to your vehicle.
- The Off-Road Jack Mount can be mounted on multiple applications, including:
  - JK Wrangler Tailgate Hinges (*does not fit with Mopar JK Tailgate Reinforcement Kit*)
  - JL Wrangler Tailgate Hinges with or without Mopar Tailgate Reinforcement Kit
  - Rampage Swing Away Bumper with Accessory Panel
  - Universal Mounting to any properly supported flat surface
- CAUTION - Before starting installation in any mounting location, line up main bracket to mounting position and check for potential clearance issues, including spare tire or height restrictions. **ALL Tailgate Mounted positions allow for a maximum of 35” tire. JL Wranglers require the use of a Spare Tire Extender Kit.**
- Before driving, ensure that the mount and Off-Road Jack are properly secured to vehicle.
- Periodically check all components for tightness.

### Contents

**NOTE:** Actual product may vary from illustration.

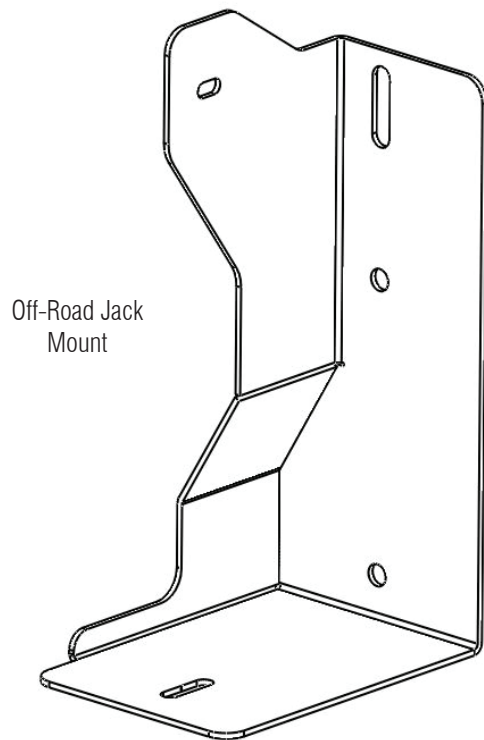

Off-Road Jack Mount

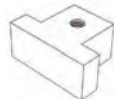

T-Block



Vertical Support Stud  
8mm x 70mm (1x)



Knob (Internal Threads)



Hitch Pin



Threaded Knob



Tailgate Stanchion (3x)



Support Bracket  
Tailgate Install Only



Hex Bolt  
8mm x 15mm (1x)



Hex Bolt  
8mm x 45mm (3x)



Hex Bolt  
10mm x 85mm (3x)



Hex Bolt  
12mm x 30mm (3x)



Flange Nut  
8mm (1x)



Flange Nut  
12mm (3x)



Flat Washer  
8mm (4x)



Flat Washer  
10mm (3x)



Flat Washer  
12mm (6x)

### Tools Required




Socket Wrench




Socket Set



Torx Socket Set  
(JL Wrangler only)

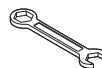

Wrench Set

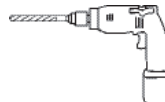

Drill  
(----- JK Wrangler only -----)



1-1/8" Hole Saw



1/8" Bit



Safety glasses

# Installation Steps - Tailgate

**NOTE:** Actual application may vary slightly from illustrations.

For JK Wrangler, start at **Steps 1**. Steps 1 - 2 are optional for aesthetic reasons. Skip to **Step 3** if you are not reusing the shrouds.

For JL Wrangler, skip to **Step 3**. Installation is the same both with and without the Mopar Reinforcement Kit.

For Rampage Swing Away Bumper Accessory Panel Installation skip to **Step 8**.

Universal mounting to a suitable flat surface is custom and not explained in this Instruction Manual

## 1 JK Wranglers Only

Remove the factory hinge shrouds from the tailgate hinges.

Grip top and bottom of hinge shroud at location of arrow, and pull in the same direction.

Repeat same actions to remove second shroud.



## 2 JK Wranglers Only

Using the templates provided on **Page 6**, locate and mark necessary drill points.

Drill pilot holes with 1/8" drill bit. Then use 1-1/8" Hole Saw to carefully cut holes.

Reinstall shrouds on hinges.




## 3 All Tailgate Installations use the same procedures from Step 3 forward.

Remove bottom left tailgate hinge bolt.

Using provided hardware and flat washer (8mm on JK and 10mm on JL), insert bolt through Support Bracket, through Tailgate Stanchion and into the tailgate.

Snug bolt but do not tighten fully.

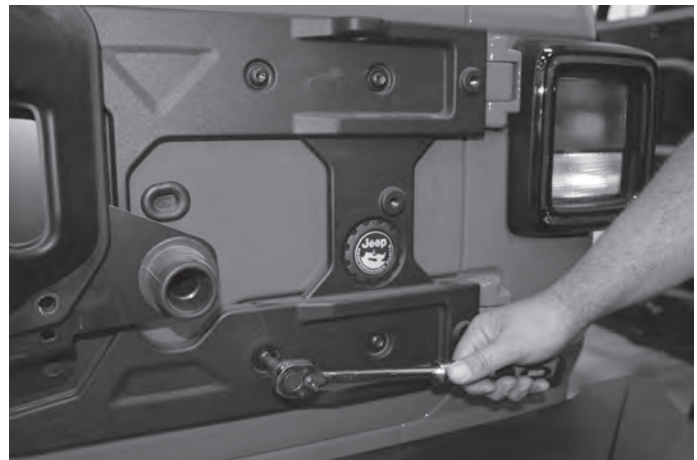


## Installation Steps - Tailgate

**NOTE:** Actual application may vary slightly from illustrations.

4

Rotate support bracket counter-clockwise to give access to right side hinge hardware.

Remove factory hardware on the right side of both the top and bottom hinges.

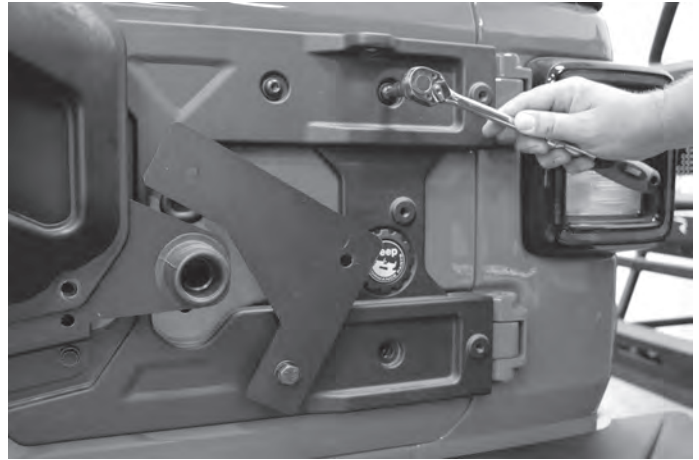

5

Rotate support bracket clockwise, lining up the bottom right hole with the corresponding mounting point in the tailgate and hinge.

Using provided hardware (8mm on JK and 10mm on JL), insert bolts with flat washers through Jack Mount, through Support Bracket, through Spacer and into the tailgate.

Snug hardware but do not tighten fully.



6


Bolt top hole of Support Bracket to Jack Mount using provided 8mm x 15mm bolt, flat washer and flange nut.



7

Tighten all hardware.

For Off-Road Jack Install, **Go To Step 10.**

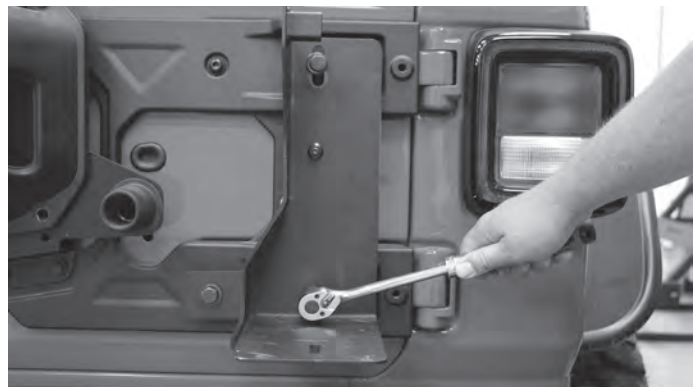

## Installation Steps - Accessory Panel

**NOTE:** Actual application may vary slightly from illustrations.


8

Using provided 12mm hardware, bolt the Off-Road Jack Mount to the Accessory Panel as shown.



9

Adjust Jack Mount so the base is level to the ground and tighten all hardware.

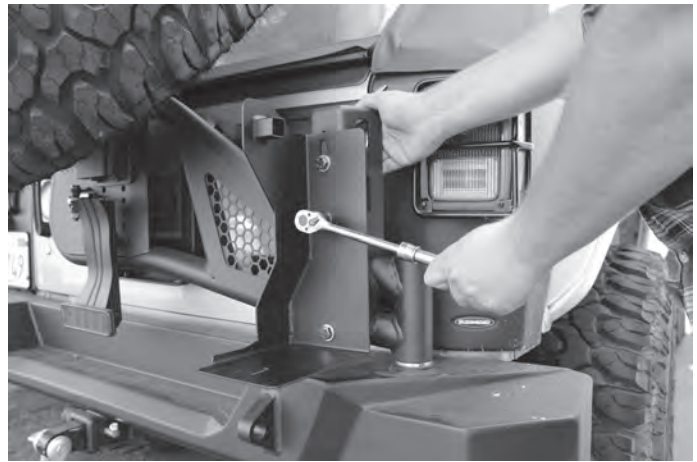

## 10 Off-Road Jack Installation

Carefully place Off-Road Jack on Mount Base.

Insert the provided Vertical Support Stud through the Upper attachment point and through the corresponding hole in the Jack. Make sure the flat edged of the Stud and recessed into the Jack Mount.

Using the provided internally threaded knob, snug the Jack to the mount.

Do not tighten completely.




11

Insert the provided T-Block into the base of the Jack as shown.

Thread the threaded knob from the bottom of the Jack Mount, up into the T-Block.

Do not tighten completely.

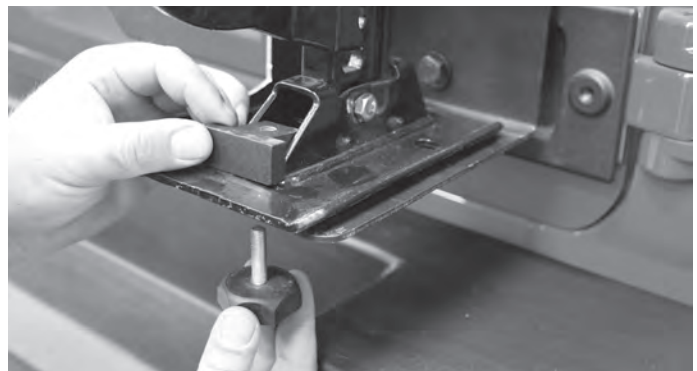

12

Adjust the Jack so it is settled against the mount and tighten all hardware.

Insert the Hitch Pin through the provided hole in the Vertical Support Stud.



## Care and Cleaning

- Rampage products are built to last; any detergent you use to wash your vehicle is sufficient to clean the bumper.
- Do not use any harsh abrasive detergents.

## Congratulations!

You have purchased one of the many quality Rampage® branded products offered by Lund International.

We take the utmost pride in our products and want you to enjoy years of satisfaction from your investment.

We have made every effort to ensure that your product is top quality in terms of fit, durability, finish and ease of installation.

A stylized graphic of a tire tread on the left side of the Rampage logo, with the word "RAMPAGE" in large, bold, black letters. The "R" is particularly large and has a dynamic, brush-stroke-like tail. Below "RAMPAGE" is the word "PRODUCTS" in smaller, bold, black letters.

**RAMPAGE®**  
**PRODUCTS**




The material that your product is made from can be recycled.  
Please also consider recycling the packaging that your product came in.



**LUND**  
INTERNATIONAL

# JK Wrangler Plastic Hinge Shroud Drill Pattern

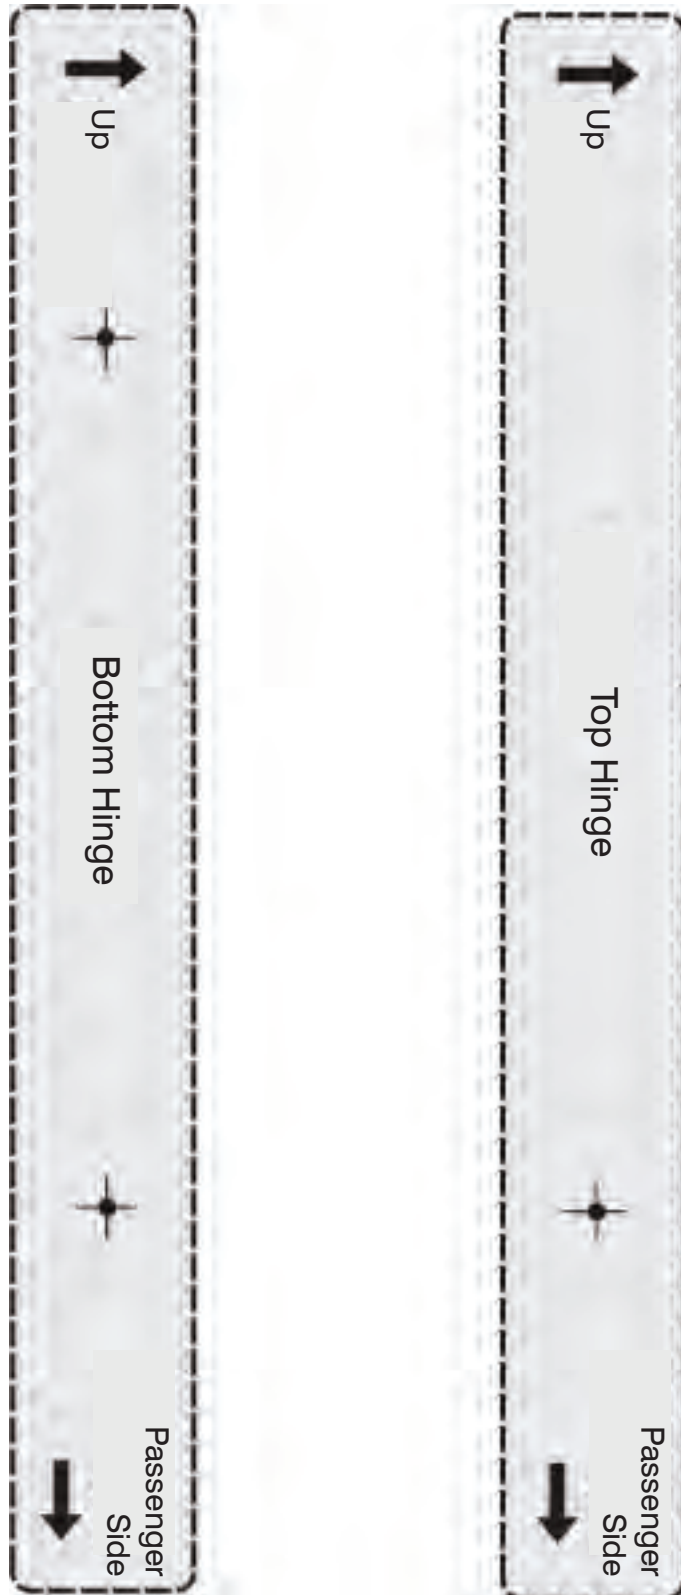

Cut out each pattern and place on the external side of the hinge shroud to locate and mark necessary drill points.

Drill holes with 1/8" drill bit. Then use 1-1/8" Hole Saw and carefully cut holes.

Learn more about spare tire covers and carriers we have.