



# Installation Instructions

## Combo Top, 07- Wrangler 2 door and Unlimited 4 door

Part numbers covered by these instructions: 948xx, 949xx

**PLEASE NOTE:** This combo top requires the use of the Rampage 901007 Windshield Channel for installation.

### **IMPORTANT NOTICE:**

Carefully read the instructions before attempting to install this product. Rampage Products is in no way responsible for any damage to the vehicle or personal injury that may occur during the installation or use of this product.

### **INCLUDED COMPONENTS**

- 1 - 2 piece Combo Top with Pre Installed straps
- 1 - Rear Portion Storage Bag

**NOTE** Unfold the Combo Top (except mesh version) and lay it in direct sunlight for at least 30 minutes. For best results the temperature should be over 70 degrees. If it is not you can still install the Combo Top but you will need to tighten the straps after use until it stretches smooth.

### Installation

1. Remove any hard or soft top currently on your Jeep. **Also remove the door surrounds for ease of installation.**
2. Install the Combo top onto the header channel using the snaps as shown in the illustration. (fig 1)
3. Place the header channel with the top installed above the windshield on the gasket and fold the combo top forward over the windshield.
4. Insert the tab of the header channel into the footman loop on the vehicles windshield frame as shown. (Fig. 2)

Fig 1

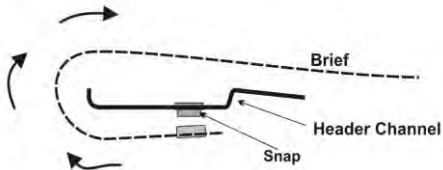


Fig 2



5. Place the metal bracket in place on under the header channel as shown. (fig 3).
6. Insert the threaded knob into the metal bracket and tighten. (fig 4) Repeat for other side.

Fig 3



Fig 4



7. Wrap the front side flaps under and around the sides of the roll bar (above the front seats) and back onto themselves and secure with the velcro strips. Fig 5, fig 6.

Fig 5



Fig 6



8. Now wrap the roll bar straps around the center roll bar as shown (fig 7). Locate the long straps with the plastic clips on the ends. These wrap under the roll bar and are inserted into the holes on the sound bar at "A" in figure 6. They should be pushed in until the catch inside the hole.
9. Now wrap the straps and flap around the sound bar in the center of the top (fig 7 "B") and tighten.

Fig 7



10. Hook the rear side rail straps to the belt rail of the vehicle on the sides as shown at "C" Fig 8.
11. Wrap the rear corner straps ("D" Fig 8) around the rear seat belt mounting points and tighten.
12. On 4 door vehicles only fasten the two straps around the rear of the roll bar.

**Note: on the 2 door the strap goes around the sides and stretches across the rear roll bar. It is important to be sure this is very tight to eliminate flapping at high speeds.**

Fig 8



13. Wrap the mid flap around the side of the roll bar as required. ("E")
14. At the front of the top just behind the windshield there is a thin velcro strap on each side. Wrap this around the front of the roll bar to keep the front section secured properly.
15. Be sure to repeat all operations for both sides.



**NOTE: The top will work with the door surrounds installed or not with either soft upper doors or full doors. It is not intended to be watertight - do not use in place of a full top in wet weather conditions.**