

# Installation Instructions

2018+ Jeep Wrangler JL



I-WBJL  
Part Number  
990037 & 990040

## Installation Steps

NOTE: Actual application may vary slightly from illustrations.


Hang the Windbreaker over the rear roll bar and strap down from the inside of the roll bar (not outside). Place the center straps around the roll bar and through the slit in the Windbreaker. Wrap the strap through the buckle and tighten. Then wrap the side straps around the side roll bars and tighten.

1



Hook both straps on the bottom of the Windbreaker to the floor hooks and tighten.

2

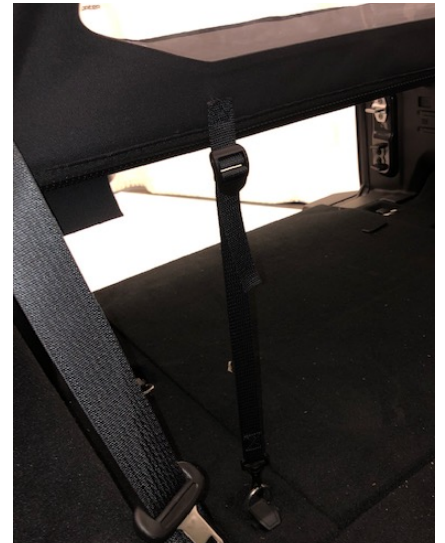

Hook the side straps underneath the tub lip and tighten.

3



If you have a Rampage Tonneau Cover, the Windbreaker can be zipped to it.

Adjust and tighten the Windbreaker so it is centered and snug.



4

## Care and Cleaning

- Wash only with mild soap & dry with a clean cloth.
- Do not use cleaning solvents of any kind.

## Congratulations!

Your new WindBreaker is installed! Now go enjoy the ride.

Thank you for purchasing one of the many quality Rampage® products offered by Lund International. We take the ultimate pride in our products and hope you receive years of satisfaction from your investment.

